


DS3578 WITH FIPS DIGITAL SCANNER

PRODUCT REFERENCE GUIDE

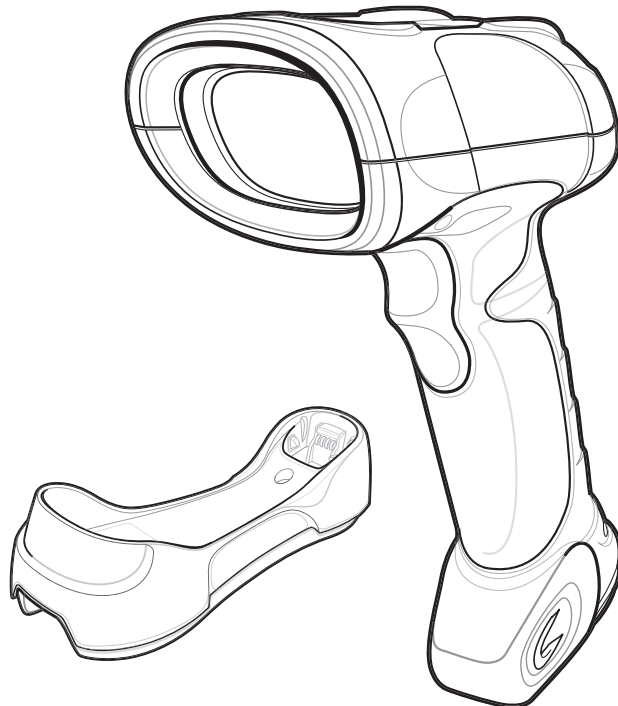

DS3578 WITH FIPS DIGITAL SCANNER PRODUCT REFERENCE GUIDE

72E-153466-09

Revision A

March 2017

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission in writing from Zebra. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an "as is" basis. All software, including firmware, furnished to the user is on a licensed basis. Zebra grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Zebra. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Zebra. The user agrees to maintain Zebra's copyright notice on the licensed programs delivered hereunder, and to include the same on any authorized copies it makes, in whole or in part. The user agrees not to decompile, disassemble, decode, or reverse engineer any licensed program delivered to the user or any portion thereof.

Zebra reserves the right to make changes to any software or product to improve reliability, function, or design.

Zebra does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any Zebra Technologies Corporation, intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in Zebra products.

Zebra and the Zebra head graphic are registered trademarks of ZIH Corp. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company. All other trademarks are the property of their respective owners.

This media, or Zebra Product, may include Zebra Software, Commercial Third Party Software, and Publicly Available Software.

The Zebra Software that may be included on this media, or included in the Zebra Product, is Copyright (c) by Zebra Technologies Corporation, and its use is subject to the licenses, terms and conditions of the agreement in force between the purchaser of the Zebra Product and Zebra Technologies Corporation.

The Commercial Third Party Software that may be included on this media, or included in the Zebra Product, is subject to the licenses, terms and conditions of the agreement in force between the purchaser of the Zebra Product and Zebra Technologies Corporation, unless a separate Commercial Third Party Software License is included, in which case, your use of the Commercial Third Party Software will then be governed by the separate Commercial Third Party License.

The Publicly Available Software that may be included on this media, or in the Zebra Product, is listed below. The use of the listed Publicly Available Software is subject to the licenses, terms and conditions of the agreement in force between the purchaser of the Zebra Product and Zebra Technologies Corporation, as well as, the terms and conditions of the license of each Publicly Available Software package. Copies of the licenses for the listed Publicly Available Software, as well as, all attributions, acknowledgements, and software information details, are included below. Zebra is required to reproduce the software licenses, acknowledgments and copyright notices as provided by the Authors and Owners, thus, all such information is provided in its native language form, without modification or translation.

The Publicly Available Software in the list below is limited to the Publicly Available Software included by Zebra. The Publicly Available Software included by Commercial Third Party Software or Products, that is used in the Zebra Product, are disclosed in the Commercial Third Party Licenses, or via the respective Commercial Third Party Publicly Available Software Legal Notices.

Publicly available software list:

Name: Regular Expression Evaluator
Version: 8.3
Description: Compiles and executes regular expressions
Software Site: <http://www.freebsd.org/cgi/cvsweb.cgi/src/lib/libc/regex/>
Source Code: No Source Distribution Obligations. Zebra will not provide nor distribute the Source Code for the Regular Expression Evaluator.
License: BSD Style License

© 1992 Henry Spencer.

© 1992, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Henry Spencer of the University of Toronto. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

This product includes software developed by the University of California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Zebra Technologies Corporation
Lincolnshire, IL U.S.A.
<http://www.zebra.com>.

Warranty

For the complete Zebra hardware product warranty statement, go to:
<http://www.zebra.com/warranty>.

Revision History

Changes to the original manual are listed below:

Change	Date	Description
-01 Rev A	7/2011	Initial release
-02 Rev A	2/2012	Add DS3578-ER configuration parameters: Trigger Mode, Torch Mode, Smart LED Mode, Focus Mode. Add DS3578-ER decode zones. Update Technical Specifications with DS3578-ER specifications.
-03 Rev A	3/2012	Add notes to indicate that the DS3578-ER and DS3578-DP do not support Multicode Mode, and that the DS3578-ER does not support imaging preferences.
-04 Rev A	5/2012	Update Trigger Mode parameter.
-05 Rev A	8/2014	<ul style="list-style-type: none"> - Update URLs. - Add claim that the DS3578 typically achieves 50,000 scans. - Add Apple iOS HID Feature and Android HID Feature. - Add Secure Simple Pairing IO Capability. - Add Connecting an iOS or Android Product With the Digital Scanner. - Change parameter hex values to attribute/decimal values. - Add Unsolicited Heartbeat Interval. - Add Dump Scanner Parameters. - For USB Device Type: <ul style="list-style-type: none"> - Change HID Keyboard Emulation to USB Keyboard (HID). - Change USB OPOS Hand-Held to IBM OPOS (IBM Hand-Held USB with Full Scan Disable) and added related note. - Add SSI over USB CDC and related note. - Update 123Scan2 chapter. - OCR chapter updates: <ul style="list-style-type: none"> - Add note to indicate that the DS3578-ER does not support OCR programming. - Add Require and Suppress. - Add OCR-B Variant Travel Document 2 or 3 line ID Cards auto-detect. - Add Multiple Templates section. - Add Inverse OCR parameter. - Add Codabar Upper or Lower Case Start/Stop Characters Transmission.
-06 Rev A	12/2014	Zebra Rebranding
-07 Rev B	3/2015	Zebra Rebranding
-08 Rev A	5/2016	Updates for the STB3574 Industrial Ethernet cradle.
-09 Rev A	3/2017	Removed OCR chapter; (no longer supported); bar code name change (GS1 DataBar-14 to GS1 DataBar Omnidirectional).

TABLE OF CONTENTS

Warranty	iii
Revision History	iv

About This Guide

Introduction	xv
Configurations	xv
Chapter Descriptions	xv
Notational Conventions	xvi
Related Documents	xvii
Service Information	xviii

Chapter 1: Getting Started

Introduction	1-1
Interfaces	1-2
Unpacking the Scanner	1-2
The Cradle	1-2
Cradle Parts	1-4
Connecting the Cradle	1-5
Supplying Power to the Cradle	1-6
Mounting the Cradle	1-6
Inserting the Battery	1-7
Removing the Battery	1-7
Charging the Scanner Battery in the Cradle	1-8
Scanner Charging LED	1-8
Inserting the Scanner in the Cradle	1-8
Sending Data to the Host Computer	1-9
Pairing	1-9
Lost Connection to Host	1-10
Configuring the Scanner	1-10
Radio Communications	1-10
Ethernet Communications	1-10

Chapter 2: Scanning

Introduction	2-1
Beeper Definitions	2-1
LED Definitions	2-4
Scanning	2-5
Aiming	2-6
Decode Ranges	2-8
DS3578-SR/HD/DP Decode Ranges	2-8
DS3578-ER Decode Ranges	2-9

Chapter 3: Maintenance and Technical Specifications

Introduction	3-1
Maintenance	3-1
Battery Maintenance	3-1
Troubleshooting	3-2
Technical Specifications	3-5
Scanner Signal Descriptions	3-8

Chapter 4: Radio Communications

Introduction	4-1
Scanning Sequence Examples	4-1
Errors While Scanning	4-1
Radio Communications Parameter Defaults	4-2
Wireless Beeper Definitions	4-3
Radio Communications Host Types	4-4
Bluetooth Technology Profile Support	4-6
Master/Slave Set Up	4-6
Bluetooth Friendly Name	4-7
Discoverable Mode	4-7
HID Host Parameters	4-8
Apple iOS HID Feature	4-8
Android HID Feature	4-8
HID Country Keyboard Types (Country Codes)	4-9
HID Keyboard Keystroke Delay	4-11
HID CAPS Lock Override	4-11
HID Ignore Unknown Characters	4-12
Emulate Keypad	4-12
HID Keyboard FN1 Substitution	4-13
HID Function Key Mapping	4-13
Simulated Caps Lock	4-14
Convert Case	4-14
Auto-reconnect Feature	4-15
Reconnect Attempt Beep Feedback	4-15
Reconnect Attempt Interval	4-16
Auto-reconnect in Bluetooth Keyboard Emulation (HID Slave) Mode	4-17
Out of Range Indicator	4-18
Scanner(s) to Cradle Support	4-19
Modes of Operation	4-19
Parameter Broadcast (Cradle Host Only)	4-20

Pairing	4-20
Pairing Bar Code Format	4-23
FIPS Mode	4-24
Bluetooth Security	4-28
Authentication	4-28
PIN Code	4-29
Encryption	4-30
Secure Simple Pairing IO Capability (SPP Server and SPP Master Host Mode Only)	4-31
Connecting an iOS or Android Product With the Digital Scanner	4-32

Chapter 5: User Preferences

Introduction	5-1
Scanning Sequence Examples	5-2
Errors While Scanning	5-2
User Preferences/Miscellaneous Option Parameter Defaults	5-2
User Preferences	5-4
Default Parameters	5-4
Parameter Bar Code Scanning	5-5
Beep After Good Decode	5-5
Suppress Power Up Beeps	5-6
Beeper Tone	5-7
Beeper Volume	5-8
Beeper Duration	5-9
Beep on Insertion	5-9
Decode Pager Motor	5-10
Decode Pager Motor Duration	5-10
Trigger Mode	5-12
Batch Mode	5-13
Time Delay to Reduced Power Mode	5-15
Timeout to Low Power Mode from Auto Aim	5-17
Picklist Mode	5-18
DPM Scanning	5-19
Mobile Phone/Display Mode	5-20
PDF Prioritization	5-21
PDF Prioritization Timeout	5-21
Continuous Bar Code Read	5-22
Unique Bar Code Reporting	5-22
Decode Session Timeout	5-23
Timeout Between Decodes, Same Symbol	5-23
Fuzzy 1D Processing	5-24
Decode Mirror Images (Data Matrix Only)	5-25
Decode Aiming Pattern	5-26
Decoding Illumination	5-27
Torch Mode (DS3578-ER Only)	5-28
Smart LED Mode (DS3578-ER Only)	5-29
Focus Mode	5-30
Multicode Mode (DS3578-SR / DS3578-HD)	5-31
Multicode Expression (DS3578-SR / DS3578-HD)	5-32

Multicode Mode Concatenation (DS3578-SR / DS3578-HD)	5-37
Multicode Concatenation Symbology (DS3578-SR / DS3578-HD)	5-38
Multicode Troubleshooting	5-39
Miscellaneous Scanner Parameters	5-41
Transmit Code ID Character	5-41
Prefix/Suffix Values	5-42
Scan Data Transmission Format	5-42
FN1 Substitution Values	5-44
Transmit “No Read” Message	5-45
Unsolicited Heartbeat Interval	5-46
Dump Scanner Parameters	5-47
UID Parsing	5-48

Chapter 6: Imaging Preferences

Introduction	6-1
Scanning Sequence Examples	6-2
Errors While Scanning	6-2
Imaging Preferences Parameter Defaults	6-2
Imaging Preferences	6-4
Operational Modes	6-4
Image Capture Illumination	6-5
Gain/Exposure Priority for Snapshot Mode	6-6
Snapshot Mode Timeout	6-7
Snapshot Aiming Pattern	6-7
Image Cropping	6-8
Crop to Pixel Addresses	6-9
Image Size (Number of Pixels)	6-10
Image Brightness (Target White)	6-11
JPEG Image Options	6-11
JPEG Target File Size	6-12
JPEG Quality Value	6-12
Image Enhancement	6-13
Image File Format Selector	6-14
Image Rotation	6-15
Bits Per Pixel	6-16
Signature Capture	6-17
Signature Capture File Format Selector	6-18
Signature Capture Bits Per Pixel	6-19
Signature Capture Width	6-20
Signature Capture Height	6-20
Signature Capture JPEG Quality	6-20

Chapter 7: Ethernet Interface

Introduction	7-1
--------------------	-----

Chapter 8: Keyboard Wedge Interface

Introduction	8-1
Connecting a Keyboard Wedge Interface	8-2

Keyboard Wedge Default Parameters	8-3
Keyboard Wedge Host Parameters	8-4
Keyboard Wedge Host Types	8-4
Keyboard Wedge Country Types (Country Codes)	8-5
Ignore Unknown Characters	8-7
Keystroke Delay	8-7
Intra-Keystroke Delay	8-8
Alternate Numeric Keypad Emulation	8-8
Caps Lock On	8-9
Caps Lock Override	8-9
Convert Wedge Data	8-10
Function Key Mapping	8-10
FN1 Substitution	8-11
Send Make and Break	8-11
Keyboard Maps	8-12
ASCII Character Set	8-13

Chapter 9: RS-232 Interface

Introduction	9-1
Connecting an RS-232 Interface	9-2
RS-232 Default Parameters	9-3
RS-232 Host Parameters	9-4
RS-232 Host Types	9-6
Baud Rate	9-7
Parity	9-8
Check Receive Errors	9-8
Stop Bit Select	9-9
Data Bits	9-9
Hardware Handshaking	9-10
Software Handshaking	9-12
Host Serial Response Time-out	9-14
RTS Line State	9-15
Beep on <BEL>	9-15
Intercharacter Delay	9-16
Nixdorf Mode A/B and OPOS/JPOS Beep/LED Options	9-17
Ignore Unknown Characters	9-18
RS-232 ASCII Character Set	9-18

Chapter 10: USB Interface

Introduction	10-1
Connecting a USB Interface	10-2
USB Default Parameters	10-4
USB Host Parameters	10-5
USB Device Type	10-5
USB Country Keyboard Types (Country Codes)	10-7
Symbol Native API (SNAPI) Status Handshaking	10-9

USB Keystroke Delay	10-9
USB Caps Lock Override	10-10
USB Ignore Unknown Characters	10-10
Emulate Keypad	10-11
Emulate Keypad with Leading Zero	10-11
Quick Keypad Emulation	10-12
USB Keyboard FN 1 Substitution	10-12
Function Key Mapping	10-13
Simulated Caps Lock	10-13
Convert Case	10-14
USB Static CDC	10-14
USB Polling Interval	10-15
Optional USB Parameters	10-17
Ignore Beep	10-17
Ignore Bar Code Configuration	10-17
USB ASCII Character Set	10-18

Chapter 11: IBM 468X/469X Interface

Introduction	11-1
Connecting to an IBM 468X/469X Host	11-2
IBM Default Parameters	11-3
IBM 468X/469X Host Parameters	11-4
Port Address	11-4
Convert Unknown to Code 39	11-4
Optional IBM Parameters	11-5
Ignore Beep	11-5
Ignore Bar Code Configuration	11-5

Chapter 12: Symbologies

Introduction	12-1
Scanning Sequence Examples	12-1
Errors While Scanning	12-2
Symbology Parameter Defaults	12-2
UPC/EAN	12-7
Enable/Disable UPC-A	12-7
Enable/Disable UPC-E	12-7
Enable/Disable UPC-E1	12-8
Enable/Disable EAN-8/JAN-8	12-8
Enable/Disable EAN-13/JAN-13	12-9
Enable/Disable Bookland EAN	12-9
Decode UPC/EAN/JAN Supplementals	12-10
User-Programmable Supplementals	12-13
UPC/EAN/JAN Supplemental Redundancy	12-14
UPC/EAN/JAN Supplemental AIM ID Format	12-15
Transmit UPC-A Check Digit	12-16
Transmit UPC-E Check Digit	12-16
Transmit UPC-E1 Check Digit	12-17
UPC-A Preamble	12-17

UPC-E Preamble	12-18
UPC-E1 Preamble	12-19
Convert UPC-E to UPC-A	12-20
Convert UPC-E1 to UPC-A	12-20
EAN-8/JAN-8 Extend	12-21
Bookland ISBN Format	12-21
UCC Coupon Extended Code	12-22
Coupon Report	12-23
ISSN EAN	12-24
Code 128	12-25
Enable/Disable Code 128	12-25
Set Lengths for Code 128	12-25
Enable/Disable GS1-128 (formerly UCC/EAN-128)	12-27
Enable/Disable ISBT 128	12-27
ISBT Concatenation	12-28
Check ISBT Table	12-29
ISBT Concatenation Redundancy	12-29
Code 39	12-30
Enable/Disable Code 39	12-30
Enable/Disable Trioptic Code 39	12-30
Convert Code 39 to Code 32	12-31
Code 32 Prefix	12-31
Set Lengths for Code 39	12-32
Code 39 Check Digit Verification	12-34
Transmit Code 39 Check Digit	12-34
Code 39 Full ASCII Conversion	12-35
Code 93	12-36
Enable/Disable Code 93	12-36
Set Lengths for Code 93	12-36
Code 11	12-38
Code 11	12-38
Set Lengths for Code 11	12-38
Code 11 Check Digit Verification	12-40
Transmit Code 11 Check Digits	12-40
Interleaved 2 of 5 (ITF)	12-41
Enable/Disable Interleaved 2 of 5	12-41
Set Lengths for Interleaved 2 of 5	12-41
I 2 of 5 Check Digit Verification	12-43
Transmit I 2 of 5 Check Digit	12-43
Convert I 2 of 5 to EAN-13	12-44
Discrete 2 of 5 (DTF)	12-45
Enable/Disable Discrete 2 of 5	12-45
Set Lengths for Discrete 2 of 5	12-45
Codabar (NW - 7)	12-47
Enable/Disable Codabar	12-47
Set Lengths for Codabar	12-47
CLSI Editing	12-49
NOTIS Editing	12-49
Codabar Upper or Lower Case Start/Stop Characters Transmission	12-50

MSI	12-51
Enable/Disable MSI	12-51
Set Lengths for MSI	12-51
MSI Check Digits	12-53
Transmit MSI Check Digit(s)	12-53
MSI Check Digit Algorithm	12-54
Chinese 2 of 5	12-55
Enable/Disable Chinese 2 of 5	12-55
Matrix 2 of 5	12-55
Enable/Disable Matrix 2 of 5	12-55
Set Lengths for Matrix 2 of 5	12-56
Matrix 2 of 5 Check Digit	12-57
Transmit Matrix 2 of 5 Check Digit	12-57
Korean 3 of 5	12-58
Enable/Disable Korean 3 of 5	12-58
Inverse 1D	12-59
Postal Codes	12-60
US Postnet	12-60
US Planet	12-60
Transmit US Postal Check Digit	12-61
UK Postal	12-61
Transmit UK Postal Check Digit	12-62
Japan Postal	12-62
Australia Post	12-63
Netherlands KIX Code	12-63
USPS 4CB/One Code/Intelligent Mail	12-64
UPU FICS Postal	12-64
GS1 DataBar	12-65
GS1 DataBar Omnidirectional (formerly GS1 DataBar-14)	12-65
GS1 DataBar Limited	12-65
GS1 DataBar Limited Security Level	12-66
GS1 DataBar Expanded	12-67
Convert GS1 DataBar to UPC/EAN	12-67
Composite	12-68
Composite CC-C	12-68
Composite CC-A/B	12-68
Composite TLC-39	12-69
UPC Composite Mode	12-69
Composite Beep Mode	12-70
GS1-128 Emulation Mode for UCC/EAN Composite Codes	12-70
2D Symbolologies	12-71
Enable/Disable PDF417	12-71
Enable/Disable MicroPDF417	12-71
Code 128 Emulation	12-72
Data Matrix	12-73
Data Matrix Inverse	12-73
Maxicode	12-74
QR Code	12-74

QR Inverse	12-75
MicroQR	12-75
Aztec	12-76
Aztec Inverse	12-76
Redundancy Level	12-77
Redundancy Level 1	12-77
Redundancy Level 2	12-77
Redundancy Level 3	12-77
Redundancy Level 4	12-78
Security Level	12-79
Intercharacter Gap Size	12-80
Report Version	12-80
Macro PDF Features	12-81
Flush Macro Buffer	12-81
Abort Macro PDF Entry	12-81

Chapter 13: 123Scan2

Introduction	13-1
Communication with 123Scan2	13-1
123Scan2 Requirements	13-2
Scanner SDK, Other Software Tools, and Videos	13-2

Chapter 14: Advanced Data Formatting

Introduction	14-1
--------------------	------

Appendix A: Standard Default Parameters

Appendix B: Programming Reference

Symbol Code Identifiers	B-1
AIM Code Identifiers	B-3

Appendix C: Sample Bar Codes

UPC-A	C-1
UPC-E	C-1
UPC-E1	C-2
EAN-13	C-2
EAN-8	C-2
Code 39	C-2
Trioptic Code 39	C-3
Code 93	C-3
Code 11	C-3
Code 128	C-4
Codabar	C-4
MSI	C-4
Interleaved 2 of 5	C-4

PDF417	C-5
Data Matrix	C-5
Maxicode	C-5
QR Code	C-6
US Postnet	C-6
UK Postal	C-6

Appendix D: Numeric Bar Codes

Numeric Bar Codes	D-1
Cancel	D-3

Appendix E: Alphanumeric Bar Codes

Alphanumeric Keyboard	E-1
-----------------------------	-----

Appendix F: ASCII Character Sets

Appendix G: Signature Capture Code

Introduction	G-1
Code Structure	G-1
Signature Capture Area	G-1
CapCode Pattern Structure	G-2
Start / Stop Patterns	G-2
Dimensions	G-3
Data Format	G-3
Additional Capabilities	G-4
Signature Boxes	G-4

Index

ABOUT THIS GUIDE

Introduction

The *DS3578 with FIPS Product Reference Guide* provides general instructions for setting up, operating, maintaining, and troubleshooting the digital scanner.

Configurations

DS3578-SR2F005WR - DS3578 digital scanner, standard focus, FIPS, twilight black/yellow

DS3578-HD2F005WR - DS3578 digital scanner, high density focus, FIPS, twilight black/yellow

DS3578-DP2F005WR - DS3578 digital scanner, high density focus with DPM software, FIPS, twilight black/yellow

DS3578-ER2F005WR - DS3578 digital scanner, extended range, FIPS, twilight black/yellow

Chapter Descriptions

Topics covered in this guide are as follows:

- [Chapter 1, Getting Started](#) provides a product overview and unpacking instructions.
- [Chapter 2, Scanning](#) describes parts of the digital scanner, beeper and LED definitions, and how to use the digital scanner.
- [Chapter 3, Maintenance and Technical Specifications](#) provides information on how to care for the digital scanner, troubleshooting, and technical specifications.
- [Chapter 4, Radio Communications](#) provides information about the modes of operation and features available for wireless communication between scanners, cradles and hosts, and also includes the parameters necessary to configure the digital scanner.
- [Chapter 5, User Preferences](#) describes each user preference feature and provides the programming bar codes for selecting these features for the digital scanner. It also includes commonly used bar codes to customize how data is transmitted to the host device.
- [Chapter 6, Imaging Preferences](#) provide imaging preference features and programming bar codes for selecting these items. Note that the DS3578-ER does not support these features.

- [Chapter 7, Ethernet Interface](#) provides a reference to the *STB3574 Industrial Ethernet Cradle Developer Guide*, p/n MN-002694-01.
- [Chapter 8, Keyboard Wedge Interface](#) provides information for setting up the digital scanner for keyboard wedge operation.
- [Chapter 9, RS-232 Interface](#) provides information for setting up the digital scanner for RS-232 operation.
- [Chapter 10, USB Interface](#) provides information for setting up the digital scanner for USB operation.
- [Chapter 11, IBM 468X/469X Interface](#) provides information for setting up the digital scanner with IBM 468X/469X POS systems.
- [Chapter 12, Symbologies](#) describes all symbology features and provides the programming bar codes for selecting these features.
- [Chapter 13, 123Scan2](#) provides information on the PC-based digital scanner configuration tool 123Scan².
- [Chapter 14, Advanced Data Formatting](#) briefly describes ADF, a means of customizing data before transmission to the host device, and includes a reference to the *ADF Programmer Guide*.
- [Appendix A, Standard Default Parameters](#) provides a table of all host devices and miscellaneous digital scanner defaults.
- [Appendix B, Programming Reference](#) provides a table of AIM code identifiers, ASCII character conversions, and keyboard maps.
- [Appendix C, Sample Bar Codes](#) includes sample bar codes.
- [Appendix E, Alphanumeric Bar Codes](#) includes the alphanumeric bar codes to scan for parameters requiring alphanumeric values.
- [Appendix D, Numeric Bar Codes](#) includes the numeric bar codes to scan for parameters requiring specific numeric values.
- [Appendix F, ASCII Character Sets](#) provides ASCII character value tables.
- [Appendix G, Signature Capture Code](#) provides information on CapCode, a signature capture code that encloses a signature area on a document and allows a digital scanner to capture a signature.

Notational Conventions

The following conventions are used in this document:

- *Italics* are used to highlight the following:
 - Chapters and sections in this and related documents
- **Bold** text is used to highlight the following:
 - Key names on a keypad
 - Button names on a screen or window.
- bullets (•) indicate:
 - Action items
 - Lists of alternatives
 - Lists of required steps that are not necessarily sequential
- Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

- Throughout the programming bar code menus, asterisks (*) are used to denote default parameter settings.



* Indicates Default ——— * **Baud Rate 9600** ——— Feature/Option



NOTE This symbol indicates something of special interest or importance to the reader. Failure to read the note will not result in physical harm to the reader, equipment or data.



CAUTION This symbol indicates that if this information is ignored, the possibility of data or material damage may occur.



WARNING! This symbol indicates that if this information is ignored the possibility that serious personal injury may occur.

Related Documents

- *DS3578 With FIPS Quick Start Guide* (p/n 72-151247 -xx) provides general information to help the user get started with the digital scanner, including basic setup and operation instructions.
- *STB3578 Cradle with FIPS/STB3574 Industrial Ethernet Cradle Quick Reference Guide* (p/n 72-150220-xx) provides information on installing and operating STB3508/3578/STB3574 cradles.
- *FLB3508/3578 with FIPS Cradle Quick Reference Guide* (p/n 72-150221-xx) provides information on installing and operating FLB3508/3578 cradles.
- *Advanced Data Formatting Programmer Guide* (p/n 72E-69680-xx) provides information on ADF, a means of customizing data before transmission to the host device.
- *STB3574 Industrial Ethernet Cradle Developer Guide* (p/n MN-002694-xx) provides development, configuration and interface information for the STB3574 Industrial Ethernet scanner cradle.

For the latest version of this guide and all guides, go to: <http://www.zebra.com/support>.

Service Information

If you have a problem using the equipment, contact your facility's technical or systems support. If there is a problem with the equipment, they will contact the Zebra Global Customer Support Center at: <http://www.zebra.com/support>.

When contacting Zebra support, please have the following information available:

- Serial number of the unit
- Model number or product name
- Software type and version number

Zebra responds to calls by e-mail, telephone or fax within the time limits set forth in service agreements.

If your problem cannot be solved by Zebra Support, you may need to return your equipment for servicing and will be given specific directions. Zebra is not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty.

If you purchased your product from a Zebra business partner, please contact that business partner for support.

CHAPTER 1 GETTING STARTED

Introduction

The DS3578 digital scanner combines excellent 1D and 2D omnidirectional bar code scanning performance and advanced ergonomics in a lightweight design. The digital scanner ensures comfort and ease of use for extended periods of time.

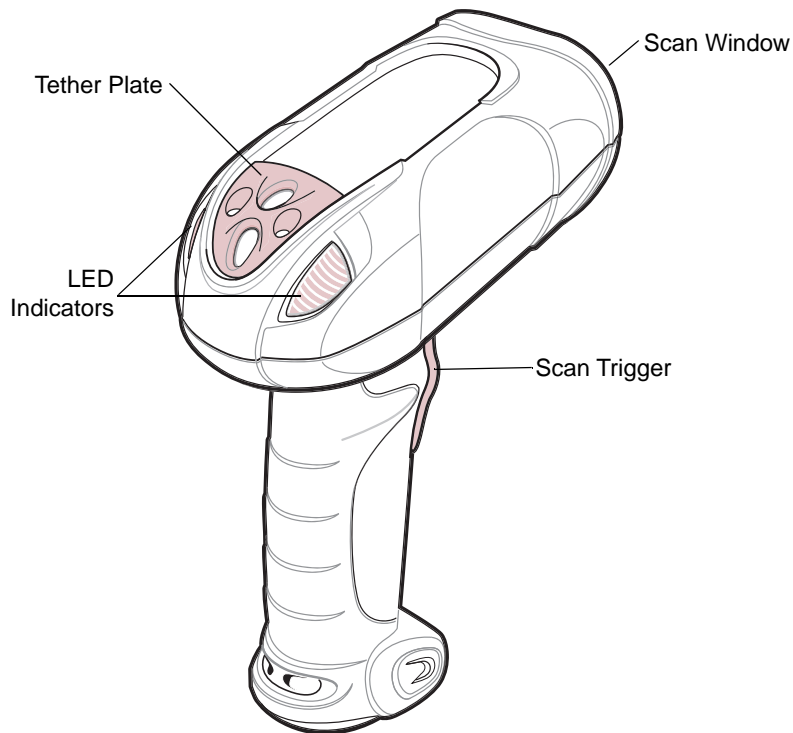


Figure 1-1 DS3578 Scanner

Interfaces

This digital scanner supports the host interfaces listed below through communication with a cradle.

- Standard RS-232 connection to a host.
- Keyboard wedge connection to a host, where scanned data is interpreted as keystrokes. The following international keyboards are supported (for Windows™ environment): North American, German, French, French Canadian, Spanish, Italian, Swedish, UK English, Japanese, and Brazilian-Portuguese.
- IBM® 468X/469X hosts.
- USB connection to a host. The digital scanner autodetects a USB host and defaults to the HID keyboard interface type. Select other USB interface types by scanning programming bar codes. The following international keyboards are supported (for Windows™ environment): North America, German, French, French Canadian, Spanish, Italian, Swedish, UK English, Japanese, and Brazilian-Portuguese.
- STB3574 only:
 - 100M Ethernet connection to the network for use with the Zebra Industrial Ethernet Software and Industrial Ethernet Protocols (EtherNet/IP, PROFINET, or Modbus TCP).
- Configuration via 123Scan².

Unpacking the Scanner

Remove the digital scanner from its packing and inspect it for damage. If the digital scanner was damaged in transit, contact Zebra Support. See [page xviii](#) for contact information. **KEEP THE PACKING.** It is the approved shipping container and should be used if the equipment ever needs to be returned for servicing.

The Cradle

The cradles serve as a charger and radio communication interface for the DS3578 cordless digital scanner. Some models also provide a host communication interface. There are five versions of the cradle:

- The STB3508 cordless cradle sits on a desktop or mounts on a wall, and charges the DS3578 cordless digital scanner. An external power supply or a powered host cable charges the digital scanner.
- The STB3578 cordless cradle sits on a desktop or mounts on a wall, and charges the DS3578 cordless digital scanner. This cradle also provides host communication by receiving scanner data via a Bluetooth radio, and sending that data to the host through an attached cable. An external power supply or a powered host cable charges the digital scanner.
- The STB3574 cordless Ethernet cradle sits on a desktop or mounts on a wall, and charges the DS3578 cordless digital scanner. This cradle also provides host communication sending data to the host via an Ethernet interface that supports three standard protocols. An external power supply charges the digital scanner. Refer to the *STB3574 Industrial Ethernet Cradle Developer Guide* (p/n MN-002694-xx) for detailed configuration information.
- The FLB3508 cordless cradle charges the DS3578 cordless digital scanner. The cradle attaches to a mounting bracket using three isolators, and the bracket then mounts on the forklift surface. A portable power supply on the forklift provides power to the cradle.
- The FLB3578 cordless cradle charges the DS3578 cordless digital scanner, and provides host communication by receiving scanner data via a Bluetooth radio, and sending that data to the host through an attached cable. The cradle attaches to a mounting bracket using three isolators, and the bracket then mounts on the forklift surface. A portable power supply on the forklift provides power to the cradle.

These cradles **CAN** be used with the LS3578 scanners for charging and radio communication.

DO NOT use these cradles with LS3478 and DS3478 scanners. Likewise, **DO NOT** use cradles designed for the LS3478 and DS3478 to charge or provide communication for LS3578 and DS3578 scanners.

✓ **NOTE** For more information about communication between the digital scanner, cradle, and host, see [Chapter 4, Radio Communications](#).

For more information about mounting options and procedures, refer to the documentation included with the cradle.

[Table 1-1](#) outlines several main differences between the STB3578-C0007WR non-FIPS cradle, the STB3578-CF007WR FIPS cradle, and the STB3574-C100F7WW Ethernet FIPS cradle.

Table 1-1 Cradle Comparison

Feature	STB3578-C0007WR (Non-FIPS Cradle)	STB3578-CF007WR (FIPS Cradle)	STB3574-C100F7WW (Ethernet FIPS Cradle)
Cradle Types	Bluetooth or Charge Only	Bluetooth or Charge Only	Ethernet
Pairing	Pair up to 3 scanners per cradle	Pair up to 7 scanners per cradle	Pair up to 7 scanners per cradle
Paging	Not Available	Paging feature	Paging feature
Charging	Charges via power supply or USB interface cable	Charges via power supply or USB interface cable	Charges via power supply only
Interfaces	Supports most commonly used interfaces (see Technical Specifications - Cradles on page 3-6 for detailed list)	Supports most commonly used interfaces (see Technical Specifications - Cradles on page 3-6 for detailed list)	Supports Ethernet interface only (see Technical Specifications - Cradles on page 3-6 for a detailed list)
FIPS	Not available	FIPS140-2 wireless security	FIPS 140-2 wireless security
Image Capture	Not available	Supported via SNAPI	Not available
OCR/MICR	Not available	Supported via SNAPI	Not available

✓ **NOTE** When using a non-FIPS digital scanner with a STB3578-CF007WR FIPS cradle, some product features are unavailable.

For non-FIPS scanners DS3578-SR20005WR, DS3578-HD20005WR, and DS3578-DP20005WR, the following features are not compatible with the FIPS cradle:

- FIPS is unavailable
- Image Capture is unavailable
- Pair 7 scanners per cradle is unavailable (3:1 Pairing only)

For non-FIPS scanners LS3578-FZ20005WR and LS3578-ER20005WR, the following features are not compatible with the FIPS cradle:

- FIPS is unavailable
- Pair 7 scanners per cradle is unavailable (3:1 Pairing only)
- For a list of FIPS enabled digital scanners, see [Configurations on page xv](#).

Cradle Parts

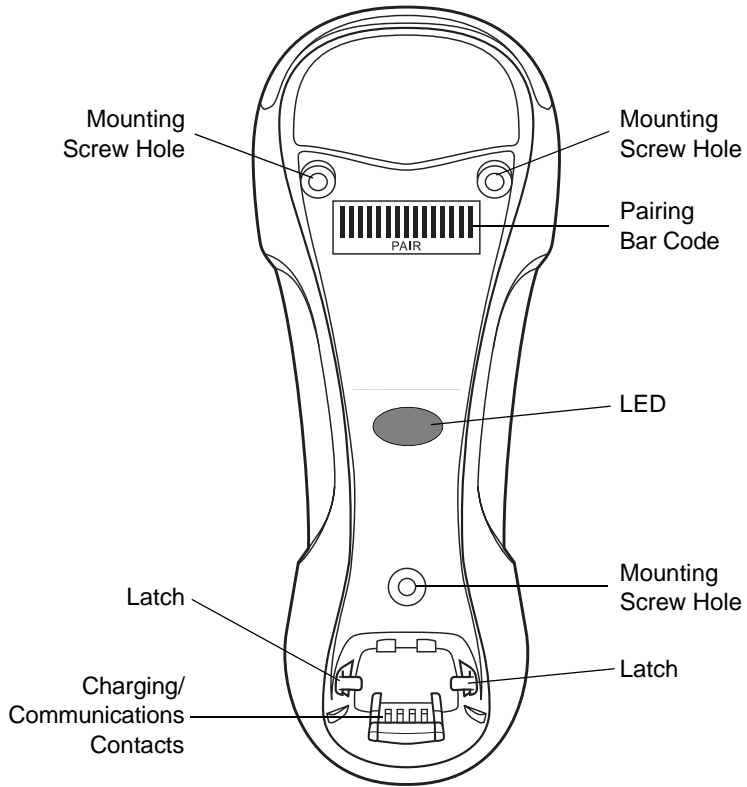


Figure 1-2 Cradle Front View

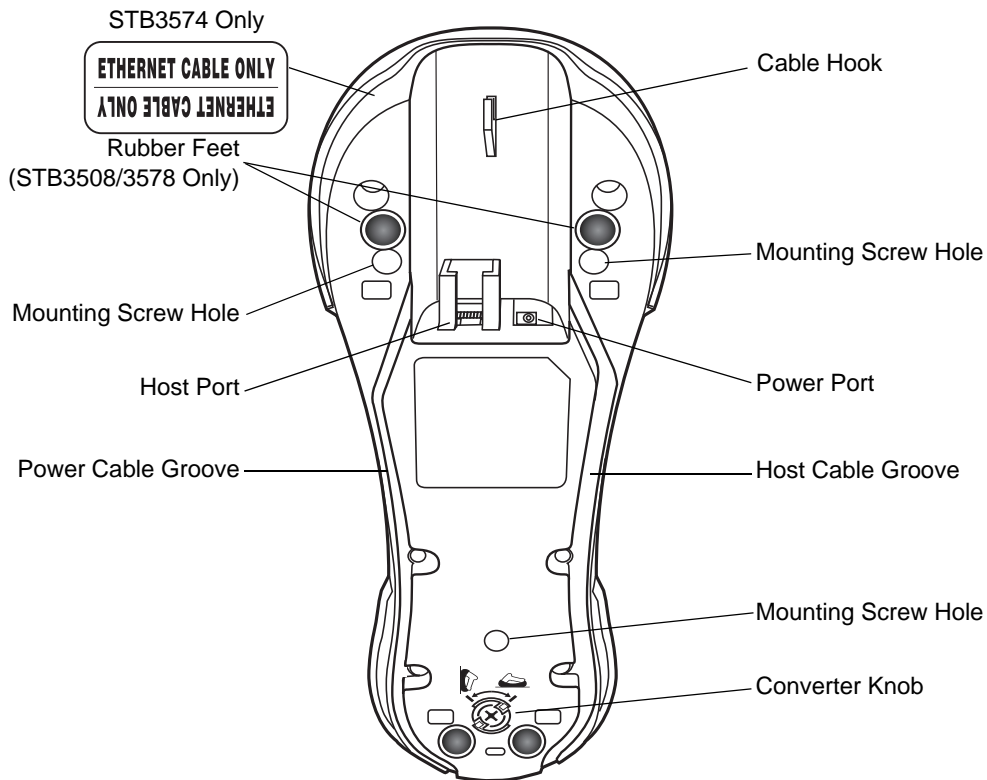


Figure 1-3 Cradle Back View

Connecting the Cradle



IMPORTANT Connect the interface cable and power supply (if necessary) in the following order to ensure proper operation of the digital scanner and cradle.

Connecting STB3508/3578/3574 Cradle

1. Insert the interface cable into the cradle host port. See [Figure 1-4](#).



IMPORTANT Ensure to use the correct interface cable. The STB3578 cradle requires a multi-interface cable; the STB3574 Industrial Ethernet requires an Ethernet cable.

2. Connect the other end of the interface cable to the host.
For the STB3574 Ethernet cradle only, connect the other end of the interface cable to an Ethernet switch or router on the host network.
3. If necessary, connect the power supply to the cradle's power port (if the interface requires, or to allow fast charging of the digital scanner).
4. Connect the appropriate cable to the power supply and an AC power source, if necessary.
5. If applicable, thread the interface cable over the cable support hook and run the host and power cables into their respective cable grooves.
6. Pair the digital scanner to the cradle by scanning the pairing bar code on the cradle.
7. If necessary, scan the appropriate host bar code (for non-autodetected interfaces). See the specific host chapter.

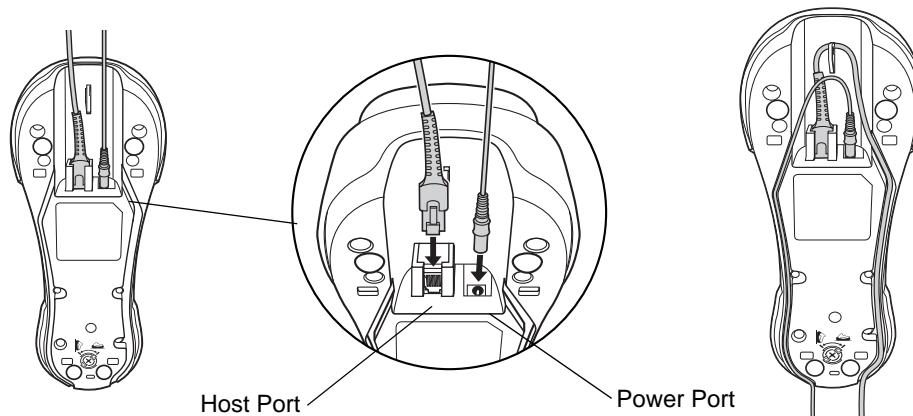


Figure 1-4 Connecting the Cables to the Cradle




NOTE Disconnect the power supply before changing host cables, or the digital scanner may not recognize the new host.

Different cables are required for different hosts. The connectors illustrated in each host chapter are examples only. The connectors may be different from those illustrated, but the steps to connect the digital scanner remain the same.

Connecting FLB3508/3578 Cradle

1. Insert the interface cable from the host computer into the cradle's host port. See *Figure 1-4*.
2. Connect the forklift power supply to the cradle's power port, if applicable.
3. Optionally, thread the host cable over the cable hook and run the host and power cables into their respective cable grooves, or use cable ties to secure them to the mounting plate after attaching it to the cradle. For more information about mounting options and procedures, refer to the documentation included with the cradle.
4. Pair the digital scanner with the cradle by scanning the pairing bar code on the cradle.
5. If necessary, scan the appropriate host bar code (for non-autodetected interfaces). See the specific host chapter.

Changing the Host Interface

 **NOTE** Changing host interfaces is NOT applicable to the STB3574 Industrial Ethernet cradle.

To connect to a different host, or to the same host using a different cable:

1. Disconnect the power supply from the cradle, if used.
2. Disconnect the interface cable from the host.
3. Connect the interface cable to the new host, or the new interface cable to the existing host.
4. Reconnect the power supply, if required.
5. If necessary, scan the appropriate host bar code (for non-autodetected interfaces). See the specific host chapter.



CAUTION If the digital scanner does not recognize the host, disconnect the power supply, then reconnect after connecting the host cable.

Supplying Power to the Cradle

The cradle receives power from one of two sources:

- An external power supply.
- When connected to the host through an interface cable that supplies power.

The cradle detects whether the host or the external supply is supplying power. It always draws power from the external supply when available, regardless of the presence of power from a host.

Using the USB Interface to Supply Power

When the cradle is connected to the host via the USB interface, the USB port can power the cradle so that an external power supply is not necessary. Note that powering from a USB host charges the digital scanner at a slower rate than when charging from an external power supply.

Mounting the Cradle

For information on mounting the cradle, refer to the documentation included with the cradle.

Inserting the Battery

The battery resides in a chamber in the digital scanner handle. To insert the battery:

1. Insert a coin or flathead screwdriver in the slot at the base of the digital scanner, then turn the slot counterclockwise to release the latch.
2. Lift the latch.
3. If a battery is already installed, turn the digital scanner upright to slide the battery out.
4. Slide the new battery into the chamber, with the rounded side toward the back and the contacts facing into the chamber.

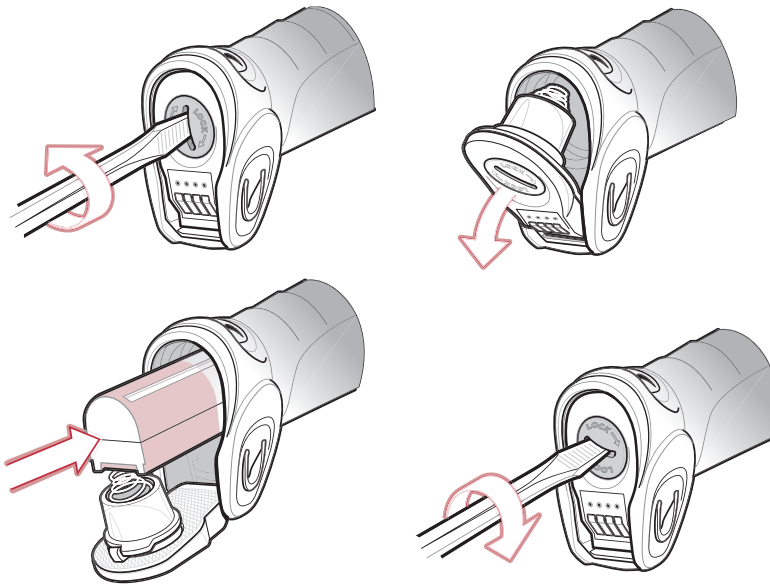


Figure 1-5 *Inserting the Battery*

5. Close the latch.
6. Insert a coin or flathead screwdriver in the slot at the base of the digital scanner, press down gently, and turn the slot clockwise to lock the latch in place.

Removing the Battery

To remove the battery:

1. Insert a coin or flathead screwdriver in the slot at the base of the digital scanner, then turn the slot counterclockwise to release the latch.
2. Lift the latch.
3. Turn the digital scanner upright to slide the battery out.

Charging the Scanner Battery in the Cradle

For best performance, fully charge the digital scanner battery before using the digital scanner for the first time. To charge the digital scanner battery, place the digital scanner in the cradle (see [Inserting the Scanner in the Cradle on page 1-8](#)). The battery begins charging when the digital scanner LED indicator starts flashing green. A complete charge of a fully discharged battery can take up to 4.5 hours using external power and up to 10 hours using the interface cable.

Charge within the recommended temperature of 32° to 104° F (0° to 40° C) nominal, 41° to 95° F (5° to 35° C) ideal.

The DS3578 typically achieves 50,000 (fifty thousand) scans. For information on maximizing battery life, see [Battery Maintenance on page 3-1](#).

Scanner Charging LED

The digital scanner's green LED indicates charging activity (see [Table 2-2 on page 2-4](#)). If the digital scanner is charging in fast mode (non-bus powered mode), the green LED blinks at a fast rate. If the digital scanner is charging in slow mode (bus-powered mode), the LED blinks at a slow rate.

If the digital scanner's red LED begins flashing, indicating a charging problem, remove the digital scanner from the cradle and replace the battery. If the red LED continues flashing, contact Zebra Support.

Inserting the Scanner in the Cradle

To insert the digital scanner in the cradle:

1. Insert the digital scanner into the cradle top first.
2. Push the handle until it clicks into place, engaging the contacts in the cradle and digital scanner.

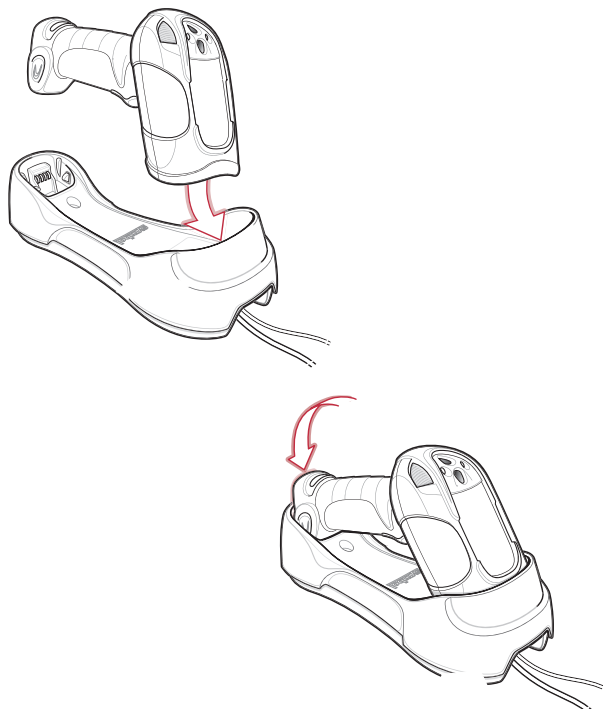


Figure 1-6 *Inserting the Scanner in the Cradle*

Sending Data to the Host Computer

The cradles with a radio receive data from the digital scanner via a wireless radio connection and transmits it to the host computer via the host cable. The digital scanner and cradle must be paired for successful wireless communication.

The STB3574 Industrial Ethernet cradle receives and transfers data via a configurable Ethernet IP address.

Pairing

Pairing registers a scanner to the cradle such that the scanner and cradle can exchange information. The STB3578 and FLB3578 operate in two modes: Point-to-Point and Multipoint-to-Point. In Point-to-Point mode, pair the digital scanner to the cradle either by inserting it in the cradle (if pairing on insertion is enabled), or by scanning the pairing bar code. In Multipoint-to-Point mode, you can pair up to seven scanners to one cradle. To use this feature, scan the multipoint bar code in [Multipoint-to-Point Communication on page 4-19](#).

The cradle includes pairing bar codes on both its front and back. To pair the digital scanner with the cradle, scan a pairing bar code. A high-low-high-low beep sequence followed by a low-high beep sequence indicates successful pairing and connection to the remote device. A long low, long high beep sequence indicates unsuccessful pairing.

- ✓ **NOTE** The pairing bar code that connects the digital scanner to a cradle is unique to each cradle.
Do not scan data or parameters until pairing completes.

Table 1-2 *Pairing Configurations*

Configuration	STB/FLB3578-C0007WR (Non-FIPS Cradle)	STB/FLB3578-CF007WR (FIPS Cradle)	STB3574-C100F7WW (Ethernet FIPS Cradle)
DS3578-XX2F005WR	Pair up to 3 scanners per cradle	Pair up to 7 scanners per cradle; FIPS	Pair up to 7 scanners per cradle; FIPS
DS3578-XX20005WR	Pair up to 3 scanners per cradle	Pair up to 3 scanners per cradle; No FIPS	Pair up to 3 scanners per cradle; No FIPS
LS3578-XX20005WR	Pair up to 3 scanners per cradle	Pair up to 3 scanners per cradle; No FIPS	Pair up to 3 scanners per cradle; No FIPS

- ✓ **NOTE** FIPS is only available when a FIPS enabled digital scanner configuration (DS3578-XX2F005WR) is paired with a FIPS enabled cradle (STB/FLB-CF007WR).

Lost Connection to Host

If scanned data does not transmit to the cradle's host, ensure that all cables are firmly inserted and the power supply is connected to an appropriate AC outlet, if applicable. If scanned data still does not transmit to the host, reestablish a connection with the host:

1. Disconnect the power supply from the cradle.
2. Disconnect the host interface cable from the cradle.
3. Wait three seconds.
4. Reconnect the host interface cable to the cradle.
5. Reconnect the power supply to the cradle, if the host requires.
6. Reestablish pairing with the cradle by scanning the pairing bar code.

Configuring the Scanner

Use the bar codes in this manual or the 123Scan² configuration program to configure the digital scanner. See [Chapter 5, User Preferences](#) and each host chapter for information about programming the digital scanner using bar code menus. See [Chapter 13, 123Scan2](#) to configure the digital scanner using this configuration program. 123Scan² includes a help file.

Radio Communications

The digital scanner can communicate with remote devices via Bluetooth Technology Profile Support, or by pairing with a cradle. For radio communication parameters, detailed information about operational modes, Bluetooth Technology Profile Support and pairing, see [Chapter 4, Radio Communications](#).

Ethernet Communications

The STB3574 cradle can be configured to use one of three Industrial Ethernet Protocols: PROFINET, EtherNet/IP, and Modbus TCP. Go to: <https://www.zebra.com/us/en/supportdownloads.html> to download the configuration software for this cradle.

CHAPTER 2 SCANNING

Introduction

This chapter provides beeper and LED definitions, scanning techniques, general scanning instructions and tips, and decode zone tables.

Beeper Definitions

The digital scanner emits different beeper sequences and patterns to indicate its status. [Table](#) defines beep sequences that occur during both normal scanning and while programming the digital scanner.

Table 2-1 *Beeper Definitions*

Beeper Sequence	Indication
Standard Use	
Short low-short medium-short high beeps	Power up.
One short high beep	A bar code symbol was decoded (if decode beeper is enabled).
Four long low beeps	A communication error occurred while transmitting a scanned symbol to a host. The data is ignored. This occurs if the digital scanner is not properly configured or if the digital scanner has disconnected from the cradle.
Low beep	The digital scanner detects power when inserted into a cradle. Note: This feature can be disabled.
Low-high-low-high beeps	Out of memory - the digital scanner cannot store the new bar code data. The digital scanner was inserted in an incompatible/older cradle.
Four short high beeps	Low battery indication.
Five long low beeps	Conversion or format error.

Table 2-1 *Beeper Definitions (Continued)*

Beeper Sequence	Indication
Wireless Operation	
Short low-high beeps	Scanner has paired with the cradle.
Short high-low beeps	Scanner has unpaired with the cradle. Note: When connected to a remote device using SPP or HID, if a disconnect beep sequence sounds immediately after scanning a bar code, check the host device to determine if it received the transmitted data. The digital scanner may have transmitted the last bar code scanned after losing the connection.
Long low-long high beeps	Unsuccessful pairing attempt. See Auto-reconnect in Bluetooth Keyboard Emulation (HID Slave) Mode on page 4-17 .
Long low-long high-long low-long high beeps	Remote device rejected connection attempt, possibly due to an attempt to pair with a cradle that is already paired with the maximum number of scanners.
Four long low beeps	<ol style="list-style-type: none"> 1. A transmission error was detected in a scanned symbol. The data is ignored. This occurs if a unit is not properly configured. Check option setting. 2. When communicating with a cradle, the cradle acknowledges receipt of data. If the acknowledgment is not received, this transmission error beep sequence sounds. Data may still have been received by the host. Check the host system for receipt of transmitted data. If data was not received by the host, re-scan the bar code.
Five high beeps	Emitted every 5 seconds while a reconnection attempt is in progress. See Auto-reconnect in Bluetooth Keyboard Emulation (HID Slave) Mode on page 4-17 .
Parameter Menu Scanning	
Short high beep	Correct entry scanned or correct menu sequence performed.
Long low-long high beeps	Input error; incorrect bar code, programming sequence, or Cancel scanned. Scanner remains in program mode.
Short high-short low beeps	Keyboard parameter selected. Enter value using numeric bar codes.
Short high-short low-short high-short low beeps	Successful program exit with change in the parameter setting.
Long low-long high-long low-long high beeps	Out of host parameter storage space. See Default Parameters on page 5-4 .
ADF Programming Normal Data Entry	
High-low beeps	Enter another digit. Add leading zeros to the front if necessary.
Low-low beeps	Enter another alphabetic character or scan the End of Message bar code.
High-high beeps	Enter another criterion or action, or scan the Save Rule bar code.

Table 2-1 *Beeper Definitions (Continued)*

Beeper Sequence	Indication
High-low-high-low beeps	Rule saved. Rule entry mode exited.
High-low-low beeps	All criteria or actions cleared for current rule, continue entering rule.
Low beep	Delete last saved rule. The current rule is left intact.
Low-high-high beeps	All rules have been deleted.
Short low-short high-short low-short high beeps	Out of host ADF parameter storage space. See Default Parameters on page 5-4 .
ADF Programming Error Indications	
Low-high-low-high beeps	Out of rule memory. Erase some existing rules, then try to save rule again. (It is not necessary to re-enter the current rule.) A DS3578 digital scanner was inserted into an STB3478 cradle.
Low-high-low beeps	ADF transmit error. Cancel rule entry. Rule entry mode exited because of an error or the user asked to exit rule entry.
Low-high beeps	Entry error, wrong bar code scanned. Re-enter criterion or action. All previously entered criteria and actions are retained. Criteria or action list is too long for a rule.
Host Specific	
USB Only	
Four high beeps	The digital scanner did not complete initialization. Wait several seconds and scan again.
Short high-short low (disconnect) followed by a short low-short high (reconnect) beep sequence	<ol style="list-style-type: none"> 1. The digital scanner scanned a USB device type. The digital scanner must establish communication with the bus before it can operate at the highest power level. 2. The USB bus may cause power to the digital scanner to cycle on and off more than once. This is normal and usually happens when the host PC cold boots.
RS-232 only	
High-high-high-low beeps	RS-232 receive error.
High beep	A <BEL> character is received and Beep on <BEL> is enabled (Point-to-Point mode only).

LED Definitions

In addition to beeper sequences, the digital scanner uses a two-color LED to indicate its status, and the cradle's LED indicates charge and communication status. [Table](#) explains digital scanner LED sequences, and [Table](#) explains cradle LED sequences.

Table 2-2 *Scanner LED Status Indications*

LED	Indication
Standard Use	
Off	No power is applied to the digital scanner (battery is discharged or removed); digital scanner is in low power and ready to scan.
Green	A bar code was successfully decoded.
Red	A data transmission error, digital scanner malfunction, or the DS3578 digital scanner was inserted into an STB3478 cradle.
Charging Use	
Green Slow Flash	The digital scanner charges at the slow rate (used when a host cable powers the cradle).
Green Fast Flash	The digital scanner charges at the fast rate (used when an external power supply powers the cradle).
Red flash	Charging problem. Contact Zebra Support. The DS3578 digital scanner was inserted into an STB3478 cradle.
Red and green flash	Temperature fault. Move the cradle to a location where the temperature is 0° - 40° C; optimal charging temperature is 5° - 35° C.

Table 2-3 *Cradle LED Status Indications*

LED	Indication
Blue	Cradle is powered.
Red	Transmission error, or you inserted an DS3478 digital scanner into the STB3578 cradle.

Scanning

Install and program the digital scanner (see [Chapter 1, Getting Started](#)). For assistance, contact the local supplier or Zebra Support.

1. Aim the digital scanner at the bar code.

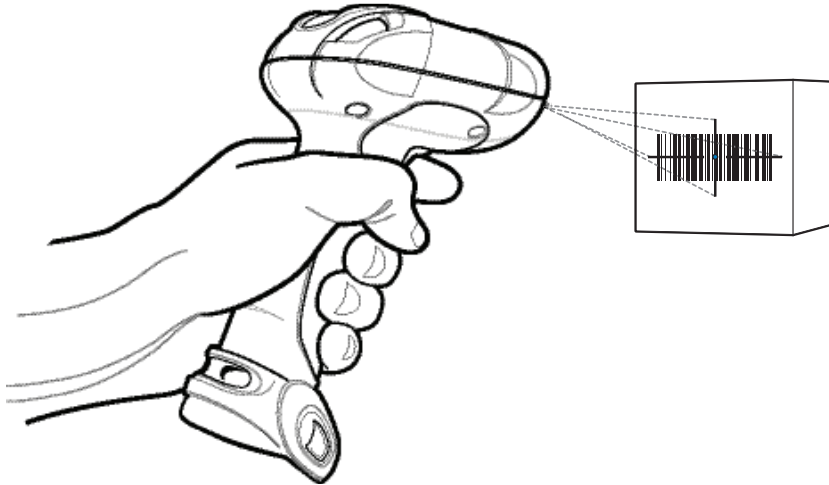


Figure 2-1 Scanning in Hand-Held Mode: DS3578-SR/HD/DP

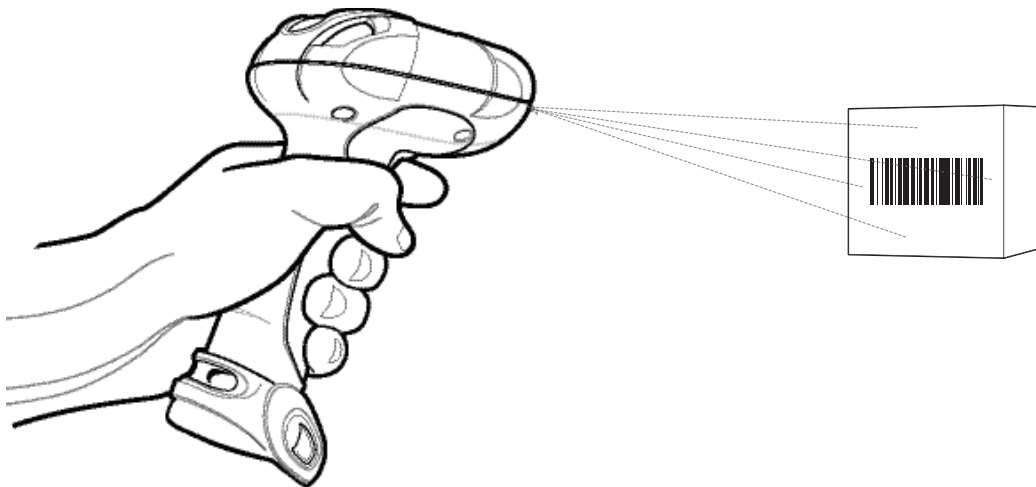


Figure 2-2 Scanning in Hand-Held Mode: DS3578-ER

2. Hold the trigger until the digital scanner beeps, indicating the bar code is successfully decoded. For more information on beeper and LED definitions, see [Table](#) and [Table](#).

Aiming

When scanning, the DS3578-SR/HD/DP projects a red laser aiming pattern which allows positioning the bar code within its field of view. See [Decode Ranges on page 2-8](#) for the proper distance to achieve between the digital scanner and a bar code.

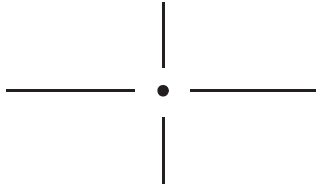


Figure 2-3 DS3578-SR/HD/DP Imager Aiming Pattern

If necessary, the digital scanner turns on its red LEDs to illuminate the target bar code.

To scan a bar code, center the symbol in any orientation within the aiming pattern. Be sure the entire symbol is within the rectangular area formed by the cross pattern.

1D bar code symbol

2D bar code symbol

2D dot peen DPM symbol

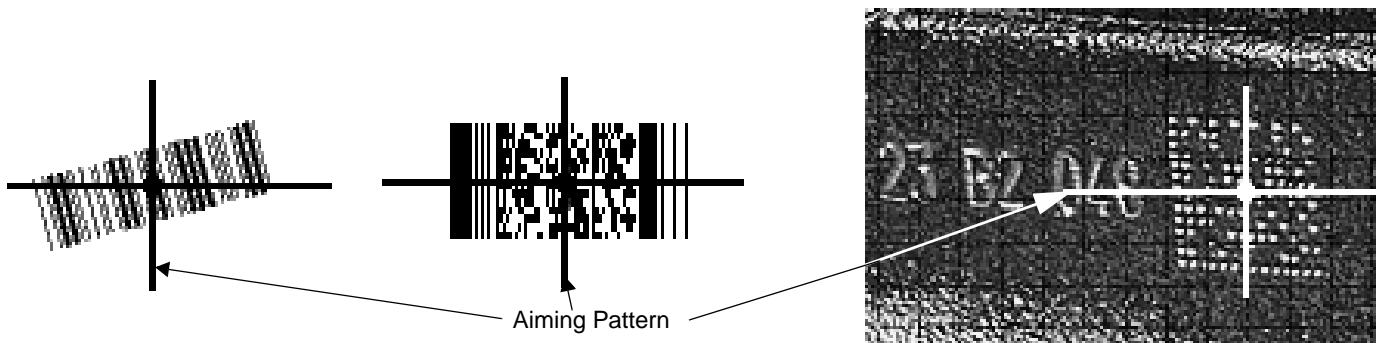


Figure 2-4 Scanning Orientation with Imager Aiming Pattern



NOTE Scanning Direct Part Mark (DPM) bar codes with the DS3578-DP20005WR and DS3578-DP2F005WR digital scanner: Due to the reflective nature of some surfaces used with DPM bar codes (see [Figure 2-4](#)), it may be necessary to tilt the digital scanner at an angle relative to the target (Zebra recommends 25-45 degrees). For example, when scanning a 15 mil dot peen Datamatrix bar code marked on an aluminum surface with the DS3578-DP, present the target between two and three inches from the nose of the digital scanner, and tilt the digital scanner at a 30 degree angle.

When scanning standard (non-DPM) bar codes with any configuration of the DS3578 digital scanner, follow the standard aiming instructions described in [Aiming on page 2-6](#).

The digital scanner can also read a bar code presented within the aiming pattern but not centered. The top examples in [Figure 2-5](#) show acceptable aiming options, while the bottom examples can not be decoded.

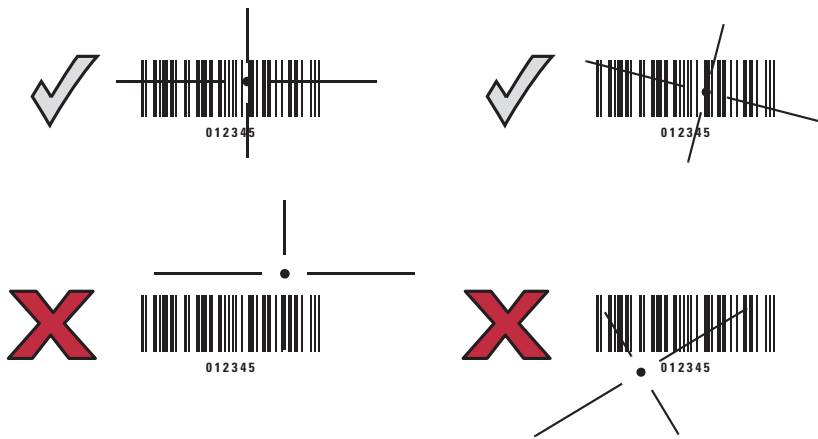


Figure 2-5 *Acceptable and Incorrect Aiming*

Decode Ranges

DS3578-SR/HD/DP Decode Ranges

Table 2-4 DS3578-SR/HD/DP Series Depth of Field

Label Density	DS3578-SR		DS3578-HD/DS3578-DP	
	English	Metric	English	Metric
Code 39 - 3 mil	N/A	N/A	1.10" - 1.60"	2.79 - 4.06 cm
Code 39 - 4 mil	2.60" - 4.50"	6.60 - 11.43 cm	Contact - 3.5"	Contact - 8.89 cm
Code 39 - 5 mil	1.00" - 6.30"	2.54 - 16.00 cm	Contact - 4.2"	Contact - 10.67 cm
Code 39 - 7.5 mil	Contact - 10.10"	Contact - 25.65 cm	Contact - 5.4"	Contact - 13.72 cm
Code 39 - 20 mil	1.00" - 20.90"	2.54 - 53.09 cm	1.10" - 9.20"	2.79 - 23.37 cm
100% UPC - 13 mil	0.90" - 15.10"	2.29 - 38.35 cm	0.80" - 6.20"	2.03 - 15.75 cm
PDF417 - 6.67 mil	2.70" - 6.10"	6.86 - 15.49 cm	Contact - 3.70"	Contact - 9.40 cm
PDF417 - 10 mil	0.40" - 9.30"	1.02 - 23.62 cm	Contact - 4.50"	Contact - 11.43 cm
PDF417 - 15 mil	3.30" - 14.80"	8.38 - 37.59 cm	3.20" - 5.60"	8.13 - 14.22 cm
Data Matrix - 4 mil	N/A	N/A	1.00" - 2.10"	2.54 - 5.33 cm
Data Matrix - 5 mil	N/A	N/A	0.40" - 2.70"	1.02 - 6.86 cm
Data Matrix - 7.5 mil	2.10" - 5.50"	5.33 - 13.97 cm	Contact - 3.50"	Contact - 8.89 cm
Data Matrix - 10 mil	1.10" - 7.10"	2.79 - 18.03 cm	Contact - 4.40"	Contact - 11.18 cm
QR Code - 4 mil	N/A	N/A	1.10 - 1.40"	2.79 - 3.56 cm
QR Code - 5 mil	N/A	N/A	0.50" - 2.20"	1.27 - 5.59 cm
QR Code - 7.5 mil	N/A	N/A	Contact - 3.30"	Contact - 8.38 cm
QR Code - 10 mil	1.50" - 6.10"	3.81 - 15.49 cm	Contact - 4.00"	Contact - 10.16 cm

DS3578-ER Decode Ranges

Table 2-5 DS3578-ER Depth of Field

Label Density	DS3578-ER	
	English	Metric
Paper Label		
Code 39 - 7.5 mil	8.50" - 34"	21.59 - 86.36 cm
Code 39 - 10 mil	8" - 41.50"	20.32 - 105.41 cm
Code 128- 15 mil	7" - 47.50"	17.78 - 120.65 cm
Code 39 - 20 mil	* - 88"	* - 223.52 cm
Code 39 - 55 mil	* - 205"	* - 520.70 cm
Code 39 - 100 mil	* - 335"	* - 850.90 cm
Code 39 - 100 mil reflective	* - 340"	* - 863.60 cm
Data Matrix - 10 mil	8.25" - 16.50"	20.96 - 41.91 cm
Data Matrix - 55 mil	* - 89.50	* - 227.33 cm
Data Matrix - 100 mil	* - 168.50	* - 427.99 cm
Data Matrix - 314 mil	* - 450"	* - 1143.0 cm
* Dependent on length of bar code.		

CHAPTER 3 MAINTENANCE AND TECHNICAL SPECIFICATIONS

Introduction

This chapter provides suggested digital scanner maintenance, troubleshooting, technical specifications, and signal descriptions (pinouts).

Maintenance

Cleaning the scan window is the only maintenance required. A dirty window can affect scanning accuracy.

- Do not allow any abrasive material to touch the window.
- Remove any dirt particles with a damp cloth.
- Wipe the window using a tissue moistened with ammonia/water.
- Do not spray water or other cleaning liquids directly onto the window.

Battery Maintenance

When batteries are stored over a year, battery cell manufacturers advise that some irreversible deterioration in overall battery quality may occur. To minimize this loss, they recommend storing batteries half charged in a dry, cool place between 41° and 77°F (5° and 25°C), the cooler the better, and removed from the equipment to prevent the loss of capacity. Batteries should be charged to half capacity at least once a year. In order to charge a battery to half capacity, take a fully discharged battery and charge it for 2 hours. If an electrolyte leakage is observed, avoid any contact with the affected area and properly dispose of the battery.

Troubleshooting

✓ **NOTE** Refer to the *STB3574 Industrial Ethernet Cradle Developer Guide*, p/n MN-002694-01, for troubleshooting this cradle.

Table 3-1 Troubleshooting

Problem	Possible Causes	Possible Solutions
Digital scanner emits low/medium/high beep sequence.	Digital scanner is powering up.	Normal when digital scanner battery is inserted.
Nothing happens when scan trigger is pressed.	No power to the digital scanner.	Check battery. Ensure that end cap to battery chamber is secured.
	Digital scanner is disabled.	For IBM-468x or USB IBM modes, enable the digital scanner via the host interface. Otherwise, call Zebra Support (see page xviii) for contact information).
	If using RS-232 Nixdorf B mode, CTS is not asserted.	Assert CTS line.
Laser comes on, but digital scanner does not decode the bar code.	Digital scanner is not programmed for the correct bar code type.	Ensure the digital scanner is programmed to read the type of bar code being scanned.
	Bar code symbol is unreadable.	Check the symbol to ensure it is not defaced. Try scanning test bar codes of the same bar code type. See Appendix C, Sample Bar Codes for test bar codes.
	Bar code is out of range of the digital scanner.	Move digital scanner closer to or further from bar code.
Digital scanner emits four short high beeps.	Battery is low.	Charge the battery. See Charging the Scanner Battery in the Cradle on page 1-8 .
Digital scanner emits a disconnect (high-low) beep sequence.	Digital scanner has disconnected from cradle because it is too far from the cradle.	Move closer to the cradle and listen for a reconnection beep (short low-short high).
	Digital scanner has disconnected from the cradle because the cradle has lost power or been placed in USB suspend mode.	Check power connections to cradle, and if using a USB cable, check to make sure PC has not entered a power save mode.

Table 3-1 Troubleshooting (Continued)

Problem	Possible Causes	Possible Solutions
Digital scanner emits four long low beeps after scanning a bar code.	Incorrect host interface cable is used.	Ensure that correct host interface cable is used.
	Interface/power cables to cradle are loose.	Ensure all cable connections are secure.
	Digital scanner is not paired to a cradle.	Scan the PAIR bar code on the cradle that is connected to the host that is to receive data.
	Digital scanner has disconnected.	See disconnect beep sequence above.
	A transmission error was detected.	Ensure the cradle's communication parameters match the host's setting.
	Cradle has not completed USB initialization.	Wait several seconds and scan again.
Bar code is decoded, but data is not transmitted to the host.	Digital scanner not paired to host-connected cradle.	Pair the digital scanner to the cradle (using PAIR bar code on the cradle).
	Cradle not programmed for correct host interface.	Check digital scanner host parameters or edit options.
	Interface cable is loose.	Ensure all cable connections are secure.
	Cradle has lost connection to host.	<i>In this exact order:</i> disconnect power supply; disconnect host cable; wait three seconds; reconnect host cable; reconnect power supply; reestablish pairing.
Five long low beeps sound after a bar code is decoded	A conversion error or format error has been detected.	Ensure the digital scanner's conversion parameters are properly configured.
Scanned data is incorrectly displayed on the host.	Cradle host communication parameters do not match host's parameters.	Ensure proper host is selected.
		For RS-232, ensure the cradle's communication parameters match the host's settings.
		For a Keyboard Wedge configuration, ensure the system is programmed for the correct keyboard type, and the CAPS LOCK key is off.
Digital scanner emits low/low/low/extra-low beep sequence when it is not in use.	RS-232 receive error.	Normal during host reset. Otherwise, ensure the digital scanner's RS-232 parity setting matches the host setting.
Digital scanner emits low-high beep sequence during programming.	Input error or Cancel bar code was scanned.	Ensure the correct numeric bar codes, that are within range for the parameter being programmed, are being scanned.

Table 3-1 *Troubleshooting (Continued)*

Problem	Possible Causes	Possible Solutions
Digital scanner emits one short high beep when it is not in use.	In RS-232 mode, a <BEL> character is received and Beep on <BEL> option is enabled.	Normal when Beep on <BEL> is enabled and the digital scanner is in RS-232 mode.
Cradle does not work after following installation procedures.	Cradle is not receiving power.	Check system power.
	Cable connections are not secure.	Reinsert cables properly.
	The digital scanner is not inserted properly in the cradle.	Reinsert digital scanner.
	Cradle is not properly connected to the host.	Check that host settings are correct, and connect the cradle to the appropriate port on the host.
Battery does not charge.	Cradle is outside the charging temperature range.	Charge within the recommended temperature of 32° to 104° F (0° to 40° C) nominal, 41° to 95° F (5° to 35° C) ideal.



NOTE If problems still occur, contact the distributor or Zebra Support. See [page xviii](#) for contact information.

Technical Specifications

Table 3-2 *Technical Specifications - Scanner*

Item	Description
Physical Characteristics	
Dimensions: Height Width Depth	7.34 in. (18.65 cm) 4.82 in. (12.25 cm) 2.93 in. (7.43 cm)
Weight	13.79 oz. (391 grams)
Performance Characteristics	
Roll/Pitch/Yaw	SR/HD/DP Configurations: ± 360 , ± 65 , ± 60 ER Configuration: ± 360 , ± 60 , ± 60
Laser	650nm laser diode
ESD	15 kV air discharge 8 kV contact discharge
Radio	Bluetooth, Up to 100 meters/300 ft. in open air range/environment Serial Port & HID Profiles 2.402 to 2.480 GHz Adaptive Frequency Hopping (co-existence with 802.11 wireless networks) Basic Data Rate: 720 kbps Enhanced Data Rate (EDR) for image transfer.
Beeper Tone	User-selectable: Three tones
Minimum Element Width	5 mil (0.127 mm)
Symbology Decode Capability	
1D	UPC/EAN and with supplementals, Code 39, Code 39 Full ASCII, Tri-optic Code 39, GS1 DataBar Variants, GS1-128, Code 128, Code 128 Full ASCII, Code 93, Codabar (NW1), Interleaved 2 of 5, Discrete 2 of 5 MSI, Codell, IATA, Bookland EAN, Code 32
PDF417 (and variants)	PDF417 (Standard, Macro), MicroPDF417 (Standard, Macro), Composite Codes (CC-A, CC-B, CC-C)
Postal	U.S. Postnet, U.S. Planet, U.K. Postal, Japan Postal, Australian Postal, Dutch Postal, 4State Postal
DPM Marks (DPM unit only)	Datamatrix marks applied by dot-peening. All supported bar code types listed above marked by laser etching, chemical etching, ink marking, molding, stamping or casting methods on surfaces such as including metal, plastic, rubber or glass
2D	TLC-39, Aztec (Standard, Inverse), MaxiCode, DataMatrix/ECC 200 (Standard, Inverse), QR Code (Standard, Inverse, Micro)

Table 3-2 Technical Specifications - Scanner (Continued)

Item	Description
IUID Support	Supports IUID parsing. The ability to read and separate IUID fields per application requirements
Typical Working Distance	See Decode Ranges on page 2-8
Print Contrast Minimum	25% minimum reflectance differential, measured at 650 nm.
Motion Tolerances	Horizontal Velocity: 5 in. (12.7 cm) per second
Interfaces Supported	Keyboard Wedge, RS-232, USB, IBM 468X/469X, 123Scan ²
User Environment	
Operating Temperature	-4° to 122° F (-20° to 50° C)
Storage Temperature	-40° to 158° F (-40° to 70° C)
Charging Temperature	32° to 104° F (0° to 40° C) nominal, 41° to 95° F (5° to 35° C) ideal
Humidity	5% to 95% RH (non-condensing)
Ambient Light Immunity Indoor: Outdoor:	450 Ft Candles (4,842 Lux) DS3578-SR/HD/DP: 8,000 ft. Candles (86,000 LUX) DS3578-ER: 9,000 ft. candles (96,900 LUX)
Durability	6.5 ft (2.0 m) drops to concrete; 5 ft (1.5 m) at -4° F (-20° C)

Table 3-3 Technical Specifications - Cradles

Item	Description	
	STB3508 and FLB3508	STB3578 and FLB3578
Power Requirements	4.75 - 14.0 VDC	
Typical Current Draw		
Not Charging:	35 mA @ 5V 45 mA @ 9V	105 mA @ 5V 110 mA @ 9V
Fast Rate Charge:	915 mA @ 5V 660 mA @ 9V	915 mA @ 5V 660 mA @ 9V
Slow Rate Charge:	480 mA @ 5V 345 mA @ 9V	480 mA @ 5V 345 mA @ 9V
Interfaces Supported	None	Keyboard Wedge, RS-232, USB, IBM 468X/469X
Operating Temperature	-4° to 122° F (-20° to 50° C)	

Table 3-3 *Technical Specifications - Cradles (Continued)*

Item	Description	
	STB3508 and FLB3508	STB3578 and FLB3578
Storage Temperature	-40° to 158° F (-40° to 70° C)	
Charging Temperature	32° to 104° F (0° to 40° C) nominal, 41° to 95° F (5° to 35° C) ideal	
Humidity	5% to 95% (non-condensing)	
ESD	15 kV air discharge 8 kV contact discharge	
Weight	10.5 oz (298 grams)	
Dimensions:		
Height	9.5 in. (24.1 cm)	
Width	4.0 in (10.2 cm)	
Depth	2.9 in (7.4 cm)	
Radio	N/A	Bluetooth, Up to 100 meters/300 ft. in open air range/environment Serial Port & HID Profiles 2.402 to 2.480 GHz Adaptive Frequency Hopping (co-existence with 802.11 wireless networks) Basic Data Rate: 720 kbps Enhanced Data Rate (EDR) for image transfer.
Electrical Safety	Certified Pending to UL1950, CSA C22.2 No.950. EN60950/IC950	
Input Transient Protection	IEC 1000-4-(2,3,4,5,6,11)	
EMI	FCC Part 15 Class B, ICES-003 Class B European Union EMC Directive, Australian SMA, Taiwan EMC, Japan VCCI/MITI/Dentori	

Scanner Signal Descriptions

The signal descriptions in [Table 3-4](#) apply to the 10-pin RJ connector on the STB3578-C0007WR non-FIPS and STB3578-CF007WR FIPS cradles and are for reference only.

Table 3-4 *Cradle to Host Pin-outs*

Pin	IBM	RS-232	Keyboard Wedge	USB
1	Reserved	Reserved	Reserved	Jump to Pin 6
2	Power	Power	Power	Power
3	Ground	Ground	Ground	Ground
4	IBM_A(+)	TxD	KeyClock	Reserved
5	Reserved	RxD	TermData	D +
6	IBM_B(-)	RTS	KeyData	Jump to Pin 1
7	Reserved	CTS	TermClock	D -
8	Reserved	Reserved	Reserved	Reserved
9	Reserved	Reserved	Reserved	Reserved
10	Reserved	Reserved	Reserved	Reserved

The signal descriptions in [Table 3-5](#) apply to the STB3574-C100F7WW Industrial Ethernet FIPS cradle and are for reference only.

Table 3-5 *Scanner to Cradle Pin-outs*

Pin	Function
1	TXD+
2	TXD-
3	RXD+
4	Reserved
5	Reserved
6	RXD-
7	Reserved
8	Reserved

Figure 3-1 illustrates the positions of all cradle pins.

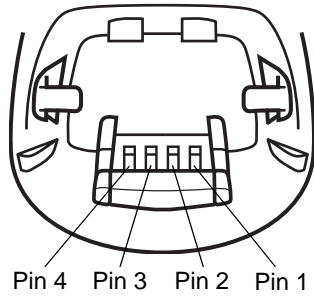


Figure 3-1 Cradle Pin Assignments

The signal descriptions in [Table 3-6](#) apply to the connector from the digital scanner to the cradle and are for reference only.

Table 3-6 Scanner to Cradle Pin-outs

Pin	Signal
1	VCC
2	CRADLE_TXD
3	CRADLE_RXD
4	GND

CHAPTER 4 RADIO COMMUNICATIONS

Introduction

This chapter provides information about the modes of operation and features available for wireless communication between digital scanners, cradles and hosts. The chapter also includes the parameters necessary to configure the digital scanner.

The digital scanner ships with the settings shown in the [Table 4-1 on page 4-2](#) (also see [Appendix A, Standard Default Parameters](#) for all host device and miscellaneous digital scanner defaults). If the default values suit requirements, programming is not necessary.

To set feature values, scan a single bar code or a short bar code sequence. The settings are stored in non-volatile memory and are preserved even when the digital scanner is powered down.

If not using a USB cable with the cradle, select a host type (see each host chapter for specific host information) after the power-up beeps sound. This is only necessary upon the first power-up when connected to a new host.

To return all features to default values, scan a bar code in [Default Parameters on page 5-4](#). Throughout the programming bar code menus, default values are indicated with asterisks (*).



* Indicates Default — ***Disable Pair on Contacts** — Feature/Option

Scanning Sequence Examples

In most cases, scan one bar code to set a specific parameter value.

Errors While Scanning

Unless otherwise specified, to correct an error during a scanning sequence, just re-scan the correct parameter.

Radio Communications Parameter Defaults

Table 4-1 lists the defaults for radio communication parameters. If you wish to change any option, scan the appropriate bar code(s) provided in this chapter.

✓ **NOTE** See *Appendix A, Standard Default Parameters* for all user preferences, hosts, symbologies, and miscellaneous default parameters.

Table 4-1 Radio Communication Default Table

Parameter	Default	Page Number
Bluetooth Host (Host Type)	Cradle Host	4-4
Bluetooth Friendly Name	Digital scanner name and serial number	4-7
Discoverable Mode	General	4-7
Apple iOS HID Feature	Disable	4-8
Android HID Feature	Disable	4-8
Country Keyboard Types (Country Code)	North American	4-10
HID Keyboard Keystroke Delay	No Delay (0 msec)	4-11
CAPS Lock Override	Disable	4-11
Ignore Unknown Characters	Enable	4-12
Emulate Keypad	Disable	4-12
Keyboard FN1 Substitution	Disable	4-13
Function Key Mapping	Disable	4-13
Simulated Caps Lock	Disable	4-14
Convert Case	No Case Conversion	4-14
Beep on Reconnect Attempt	Disable	4-15
Reconnect Attempt Interval	30 sec	4-16
Auto-reconnect in Bluetooth Keyboard Emulation (HID Slave) Mode	On Bar Code Data	4-17
Modes of Operation (Point-to-Point/Multipoint-to-Point)	Point-to-Point	4-19
Parameter Broadcast (Cradle Host Only)	Enable	4-20
Pairing Modes	Unlocked	4-21
Pairing on Contacts	Disable	4-22
FIPS Mode	Disable	4-24
Connection Maintenance Interval	15 min	4-25
Authentication	Disable	4-28

Table 4-1 Radio Communication Default Table (Continued)

Parameter	Default	Page Number
Variable Pin Code	Static	4-29
Encryption	Disable	4-30
Secure Simple Pairing IO Capability (SPP Server and SPP Master Host Mode Only)	No Input/No Output	4-31

Wireless Beeper Definitions

When the digital scanner scans the pairing bar code it issues various beep sequences indicating successful or unsuccessful operations. See [Table 4-2](#) for beep sequences that occur during pairing operations.

Table 4-2 Wireless Beeper Definitions

Beeper Sequence	Indication
Short low-high beeps	Digital scanner has paired with the cradle.
Short high-low beeps	Digital scanner has unpaired with the cradle. Note: When connected to a remote device using SPP or HID, if a disconnect beep sequence sounds immediately after scanning a bar code, check the host device to determine if it received the transmitted data. The digital scanner may have transmitted the last bar code scanned after losing the connection.
Long low-long high beeps	Unsuccessful pairing attempt. See Auto-reconnect Feature on page 4-15 .
Long low-long high-long low-long high beeps	Remote device rejected connection attempt, possibly due to an attempt to pair with a cradle that is already paired with the maximum number of digital scanners.
Four long low beeps	<ol style="list-style-type: none"> 1. A transmission error was detected in a scanned symbol. The data is ignored. This occurs if a unit is not properly configured. Check option setting. 2. When communicating with a cradle, the cradle acknowledges receipt of data. If the acknowledgment is not received, this transmission error beep sequence sounds. Data may still have been received by the host. Check the host system for receipt of transmitted data. If data was not received by the host, re-scan the bar code.
Five high beeps	Emitted every 5 seconds while a reconnection attempt is in progress. See Auto-reconnect Feature on page 4-15 .

Radio Communications Host Types

To set up the digital scanner for communication with a cradle, or to use standard Bluetooth profiles, scan the appropriate host type bar code below.

- Cradle Host (default) - Select this host type for digital scanner(s) to cradle operation. The digital scanner must then be paired to the cradle and the cradle communicates directly to the host via the host interface cable connection.
- Serial Port Profile (Master) - Select this host type for Bluetooth Technology Profile Support (see [page 4-6](#)). The digital scanner connects to the PC/host via Bluetooth and behaves like there's a serial connection. The digital scanner initiates the connection to the remote device and is the Master. Scan **Serial Port Profile (Master)**, then scan the **PAIR** bar code for the remote device. See [Pairing Bar Code Format on page 4-23](#) for information about creating a pairing bar code for a remote device.
- Serial Port Profile (Slave) - Select this host type for Bluetooth Technology Profile Support (see [page 4-6](#)). The digital scanner connects to the PC/host via Bluetooth and behaves like there's a serial connection. The digital scanner accepts incoming connection requested from a remote device and is the Slave. Scan **Serial Port Profile (Slave)** and wait for the incoming connection.
- Bluetooth Keyboard Emulation (HID Slave) - Select this host type for Bluetooth Technology Profile Support. (See [page 4-6](#) for Bluetooth Technology Profile Support and Master/Slave definitions.) The digital scanner connects to the PC/host via Bluetooth and behaves like a keyboard. The digital scanner accepts incoming connection requested from a remote device and is the slave. Scan **Bluetooth Keyboard Emulation (HID Slave)** and wait for the incoming connection.



NOTE 1. The digital scanner supports keyboard emulation over the Bluetooth HID profile. For detailed information, and HID host parameters, see [HID Host Parameters on page 4-8](#).

2. When the digital scanner is paired to the cradle in SPP Master or Cradle Host mode, the digital scanner automatically tries to reconnect to a remote device when a disconnection occurs that is due to the radio losing communication. For more information see [Auto-reconnect Feature on page 4-15](#).

Radio Communications Host Types (continued)



***Cradle Host**



Serial Port Profile (Master)



Serial Port Profile (Slave)



Bluetooth Keyboard Emulation (HID Slave)

Bluetooth Technology Profile Support

With Bluetooth Technology Profile Support, the cradle is not required for wireless communication. The digital scanner communicates directly to the host using Bluetooth technology. The digital scanner supports the standard Bluetooth Serial Port Profile (SPP) and HID Profiles which enable the digital scanner to communicate with other Bluetooth devices that support these profiles.

- SPP - the digital scanner connects to the PC/host via Bluetooth and performs like there's a serial connection.
- HID - the digital scanner connects to the PC/host via Bluetooth and performs like a keyboard.

Master/Slave Set Up

The digital scanner can be set up as a master or slave.

When the digital scanner is set up as a Slave, it is discoverable and connectable to other devices. When the digital scanner is set up as a Master, the Bluetooth address of the remote device to which a connection is requested is required. A pairing bar code with the remote device address must be created and scanned to attempt a connection to the remote device. See the [Pairing Bar Code Format on page 4-23](#) for information about creating a pairing bar code.

Master

When the digital scanner is set up as a Master (SPP), it initiates the radio connection to a slave device. Initiating the connection is done by scanning a pairing bar code for the remote device (see [Pairing Bar Code Format on page 4-23](#)).

Slave

When the digital scanner is set up as a Slave device (SPP or HID), the digital scanner accepts an incoming connection request from a remote device.

✓ **NOTE** The number of scanners is dependent on the host's capability.

Bluetooth Friendly Name

You can set a meaningful name for the digital scanner that appears in the application during device discovery. The default name is the digital scanner name followed by its serial number, e.g., **DS3578 123456789ABCDEF**. Scanning **Set Defaults** reverts the digital scanner to this name; use custom defaults to maintain the user-programmed name through a **Set Defaults** operation.

To set a new Bluetooth Friendly Name, scan the following bar code, then scan up to 23 characters from [Appendix E, Alphanumeric Bar Codes](#). If the name contains less than 23 characters, scan [End of Message on page E-7](#) after entering the name.



NOTE If your application allows you to set a device name, this takes precedence over the Bluetooth Friendly Name.



Bluetooth Friendly Name

Discoverable Mode

Select a discoverable mode based on the device initiating discovery:

- Select **General Discoverable Mode** when initiating connection from a PC.
- Select **Limited Discoverable Mode** when initiating connection from a mobile device (e.g., Zebra Q), and the device does not appear in General Discoverable Mode. Note that it can take longer to discover the device in this mode.

The device remains in Limited Discoverable Mode for 30 seconds, and green LEDs flash while in this mode. It is then non-discoverable. To re-active Limited Discoverable Mode, press the trigger.



***General Discoverable Mode**



Limited Discoverable Mode

HID Host Parameters

The digital scanner supports keyboard emulation over the Bluetooth HID profile. In this mode the digital scanner can interact with Bluetooth enabled hosts supporting the HID profile as a Bluetooth keyboard. Scanned data is transmitted to the host as keystrokes.

Following are the keyboard parameters supported by the HID host.

Apple iOS HID Feature

 
This option enables Apple iOS devices to open and close the iOS virtual keyboard by double-pressing the trigger.



NOTE When this feature is enabled, the digital scanner may be incompatible with non-Apple iOS devices.



*Disable



Enable

Android HID Feature

This option allows simple Bluetooth pairing to the Android without requiring a PIN code.



*Disable



Enable

HID Country Keyboard Types (Country Codes)



*North American Standard Keyboards



 
French Windows



German Windows



French Canadian Windows 98



French International



Spanish Windows

HID Country Keyboard Types (Country Codes) (continued)



Italian Windows



Swedish Windows



UK English Windows



Japanese Windows



French Canadian Windows 2000/XP



Portuguese/Brazilian Windows

HID Keyboard Keystroke Delay

This parameter sets the delay, in milliseconds, between emulated keystrokes. Scan a bar code below to increase the delay when the HID host requires a slower transmission of data.



***No Delay (0 msec)**



Medium Delay (20 msec)



Long Delay (40 msec)

HID CAPS Lock Override

When enabled, the case of the data is preserved regardless of the state of the caps lock key. This setting is always enabled for the "Japanese, Windows (ASCII)" keyboard type and can not be disabled.



***Do Not Override Caps Lock Key
(Disable)**



**Override Caps Lock Key
(Enable)**

HID Ignore Unknown Characters

Unknown characters are characters the host does not recognize. When **Send Bar Codes With Unknown Characters** is scanned, all bar code data is sent except for unknown characters, and no error beeps sound. When **Do Not Send Bar Codes With Unknown Characters** is scanned, bar codes containing at least one unknown character are not sent to the host, and an error beep sounds.



***Send Bar Codes With Unknown Characters
(Enable)**



**Do Not Send Bar Codes With Unknown Characters
(Disable)**

Emulate Keypad

When enabled, all characters are sent as ASCII sequences over the numeric keypad. For example, ASCII A is sent as "ALT make" 0 6 5 "ALT Break."



***Disable Keypad Emulation**



Enable Keypad Emulation

HID Keyboard FN1 Substitution

When enabled, this parameter allows replacement of any FN1 character in an EAN128 bar code with a Key Category and value chosen by the user. See [FN1 Substitution Values on page 5-44](#) to set the Key Category and Key Value.



***Disable Keyboard FN1 Substitution**



Enable Keyboard FN1 Substitution

HID Function Key Mapping

ASCII values under 32 are normally sent as control-key sequences. When this parameter is enabled, the keys in bold are sent in place of the standard key mapping (see [Table 10-2 on page 10-18](#)). Table entries that do not have a bold entry remain the same whether or not this parameter is enabled.



***Disable Keyboard FN1 Substitution**



Enable Function Key Mapping

Simulated Caps Lock

When enabled, the digital scanner inverts upper and lower case characters on the digital scanner bar code as if the Caps Lock state is enabled on the keyboard. This inversion is done regardless of the current state of the keyboard Caps Lock state.



***Disable Simulated Caps Lock**



Enable Simulated Caps Lock

Convert Case

When enabled, the scanner converts all bar code data to the selected case.



***No Case Conversion**



Convert All to Upper Case



Convert All to Lower Case

Auto-reconnect Feature

When in SPP Master or Cradle Host mode, the digital scanner automatically tries to reconnect to a remote device when a disconnection occurs that is due to the radio losing communication. This can happen if the digital scanner goes out of range with the remote device, or if the remote device powers down. The digital scanner tries to reconnect for the period of time specified by the Reconnect Attempt Interval setting. During that time the green LED continues to blink.

If the auto-reconnect process fails due to page timeouts, the digital scanner's LED is red and sounds a page timeout beep (long low/long high) and enters low power mode. The auto-reconnect process can be re-started by pulling the digital scanner trigger.

If the auto-reconnect process fails because the remote device rejects the connection attempt, the digital scanner sounds a connection reject beep sequence (see [Wireless Beeper Definitions on page 4-3](#)) and deletes the remote pairing address. If this happens, a pairing bar code must be scanned to attempt a new connection to the remote device.

- ✓ **NOTE** If a bar code is scanned while the auto-reconnect sequence is in process, a transmission error beep sequence sounds and the data is not transmitted to the host. After a connection is reestablished, normal scanning operation returns. For error beep sequence definitions, see [Beeper Definitions on page 2-1](#).

The digital scanner has memory available for storing a remote Bluetooth address for each Master mode (SPP, Cradle). When switching between these modes, the digital scanner automatically tries to reconnect to the last device it was connected to in that mode.

- ✓ **NOTE** Switching between Bluetooth host types by scanning a host type bar code ([page 4-4](#)) causes the radio to be reset. Scanning is disabled during this time. It takes several seconds for the digital scanner to re-initialize the radio at which time scanning is enabled.

Reconnect Attempt Beep Feedback

When a digital scanner disconnects as it goes out of range, it immediately attempts to reconnect. While the digital scanner attempts to reconnect, the green LED continues to blink. If the auto-reconnect process fails, the digital scanner emits a page timeout beep (long low/long high) and stops blinking the LED. The process can be restarted by pulling the trigger.

The Beep on Reconnect Attempt feature is disabled by default. When enabled, the digital scanner emits 5 short high beeps every 5 seconds while the reconnection attempt is in progress.

Scan a bar code below to enable or disable Beep on Reconnect Attempt.



*Disable Beep on Reconnect Attempt



Enable Beep on Reconnect Attempt

Reconnect Attempt Interval

When a digital scanner disconnects as it goes out of range, it immediately attempts to reconnect for the default time interval of 30 seconds. This time interval can be changed to one of the following options:

- 30 seconds
- 1 minute
- 5 minutes
- 30 minutes
- 1 hour
- Indefinitely.

To set the Reconnect Attempt Interval, scan one of the bar codes below.



***Attempt to Reconnect for 30 Seconds**



Attempt to Reconnect for 1 Minute



Attempt to Reconnect for 5 Minutes



Attempt to Reconnect for 30 Minutes



Attempt to Reconnect for 1 Hour

 


Attempt to Reconnect Indefinitely


Auto-reconnect in Bluetooth Keyboard Emulation (HID Slave) Mode

In Bluetooth Keyboard Emulation (HID Slave) mode, select a re-connect option for when the digital scanner loses its connection with a remote device:

- **Auto-reconnect on Bar Code Data:** The digital scanner auto-reconnects when you scan a bar code. With this option, a delay can occur when transmitting the first characters. The digital scanner sounds a decode beep upon bar code scan, followed by a connection, a page timeout, a rejection beep, or a transmission error beep. Select this option to optimize battery life on the digital scanner and mobile device. Note that auto-reconnect does not occur on rejection and cable unplug commands.
- **Auto-reconnect Immediately:** When the digital scanner loses connection, it attempts to reconnect. If a page timeout occurs, the digital scanner attempts reconnect on a trigger pull. Select this option if the digital scanner's battery life is not an issue and you do not want a delay to occur when the first bar code is transmitted. Note that auto-reconnect does not occur on rejection and cable unplug commands.
- **Disable Auto-reconnect in Bluetooth Keyboard Emulation (HID Slave) Mode:** When the digital scanner loses connection, you must re-establish it manually.



*Auto-reconnect on Bar Code Data

 

Auto-reconnect Immediately



Disable Auto-reconnect in
Bluetooth Keyboard Emulation (HID Slave) Mode

Out of Range Indicator

An out of range indicator can be set by scanning [Enable Beep on Reconnect Attempt on page 4-15](#) and extending the time using the [Reconnect Attempt Interval on page 4-16](#).

For example, with Beep on Reconnect Attempt disabled while the digital scanner loses radio connection when it is taken out of range, the digital scanner attempts to reconnect silently during the time interval set by scanning a Reconnect Attempt Interval.

When Beep on Reconnect Attempt is enabled, the digital scanner emits 5 high beeps every 5 seconds while the reconnection attempt is in progress. If the Reconnect Attempt Interval is adjusted to a longer period of time, such as 30 minutes, the digital scanner emits 5 high beeps every 5 seconds for 30 minutes providing an out of range indicator.

Scanner(s) to Cradle Support

- ✓ **NOTE** Customers who purchased STB3578 and/or FLB3578 cradles prior to February 1, 2010 (manufacturing date) and plan to use them in radio communication mode with the DS3578 must download 123Scan² (see [Chapter 13, 123Scan2](#)) and update the digital scanner to the latest firmware revision.

Modes of Operation

The charging cradle with radio supports two radio communication modes of operation, allowing the digital scanner to communicate wirelessly:

- Point-to-Point
- Multipoint-to-Point.

Point-to-Point Communication

In Point-to-Point communication mode, the cradle allows one digital scanner to connect to it at a time. In this mode, the digital scanner is paired to the cradle either by insertion into the cradle (if pairing on contacts is enabled, [page 4-22](#)), or by scanning the **PAIR** bar code on the cradle. Communication can be locked, unlocked (default), or in a lock override state (see [Pairing Modes on page 4-21](#)). In locked mode, locking intervals must be set by scanning a connection maintenance interval bar code beginning on [page 4-25](#).

To activate this mode of operation, scan **Point-to-Point**.

Multipoint-to-Point Communication

In Multipoint-to-Point communication mode, up to three digital scanners can be paired to one cradle when using a non-FIPS digital scanner and cradle. When using a FIPS enabled digital scanner and FIPS enabled cradle, you can pair up to seven digital scanners. See [on page 1-9](#).

To activate this mode, the first digital scanner connected to the cradle must scan the **Multipoint-to-Point** bar code. This mode allows a parameter broadcast ([page 4-20](#)) that clones all digital scanners paired to the cradle so only one digital scanner needs to be programmed.

To select Point-to-Point or Multipoint-to-Point mode, scan the appropriate bar code.



Multipoint-to-Point Mode



***Point-to-Point Mode**

Parameter Broadcast (Cradle Host Only)

When in multipoint-to-point mode, enable Parameter Broadcast to broadcast all parameter bar codes scanned to all other digital scanners in the piconet. If disabled, parameter bar codes are processed by the individual digital scanner only, and the digital scanner ignores parameters broadcast from other digital scanners or from the cradle.



***Enable Parameter Broadcast**



Disable Parameter Broadcast

Pairing

Pairing is the process by which a digital scanner initiates communication with a cradle. Scanning **Multipoint-to-Point** activates multi scanner-to-cradle operation and allows up to three digital scanners to pair to when using a non-FIPS digital scanner and cradle. When using a FIPS enabled digital scanner and FIPS enabled cradle, you can pair up to seven digital scanners. See [on page 1-9](#). The cradle includes a pairing bar code.

To pair the digital scanner with the cradle, scan the pairing bar code on the cradle. A high/low/high/low beep sequence indicates that the pairing bar code was decoded. When a connection between the cradle and digital scanner is established, a low/high beep sounds.



- NOTE**
1. The pairing bar code that connects the digital scanner to a cradle is unique to each cradle.
 2. Do not scan data or parameters until pairing completes.
 3. When the digital scanner is paired to the cradle in SPP Master or Cradle Host mode, the digital scanner automatically tries to reconnect to a remote device when a disconnection occurs that is due to the radio losing communication. For more information see [Auto-reconnect Feature on page 4-15](#).

Pairing Modes

When operating with the cradle, two modes of pairing are supported:

- **Locked Pairing Mode** - When a cradle is paired (connected) to the digital scanner (or to three digital scanners in Multipoint-to-Point mode), any attempt to connect a different digital scanner, by either scanning the **PAIR** bar code on the cradle or by inserting it into the cradle with the pairing on contacts feature enabled ([page 4-22](#)), is rejected. The currently connected digital scanner(s) maintain connection. In this mode, you must set a [Connection Maintenance Interval on page 4-25](#).
- **Unlocked Pairing Mode** - Pair (connect) a new digital scanner to a cradle at any time by either scanning the **PAIR** bar code on the cradle or by inserting it into the cradle with the pairing on contacts feature enabled. This unpairs the previous digital scanner from the cradle.

✓ **NOTE** In Multipoint-to-Point mode, pairing a 4th digital scanner while in Unlocked mode replaces any disconnected (out of range) digital scanner. However, if three scanners are actively connected to the cradle, a 4th digital scanner cannot connect regardless of the pairing mode.

To set the cradle pairing mode, scan the appropriate bar code below.



***Unlocked Pairing Mode**



Locked Pairing Mode

Lock Override

Lock Override overrides a locked digital scanner base pairing and connects a new digital scanner. In Multipoint-to-Point mode, this unpairs any disconnected (out of range) digital scanner first, in order to connect the new digital scanner.

To use **Lock Override**, scan the bar code below, followed by the pairing bar code on the cradle.



Lock Override

Pairing Methods

There are two pairing methods. The default method allows the digital scanner and cradle to pair (connect) when the pairing bar code on the cradle is scanned. A second method pairs the digital scanner and cradle when the digital scanner is inserted in the cradle. To enable this feature, scan **Enable Pair On Contacts** below. With this feature enabled it is not necessary to scan the pairing bar code on the cradle. If the pairing is successful, a low/high connection beep sequence sounds a few seconds after the digital scanner is placed in the cradle. See [Wireless Beeper Definitions on page 4-3](#) for other beep sequences.

To enable or disable pairing on contacts, scan the appropriate bar code below.



Enable Pair On Contacts



***Disable Pair on Contacts**

Unpairing

Unpair the digital scanner from the cradle or PC/host to make the cradle available for pairing with another digital scanner. Scan the bar code below to disconnect the digital scanner from its cradle/PC host.

An unpairing bar code is also included in the *DS3578 Quick Start Guide*.



Unpairing

Pairing Bar Code Format

When the digital scanner is configured as an SPP Master, you must create a pairing bar code for the remote Bluetooth device to which the digital scanner can connect. You must know the Bluetooth address of the remote device. Pairing bar codes are Code 128 bar codes and are formatted as follows:

<Fnc 3>Bxxxxxxxxxxx

where:

- **B** (or **LNKB**) is the prefix
- **xxxxxxxxxxx** represents the 12-character Bluetooth address.

Pairing Bar Code Example

If the remote device to which the digital scanner can connect has a Bluetooth address of 11:22:33:44:55:66, then the pairing bar code is:



FIPS Mode

Parameter # F1h E0h

The Federal Information Processing Standard (FIPS) 140-2 is a U.S. government computer security standard used to accredit cryptographic modules. FIPS enabled DS3578 digital scanners and cradles offer this secure mode of operation.

To enable the FIPS mode of operation (enabled by default), scan the **Enable FIPS** bar code. The digital scanner will attempt to establish a secure session with the cradle to which it is connected. On success, the digital scanner will light a yellow LED on every trigger pull to signal that all data will be transmitted over Bluetooth in a secure fashion. On failure, the digital scanner will sound transmission failure error message on every attempt to transmit data.

To disable the FIPS mode, scan the **Disable FIPS** bar code at any time.



Enable FIPS
(01h)



***Disable FIPS**
(00h)

Connection Maintenance Interval

✓ **NOTE** The Connection Maintenance Interval only applies in locked pairing mode (see [page 4-21](#)).

When a scanner disconnects from a cradle due to a Link Supervision Timeout, the digital scanner immediately attempts to reconnect to the cradle for 30 seconds. If the auto-reconnect process fails, it can be restarted by pulling the digital scanner trigger.

To guarantee that a disconnected digital scanner can reconnect when it comes back in range, the cradle reserves the connection for that digital scanner for a period of time defined by the Connection Maintenance Interval. If the cradle is supporting the maximum three digital scanners and one digital scanner disconnects, a fourth digital scanner cannot pair to the cradle during this interval. To connect another digital scanner, either wait until the connection maintenance interval expires then scan the **PAIR** bar code on the cradle with the new digital scanner; or scan **Lock Override** ([page 4-21](#)) with the new scanner then scan the **PAIR** bar code on the cradle.

✓ **NOTE** When the cradle supports the maximum number of digital scanners, it stores the remote pairing address of each digital scanner in memory regardless of the digital scanner condition (e.g., discharged battery). When you want to change the digital scanners paired to the cradle, unpair each digital scanner currently connected to the cradle by scanning the [Unpairing](#) bar code prior and reconnect each appropriate digital scanner by scanning the **PAIR** bar code on the cradle.

Connection Maintenance Interval options are:

- 15 minutes
- 30 minutes
- One hour
- Two hours
- Four hours
- Eight hours
- 24 hours
- Indefinitely.

Considerations

The system administrator determines the Connection Maintenance Interval. A shorter interval allows new users to gain access to abandoned connections more quickly, but causes problems if users leave the work area for extended periods. A longer interval allows existing users to leave the work area for longer periods of time, but ties up the system for new users.

To avoid this conflict, users who are going off-shift can scan the unpair bar code on [page 4-22](#) to ignore the Connection Maintenance Interval and make the connection immediately available.

To set the Connection Maintenance Interval, scan one of the bar codes below.



***Set Interval to 15 Minutes**



Set Interval to 30 Minutes



Set Interval to 60 Minutes



Set Interval to 2 Hours

Connection Maintenance Interval (continued)



Set Interval to 4 Hours



Set Interval to 8 Hours



Set Interval to 24 Hours



Set Interval to Forever

Bluetooth Security

The digital scanner supports Bluetooth Authentication and Encryption. Authentication can be requested by either the remote device or the digital scanner. When Authentication is requested, the digital scanner uses its programmed PIN code to generate a link key. The digital scanner stores this link key upon pairing, so you do not have to re-enter the PIN code when moving in and out of range, switching profiles, or switching between devices (e.g., between the cradle and the application).

Once Authentication is complete, either device may then negotiate to enable Encryption.

✓ **NOTE** A remote device can still request Authentication.

Authentication

To force Authentication with a remote device (including the cradle), scan the **Enable Authentication** bar code below. To prevent the digital scanner from forcing Authentication, scan the **Disable Authentication** bar code below.



Enable Authentication



***Disable Authentication**

PIN Code

To set the PIN code (e.g., password) on the digital scanner, scan the bar code below followed by five alphanumeric programming bar codes from [Appendix E, Alphanumeric Bar Codes](#). The default PIN code is **12345**.

If the digital scanner communicates with a cradle with security enabled, synchronize the PIN codes on the digital scanner and cradle. To achieve this, connect the digital scanner to the cradle when setting the PIN codes. If the digital scanner is not connected to a cradle, the PIN code change only takes effect on the digital scanner. If security is required between the digital scanner and cradle, and the PIN codes do not match, pairing fails. If the PIN codes are not synchronized, re-synchronize them by disabling security, establishing a connection to the cradle, and then programming a new PIN code.



Set PIN Code

Variable PIN Code

The default PIN code is the user-programmed Static PIN Code. Typically, however, HID connections require entering a Variable PIN Code. If, when attempting connection, the application presents a text box that includes a PIN, scan the **Variable PIN Code** bar code, then re-attempt connection. When you hear a beep indicating the digital scanner is waiting for an alphanumeric entry, enter the provided variable PIN using the [Alphanumeric Keyboard on page E-1](#), then scan [End of Message on page E-7](#) if the code is less than 16 characters. The digital scanner discards the variable PIN code after connection.



***Static PIN Code**



Variable PIN Code

Encryption

✓ **NOTE** Authentication must be performed before Encryption can take effect.

To set up the digital scanner for enabling Encryption, scan **Enable Encryption**. To prevent the digital scanner from enabling Encryption, scan **Disable Encryption**. When enabled, the radio encrypts data.



Enable Encryption



***Disable Encryption**


Secure Simple Pairing IO Capability (SPP Server and SPP Master Host Mode Only)

Bluetooth 2.1 uses the *Secure Simple Pairing* method to authenticate devices and create an encryption key. As a part of that algorithm, the device must state its IO capabilities. When in Serial Profile Host (master or slave), the default is **No Input/No Output** and no user interaction is required; however, a device may prompt the user to confirm the pairing process.

Keyboard Only (passkey entry) is used between a device with a display and a device with numeric keypad entry (such as a keyboard), or two devices with numeric keypad entry. In the first case, the display shows a 6-digit numeric code to the user, who then enters the code on the keypad. In the second case, the user of each device enters the same 6-digit number.

✓ **NOTE** Use this option to connect to an Android tablet.

 - **No Input/No Output:** Least amount of security (may not be acceptable for some devices).
- **Keyboard Only:** Higher level of security.



* No Input/No Output



Keyboard Only

Connecting an iOS or Android Product With the Digital Scanner

Perform the following steps on each device to establish a link.

HID Keyboard Emulation

On the DS3578, scan [Bluetooth Keyboard Emulation \(HID Slave\) on page 4-5](#). Next:

- On an iOS/iPad/iPhone, select *Settings > General > Bluetooth* and turn Bluetooth *On*. Choose the DS3578 digital scanner from the list of discovered devices. This establishes a link allowing scanning into any application with keyboard entry.
- On an Android/ Zebra ET1/Droid, select *Settings > Wireless & networks > Bluetooth* (to turn Bluetooth on, if not already on). Select *Bluetooth Settings* and choose the DS3578 digital scanner from the list of discovered devices. (The DS3578 digital scanner normally displays as DS3578 - xxxxxx, where xxxxxx is the serial number.)



IMPORTANT Android devices, specifically the Zebra ET1, may require scanning a PIN to connect. If so, a PIN displays on the device. Scan [Variable PIN Code on page 4-29](#) then re-attempt connection. A beep indicates the scanner is waiting for PIN entry. Scan the PIN using the [Alphanumeric Keyboard on page E-1](#). To delete incorrect scanned entries, scan [Cancel on page E-7](#).

For more information, see [Variable PIN Code on page 4-29](#).

CHAPTER 5 USER PREFERENCES

Introduction

This chapter describes each user preference feature and provides the programming bar codes for selecting these features for the digital scanner.

The digital scanner ships with the settings shown in the [Table 5-1](#) (also see [Appendix A, Standard Default Parameters](#) for all host device and miscellaneous digital scanner defaults). If the default values suit the requirements, programming is not necessary.

Set feature values by scanning single bar codes or short bar code sequences. The settings are stored in non-volatile memory and are preserved when the digital scanner powers down.

 
The digital scanner communicates with the host through the cradle. During digital scanner setup, the digital scanner is paired with a cradle, which is connected to the host through one of several interfaces (see [Pairing on page 1-9](#) and the applicable host interface chapter). Each cradle can pair with up to four digital scanners.

✓ **NOTE** Refer to the *STB3574 Industrial Ethernet Cradle Developer Guide*, p/n MN-002694-01, for information about Ethernet settings.

If not using a USB cable, select the host type (see the specific host chapter) after the digital scanner emits power-up beeps. This is only done upon the first power-up when connecting to a new host.

✓ **NOTE** Disconnect the power supply before changing host cables or the digital scanner may not recognize the new host.

To return all features to their default values, scan a [Default Parameters](#) bar code on [page 5-4](#). Throughout the programming bar code menus, default values are indicated with asterisks (*).



* Indicates Default — ***Medium Tone** — Feature/Option
(1) — Option Value

Scanning Sequence Examples

In most cases scanning one bar code sets the parameter value. For example, to set the beeper tone to high, scan the High Frequency (beeper tone) bar code listed under [Beeper Tone on page 5-7](#). The digital scanner issues a fast warble beep and the LED turns green, signifying a successful parameter entry.

Other parameters require scanning several bar codes. See these parameter descriptions for this procedure.

Errors While Scanning

Unless otherwise specified, to correct an error during a scanning sequence, just re-scan the correct parameter.

User Preferences/Miscellaneous Option Parameter Defaults

[Table 5-1](#) lists the defaults for preferences parameters. To change the default values:

- Scan the appropriate bar codes in this guide. These new values replace the standard default values in memory. To recall the default parameter values, see [Default Parameters on page 5-4](#).
- Configure the digital scanner using the 123Scan² configuration program (see [123Scan2 on page 13-1](#)).

✓ **NOTE** See [Appendix A, Standard Default Parameters](#) for all user preferences, hosts, symbologies, and miscellaneous default parameters.

Table 5-1 *User Preferences Parameter Defaults*

Parameter	Parameter Number	Default	Page Number
User Preferences			
Set Default Parameter	N/A	Set Defaults	5-4
Parameter Bar Code Scanning	236	Enable	5-5
Beep After Good Decode	56	Enable	5-5
Suppress Power Up Beeps	721	Do Not Suppress	5-6
Beeper Tone	145	Medium	5-7
Beeper Volume	140	High	5-8
Beeper Duration	628	Medium	5-9
Beep on Insertion	288	Enable	5-9
Decode Pager Motor	613	Enable	5-10
Decode Pager Motor Duration	626	500 msec	5-10
Trigger Mode	138	Level	5-12
Batch Mode	544	Normal (Do Not Batch Data)	5-13
Time Delay to Reduced Power Mode	146	100 msec	5-15
Timeout to Low Power Mode from Auto Aim	729	15 Sec	5-17

Table 5-1 *User Preferences Parameter Defaults (Continued)*

Parameter	Parameter Number	Default	Page Number
Picklist Mode	402	Disabled Always	5-18
DPM Scanning	521	Enable	5-19
Mobile Phone/Display Mode	716	Disable	5-20
PDF Prioritization	719	Disable	5-21
PDF Prioritization Timeout	720	200 ms	5-21
Continuous Bar Code Read	649	Disable	5-22
Unique Bar Code Reporting	723	Disable	5-22
Decode Session Timeout	136	9.9 Sec	5-23
Timeout Between Decodes, Same Symbol	137	0.5 Sec	5-23
Fuzzy 1D Processing	514	Enable	5-24
Decode Mirror Images (Data Matrix Only)	537	Auto	5-25
Decode Aiming Pattern	306	Enable	5-26
Decoding Illumination	298	Enable	5-27
Torch Mode	747	Enable	5-28
Smart LED Mode	748	Enable	5-29
Focus Mode	422	Auto-Ranging	5-30
Multicode Mode	677	Disable	5-31
Multicode Expression	661	1	5-32
Multicode Mode Concatenation	717	Disable	5-37
Multicode Concatenation Symbology	722	Concatenate as PDF417	5-38
Miscellaneous Options			
Transmit Code ID Character	45	None	5-41
Prefix Value	99, 105	7013 <CR><LF>	5-42
Suffix 1 Value Suffix 2 Value	98, 104 100, 106	7013 <CR><LF>	5-42
Scan Data Transmission Format	235	Data as is	5-42
FN1 Substitution Values	103, 109	Set	5-44
Transmit "No Read" Message	94	Disable	5-45
Unsolicited Heartbeat Interval	1118	Disable	5-46
Dump Scanner Parameters	N/A		5-47
IUD Parsing	740	Disable	5-48

User Preferences

Default Parameters

The scanner can be reset to two types of defaults: factory defaults or custom defaults. Scan the appropriate bar code below to reset the scanner to its default settings and/or set the scanner's current settings as the custom default.

- **Restore Defaults** - Resets all default parameters as follows:
 - If custom default values were configured (see **Write to Custom Defaults**), the custom default values are set for all parameters each time the **Restore Defaults** bar code below is scanned.
 - If no custom default values were configured, the factory default values are set for all parameters each time the **Restore Defaults** bar code below is scanned. (For factory default values, see [Appendix A, Standard Default Parameters.](#))
- **Set Factory Defaults** - Scan the **Set Factory Defaults** bar code below to eliminate all custom default values and set the scanner to factory default values (For factory default values, see [Appendix A, Standard Default Parameters.](#))
- **Write to Custom Defaults** - Custom default parameters can be configured to set unique default values for all parameters. After changing all parameters to the desired default values, scan the **Write to Custom Defaults** bar code below to configure custom defaults.



***Restore Defaults**



Set Factory Defaults



Write to Custom Defaults

Parameter Bar Code Scanning

Parameter # 236

To disable the decoding of parameter bar codes, including the **Set Defaults** parameter bar codes, scan the **Disable Parameter Scanning** bar code below. To enable decoding of parameter bar codes, scan **Enable Parameter Scanning**.



*Enable Parameter Bar Code Scanning
(1)



Disable Parameter Bar Code Scanning
(0)

Beep After Good Decode

Parameter # 56

Scan a bar code below to select whether or not the digital scanner beeps after a good decode. If selecting **Do Not Beep After Good Decode**, the beeper still operates during parameter menu scanning and to indicate error conditions.



*Beep After Good Decode
(Enable)
(1)



Do Not Beep After Good Decode
(Disable)
(0)

Suppress Power Up Beeps

Parameter # 721

Scan a bar code below to select whether or not to suppress digital scanner beeps upon power up.



***Do Not Suppress Power Up Beeps
(0)**



**Suppress Power Up Beeps
(1)**

 
Beeper Tone

Parameter # 145


To select a decode beep frequency (tone), scan one of the following bar codes.




Off
(3)




Low Tone
(2)

 

*Medium Tone
(1)

 

High Tone
(0)

 

Medium to High Tone (2-tone)
(4)

Beeper Volume

Parameter # 140

To select a beeper volume, scan the **Low Volume**, **Medium Volume**, or **High Volume** bar code.



Low Volume
(2)



Medium Volume
(1)



***High Volume**
(0)

 
Beeper Duration

Parameter # 628


To select the duration for the beeper, scan one of the following bar codes.



**Short
(0)**



*** Medium
(1)**

 

**Long
(2)**

Beep on Insertion

Parameter # 288

When a digital scanner is inserted into a cradle and detects power, it emits a short low beep. This feature is enabled by default.

To enable or disable beeping on insertion, scan the appropriate bar code below.



***Enable Beep on Insertion**



 
Disable Beep on Insertion

Decode Pager Motor


Parameter # 613

The scanner includes a pager motor which, when enabled, vibrates the scanner for a period of time when a successful decode occurs.

Scan a bar code below to enable or disable the pager motor. If enabled, scan the appropriate bar code to set the period of time in which to vibrate the scanner (see [Decode Pager Motor Duration](#) below).




Pager Motor Disable
(0)

 

*Pager Motor Enable
(1)

Decode Pager Motor Duration

 Parameter # 626



150 msec
(15)



200 msec
(20)

 
Decode Pager Motor Duration (continued)



250 msec
(25)



300 msec
(30)



400 msec
(40)



*500 msec
(50)



600 msec
(60)



 
750 msec
(75)

Trigger Mode

Parameter # 138

Select one of the following trigger modes for the digital scanner.


- **Level (Standard)** - Upon trigger pull, an aiming dot appears for a programmable duration of time. After this time, the aiming dot changes to a standard laser scanning beam for a full decode session. The laser scanning beam stays on until the [Decode Session Timeout on page 5-23](#) occurs, a decode occurs, or the trigger is released. If the trigger is released before the timeout expires, the laser shuts off and no decode occurs.
- **Two Stage Option 1 (DS3578-ER only)** - Upon trigger pull, an aiming dot appears. When the trigger is released, the aiming dot changes to a standard laser scanning beam for a full decode session. The laser scanning beam stays on for one-third of the currently configured decode timeout. If the trigger is pulled again while in a decode session, the scanner beam returns to an aiming dot.
- **Two Stage Option 2 (DS3578-ER only)** - Upon trigger pull, an aiming dot appears. When the trigger is released, the aiming dot turns off. Pulling the trigger twice quickly turns on the standard laser scanning beam for a full decode session. The laser scanning beam stays on until the [Decode Session Timeout](#) occurs, a decode occurs, or the trigger is released.
- **Auto Aim (DS3578-SR/HD/DP only)** - The digital scanner's aiming pattern is consistently on when in auto aim mode. A trigger pull activates decode processing. After 5 seconds of inactivity the aiming pattern shuts off. Then, after an additional time period where no activity occurs, the digital scanner enters low power mode to conserve battery power, and remains in low power mode until a trigger pull. See [Timeout to Low Power Mode from Auto Aim on page 5-17](#) to set this timeout value.



* Level (Standard)
(0)



 Two Stage Option 1 (DS3578-ER only)
(14)



Two Stage Option 2 (DS3578-ER only)
(15)



Auto Aim (DS3578-SR/HD/DP only)
(9)

Batch Mode

Parameter # 544

The digital scanner supports three versions of batch mode. When the digital scanner is configured for any of the batch modes, it attempts to store bar code data (not parameter bar codes) until transmission is initialized, or the maximum number of bar codes are stored. When a bar code is saved successfully, a good decode beep sounds and the LED flashes green. If the digital scanner is unable to store a new bar code, a low/high/low/high out of memory beep sounds. (See pages 2-1, 2-4 and 4-3 for all beeper and LED definitions.)

In all modes, calculate the amount of data (number of bar codes) the digital scanner can store as follows:

Number of storable bar codes = 30,720 bytes of memory / (number of characters in the bar code + 3).

- ✓ **NOTE** If the batch mode selection is changed while there is batched data, the new batch mode will take effect only after all the previously batched data is sent.

Modes of Operation

- **Normal (default)** - Do not batch data. The digital scanner attempts to transmit every scanned bar code.
- **Out of Range Batch Mode** - The digital scanner starts storing bar code data when it loses its connection to a remote device (for example, when a user holding the digital scanner walks out of range). Data transmission is triggered by reestablishing the connection with the remote device (for example, when a user holding the digital scanner walks back into range).
- **Standard Batch Mode** - The digital scanner starts storing bar code data after **Enter Batch Mode** is scanned. Data transmission is triggered by scanning **Send Batch Data**.

- ✓ **NOTE** Transmission is halted if the connection to the remote device is lost.

- **Cradle Contact Batch Mode** - The digital scanner starts storing bar code data when **Enter Batch Mode** is scanned. Data transmission is triggered by insertion of the digital scanner into the cradle.

- ✓ **NOTE** If the digital scanner is removed from the cradle during batch data transfer, transmission halts until the digital scanner is re-inserted in the cradle.

In all modes, transmissions are halted if the digital scanner is moved out of range. The digital scanner resumes when it is back in range. If a bar code is scanned while batch data is transmitted it is appended to the end of the batched data; parameter bar codes are not stored.

Batch Mode (continued)



***Normal**
(0)



Out of Range Batch Mode
(1)



Standard Batch Mode
(2)



Cradle Contact Batch Mode
(3)



Enter Batch Mode



Send Batch Data

Time Delay to Reduced Power Mode

Parameter # 146

 
This parameter sets the time it takes the digital scanner to enter reduced power mode after any scanning activity. Scan the appropriate bar code below to set the time.



***100 msecs**
(65)



500 msecs
(69)




1 sec
(17)



2 secs
(18)

 
Time Delay to Reduced Power Mode (continued)



3 secs
(19)



 4 secs
(20)



5 secs
(21)

Timeout to Low Power Mode from Auto Aim

Parameter # 729

This parameter sets the time the digital scanner remains in auto aim before entering low power mode. See [Trigger Mode on page 5-12](#) for an explanation of auto aim mode.



Disabled
(0)



5 secs
(85)



***15 secs**
(11)



30 secs
(13)



1 minute
(17)

Picklist Mode

Parameter # 402

 
Picklist mode enables the digital scanner to decode only bar codes that are aligned under the laser crosshair. Select one of the following picklist modes for the digital scanner:

Disabled Always - Picklist mode is always disabled.

Enabled in Hand-Held Mode - Picklist mode is enabled in hand-held mode.



***Disabled Always
(0)**



**Enabled in Hand-Held Mode
(1)**

- ✓ **NOTE** The DS3578-DP (non-FIPS; DS3578-DP20005WR) **Does Not** support Picklist Mode. However, the DS3578-DP with FIPS (DS3578-DP2F005WR) **Does** support Picklist Mode
- ✓ **NOTE** Picklist Mode temporarily over-rides the Disable Decode Aiming Pattern parameter. The Decode Aiming Pattern can not be Disabled when the following parameter settings are selected:
 - Smart LED Mode is set to Enable (DS3578-ER configuration)
 - Focus Mode is set to Auto-Ranging (DS3578-ER configuration)
 - Picklist Mode is set to Enable (DS3578-ER and DS3578-SR configurations)

DPM Scanning

Parameter # 521

Unlike bar codes that are typically printed on labels, a direct part mark (DPM) is a symbol that is marked directly on an item's surface for permanent identification. These symbols are marked using methods such as laser etching and dot peening (see [Figure 2-4 on page 2-6](#) for an example of a dot peen symbol). The DS3578-DP (DPM) reader scans these types of symbols.

- ✓ **NOTE** When the DS3578-DP digital scanner is DPM enabled, the digital scanner reads all symbols including DPM, 1D, PDF417, etc. If you do not require DPM reading, scan **Disable DPM Scanning** to ensure optimum scanner performance.

If you enable **DPM Scanning**, disable [Picklist Mode on page 5-18](#) when scanning a DPM bar code. Picklist performance is not guaranteed for DPM bar codes.

Also, if you enable DPM Scanning, the scanner behaves as if the **Data Matrix Inverse Autodetect** setting is selected. When you disable DPM Scanning, the previous (user-selected) **Data Matrix Inverse** setting remains in effect. See [Data Matrix Inverse on page 12-73](#).

To configure the DS3578-DP digital scanner for DPM reading:

1. If you disabled DPM scanning in the DS3578-DP digital scanner, scan **Enable DPM Scanning** below.
2. Before scanning a DPM bar code, ensure you enabled [Data Matrix on page 12-73](#).



***Enable DPM Scanning
(1)**



**Disable DPM Scanning
(0)**

- ✓ **NOTE** These DPM scanning parameters are for use with the DS3578-DP (DS3578-DP20005WR and DS3578-DS2F005WR) configurations only.

Mobile Phone/Display Mode

Parameter # 716

Select **Enable Mobile Phone/Display Mode** to improve bar code reading performance off mobile phones and electronic displays.



***Disable Mobile Phone/Display Mode
(0)**



**Enable Mobile Phone/Display Mode
(1)**

PDF Prioritization

Parameter # 719

Enable this feature to delay decoding a 1D bar code (Code 128) by the value specified in [PDF Prioritization Timeout](#). During that time the digital scanner attempts to decode a PDF417 symbol (e.g., on a US driver's license), and if successful, reports this only. If it does not decode (can not find) a PDF417 symbol, it reports the 1D symbol after the timeout. The 1D symbol must be in the device's field of view for the digital scanner to report it. This parameter does not affect decoding other symbologies..



 
NOTE

The 1D Code 128 bar code lengths include the following:

- 7 to 10 characters
- 14 to 17 characters
- 27 to 28 characters

In addition, a Code 39 bar code with the following lengths are considered to potentially be part of a US driver's license:

- 8 characters
- 12 characters



***Disable PDF Prioritization
(0)**



**Enable PDF Prioritization
(1)**

PDF Prioritization Timeout

Parameter # 720

When [PDF Prioritization](#) is enabled, this timeout specifies how long the digital scanner attempts to decode a PDF417 symbol before reporting the 1D bar code in the field of view.

Scan the following bar code, then scan four digits from [Appendix D, Numeric Bar Codes](#) that specify the timeout in milliseconds. For example, to enter 400 ms, scan the following bar code, then scan 0400. The range is 0 to 5000 ms, and the default is 200 ms.



PDF Prioritization Timeout

Continuous Bar Code Read

 
Parameter # 649

Enable this to report every bar code while the trigger is pressed.

- ✓ **NOTE** Zebra strongly recommends enabling [Picklist Mode on page 5-18](#) with this feature. Disabling Picklist Mode can cause accidental decodes when more than one bar code is in the imaging engine's field of view.



*Disable Continuous Bar Code Read
(0)



Enable Continuous Bar Code Read
(1)

Unique Bar Code Reporting

Parameter # 723

Enable this to report only unique bar codes while the trigger is pressed. This option only applies when **Continuous Bar Code Read** is enabled.



*Disable Continuous Bar Code Read Uniqueness
(0)



Enable Continuous Bar Code Read Uniqueness
(1)

Decode Session Timeout

Parameter # 136

This parameter sets the maximum time decode processing continues during a scan attempt. It is programmable in 0.1 second increments from 0.5 to 9.9 seconds. The default timeout is 9.9 seconds.

To set a Decode Session Timeout, scan the bar code below. Next, scan two numeric bar codes from [Appendix D, Numeric Bar Codes](#) that correspond to the desired on time. Enter a leading zero for single digit numbers. For example, to set a Decode Session Timeout of 0.5 seconds, scan the bar code below, then scan the **0** and **5** bar codes. To correct an error or change the selection, scan [Cancel on page E-7](#).



Decode Session Timeout

Timeout Between Decodes, Same Symbol

Parameter # 137

Use this option in Continuous Bar Code Read mode to prevent the beeper from continuously beeping when a symbol is left in the digital scanner's field of view. The bar code must be out of the field of view for the timeout period before the scanner reads the same consecutive symbol. It is programmable in 0.1 second increments from 0.0 to 9.9 seconds. The default interval is 0.5 seconds.

To select the timeout between decodes for the same symbol, scan the bar code below, then scan two numeric bar codes from [Appendix D, Numeric Bar Codes](#) that correspond to the desired interval, in 0.1 second increments.



Timeout Between Decodes, Same Symbol

Fuzzy 1D Processing

Parameter # 514

This option is enabled by default to optimize decode performance on 1D bar codes, including damaged and poor quality symbols. Disable this only if you experience time delays when decoding 2D bar codes, or in detecting a no decode.



***Enable Fuzzy 1D Processing
(1)**



**Disable Fuzzy 1D Processing
(0)**

Decode Mirror Images (Data Matrix Only)

Parameter # 537

Select an option for decoding mirror image Data Matrix bar codes:

- Always - decode only Data Matrix bar codes that are mirror images
- Never - do not decode Data Matrix bar codes that are mirror images
- Auto - decode both mirrored and unmirrored Data Matrix bar codes.



Never
(0)



Always
(1)

 


*** Auto**
(2)


Decode Aiming Pattern

Parameter # 306


Select **Enable Decode Aiming Pattern** to project the aiming pattern during bar code capture, **Disable Decode Aiming Pattern** to turn the aiming pattern off, or **Enable Decode Aiming Pattern on PDF** to project the aiming pattern when the digital scanner detects a 2D bar code.



*Enable Decode Aiming Pattern
(2)

 

Disable Decode Aiming Pattern
(0)

 

Enable Decode Aiming Pattern on PDF
(3)

- ✓ **NOTE** With [Picklist Mode on page 5-18](#) enabled, the decode aiming pattern flashes even when the **Decode Aiming Pattern** is disabled.
- ✓ **NOTE** Picklist Mode temporarily over-rides the Disable Decode Aiming Pattern parameter. The Decode Aiming Pattern can not be Disabled (using the DS3578-SR configuration) when the Picklist Mode is set to Enable.

Decoding Illumination

Parameter # 298

Selecting **Enable Decoding Illumination** causes the digital scanner to flash illumination to aid decoding. Select **Disable Decoding Illumination** to prevent the digital scanner from using decoding illumination.

Enabling illumination usually results in superior images. The effectiveness of the illumination decreases as the distance to the target increases.



*Enable Decoding Illumination
(1)



Disable Decoding Illumination
(0)

Torch Mode (DS3578-ER Only)

Parameter # 747

Selecting **Enable Torch Mode** causes the digital scanner to automatically provide brighter illumination longer to optimize decode accuracy when scanning at an extended decode range (far distance of 5 feet or greater) using the DS3578-ER digital scanner.

Select **Disable Torch Mode** to prevent the digital scanner from using Torch Mode..



**Disable Torch Mode
(1)**



***Enable Torch Mode
(0)**



 
NOTE *Torch Mode* does not function when *Mobile Phone/Display Mode* is enabled.

Smart LED Mode (DS3578-ER Only)


Parameter # 748

Selecting **Enable Smart LED Mode** optimizes decode accuracy when scanning near using the DS3578-ER digital scanner.

Select **Disable Smart LED Mode** to prevent the digital scanner from using Smart LED Mode.



**Disable Smart LED Mode
(1)**

 

***Enable Smart LED Mode
(0)**

- ✓ **NOTE** When using Smart LED Mode, it is normal for the illumination to appear off center.

- ✓ **NOTE** Picklist Mode temporarily over-rides the Disable Decode Aiming Pattern parameter. The Decode Aiming Pattern can not be Disabled when the following parameter settings are selected:
 - Smart LED Mode is set to Enable (DS3578-ER configuration)
 - Focus Mode is set to Auto-Ranging (DS3578-ER configuration)
 - Picklist Mode is set to Enable (DS3578-ER and DS3578-SR configurations)

Focus Mode

Parameter # 422

Select the Focus Mode to control the working range of the DS3578-ER digital scanner.

- Select **Far Only** focus to optimize the digital scanner to read at its far position. Use this mode when scanning large bar codes in order to fit these bar codes in the digital scanner's field of view.
- Select **Near Only** focus to optimize the digital scanner to read at its near position. Use this mode when scanning small, high-density bar codes.
- Select **Alternating** focus to toggle between near and far focus position.
- Select **Auto-Ranging** focus to allow the digital scanner to control the focus operation



Far Only
(0)



Alternating
(2)



Near Only
(1)



***Auto-Ranging**
(3)

- ✓ **NOTE** Standard size parameter bar codes may not decode when in Far Focus Mode.
- ✓ **NOTE** Picklist Mode temporarily over-rides the Disable Decode Aiming Pattern parameter. The Decode Aiming Pattern can not be Disabled when the following parameter settings are selected:
 - Smart LED Mode is set to Enable (DS3578-ER configuration)
 - Focus Mode is set to Auto-Ranging (DS3578-ER configuration)
 - Picklist Mode is set to Enable (DS3578-ER and DS3578-SR configurations)

 
Multicode Mode (DS3578-SR / DS3578-HD)

Parameter # 677


Enable this parameter to allow multiple bar codes to decode upon one trigger event based on the programmed multicode expression. The digital scanner reports a successful decode and provides user indication only if it decodes all bar codes indicated by the multicode expression, otherwise the decode fails. Bar codes are transmitted in the order defined in the multicode expression. Disable this to operate in normal decode mode.

✓ **NOTE** The DS3578-DP and DS3578-ER configurations do not support Multicode Mode.

When using this mode, disable [Continuous Bar Code Read on page 5-22](#), and always orient the digital scanner at the same distance and angle (perpendicular).



*Disable Multicode Mode
(0)

 

Enable Multicode Mode
(1)

Multicode Expression (DS3578-SR / DS3578-HD)

 
Parameter # 661

Use this feature to program a multicode expression for *Multicode Mode (DS3578-SR / DS3578-HD)* (grid method). The default is 1, which indicates any bar code.

✓ **NOTE** The DS3578-DP and DS3578-ER configurations do not support this feature.

To set the multicode expression:

1. Scan the bar code below.
2. Scan bar codes from the alphanumeric keyboard in *Chapter 14, Advanced Data Formatting* to define the expression.
3. Scan the **End of Message** bar code from *Chapter 14, Advanced Data Formatting*.



Multicode Expression

Multicode Expression Syntax

[n] [Element 1]; [Element 2]; ... [Element n];

Where:

- *n* is the number of elements in the overall expression.

The multicode expression describes the bar code(s) that the digital scanner can expect to find in an image. Each element represents one bar code in the digital scanner's field of view. The order of elements in the expression is the order in which bar code data from each element transmits to the host. Elements are defined using one or more of the following methods:

- **By Region.** This type of element limits decoding to a specific area within the digital scanner's field of view. Region coordinates are defined as the top left and bottom right corners of the region, expressed in percentages of the field of view. These can range from 0% to 100%, or 0x00 to 0x64 in hex, for both horizontal and vertical axes. A region element is constructed as:

[R] [4] [Top, Left] [Bottom, Right]

Where:

- [R] is the character R
- [4] is 0x04, indicating there are four bytes thereafter to describe the region
- [Top, Left] are two values representing the top left corner of the region
- [Bottom, Right] are two values representing the bottom right corner of the region

- **By Code Type.** An element can specify a specific bar code symbology to find and decode somewhere in the field of view. A code type element is constructed as:

[C] [2] [Code Type]

Where:

- [C] is the character C
- [2] is 0x02, indicating there are two bytes thereafter to describe the code type
- [Code Type] is the desired symbology's parameter number (see [Chapter 12, Symbologies](#)). For single-byte parameter numbers, extend the value to two bytes by adding 00 before the parameter number.

Defining Multicode Expression Notes

When defining multicode expressions consider the following:

- Use the Code Type specifier if there are bar codes of more than one code type in view.
- Always use the Region specifier when there are multiple bar codes of the same code type.
- When transmission order is important (the first element in the expression transmits first), use either type to define the order.
- When there are unwanted bar codes in view, filter them out in one of two ways:
 - Use Code Type to specify only the target bar codes.
 - Use Region to identify only the target bar codes.
- If the expression does not contain a Region specifier, scanning angle and distance do not matter. If you specify a region you must scan in a fixed orientation and at a fixed distance. Because of this, it is preferable to use the Code Type specifier rather than the Region specifier.
- When defining regions:
 - Defining a region much larger than the bar code improves tolerance to scan distance and angle, but can cause a decode of a nearby bar code instead of the target bar code. Therefore, for best performance define larger regions when only a few bar codes are in view and those in view are widely separated.
 - Defining a region close to (or smaller than) the target bar code improves the probability of decoding this bar code rather than one nearby, but scan distance and angle must be more accurate. Therefore, for best performance define small regions when many bar codes are in view or those in view are close together.
- Use Region elements to improve decode speeds by reducing the image area to search for the target bar code.
- Specifying Code Type may also improve decode speeds for some code types.
- Although you can scan parameter bar codes when multicode mode is enabled, be aware of the following: If the multicode expression defined a region(s), to scan a parameter bar code you must position the bar code within the first region defined in the expression. In some cases, this first region is not the center of the image and aiming at the parameter bar code does not result in a successful decode.

The following examples show the multicode expressions in both hex and decimal formats, however in the sample figures the values are decimal. Be sure to use the correct base numbering system when creating an expression. A region specified as 0x00 0x00 0x64 0x32 represents a region with coordinates of Top-Left (0,0) and Bottom Right (100,50).

Example 1

To decode one Code 128 bar code anywhere in the image (even when bar codes of other types are in view), as in [Figure 5-1](#), program the expression as follows:

The expression in decimal is (formatted for readability):

```
1 C 2 0 8 ;
```

To program the expression via scanning parameters the sequence is (spaces are for readability):

```
[MultiCode-Expression] 01 C 02 00 08 ; [End Of Message]
```

To program the expression via host command (SSI/SNAPI) the sequence is:

```
0x01 0x43 0x02 0x00 0x08 0x3b
```

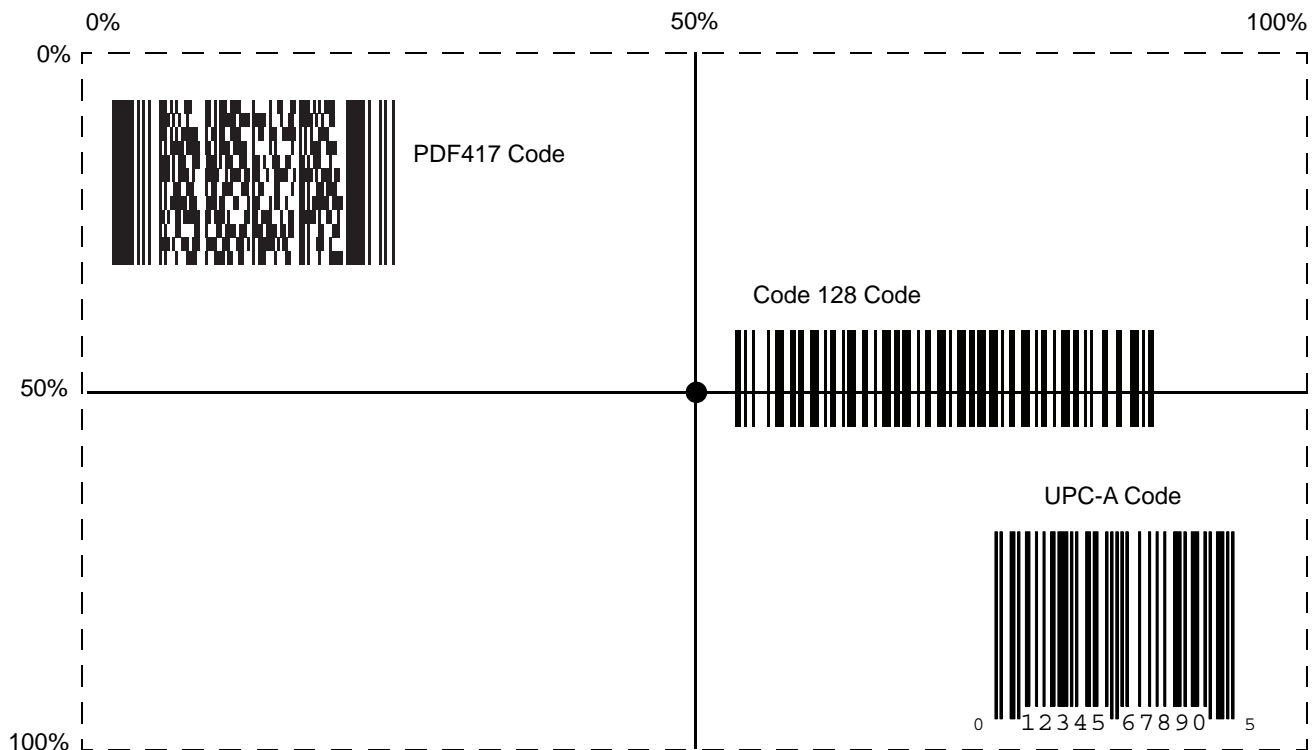


Figure 5-1 Multicode Expression Example 1

Example 2a

To decode a Code128 (Code Type=8) on the top half of the image and a PDF417 (Code Type=15) on the bottom half of the image, as in [Figure 5-2](#), program the expression as follows:

The expression in decimal is (formatted for readability):

```
2 C 2 0 8 R 4 0 0 100 50 ; C 2 0 15 R 4 0 50 100 100 ;
```

To program the expression via scanning parameters the sequence is:

```
[MultiCode-Expression] 02 C 02 00 08 R 04 00 00 64 32 ; C 02 00 0F R 04 00 32 64 64 ; [End Of Message]
```

To program the expression via host command (SSI/SNAPI) the sequence is:

```
0x02 0x43 0x02 0x00 0x08 0x52 0x04 0x00 0x00 0x64 0x32 0x3B 0x43 0x02 0x00 0x0F 0x52 0x04 0x00 0x32 0x64 0x64 0x3B
```

Example 2b

In [Figure 5-2](#), if the bottom PDF417 bar code must transmit first, reverse the sequence of the two bar codes:

The expression in decimal is (formatted for readability):

```
2 C 2 0 15 R 4 0 50 100 100 ; C 2 0 8 R 4 0 0 100 50 ;
```

To program the expression via scanning parameters the sequence is:

```
[MultiCode-Expression] 02 C 02 00 0F R 04 00 32 64 64 ; C 02 00 08 R 04 00 00 64 32 ; [End Of Message]
```

To program the expression via host command (SSI/SNAPI) the sequence is:

```
0x02 0x43 0x02 0x00 0x0F 0x52 0x04 0x00 0x32 0x64 0x64 0x3B 0x43 0x02 0x00 0x08 0x52 0x04 0x00 0x00 0x64 0x32 0x3B
```

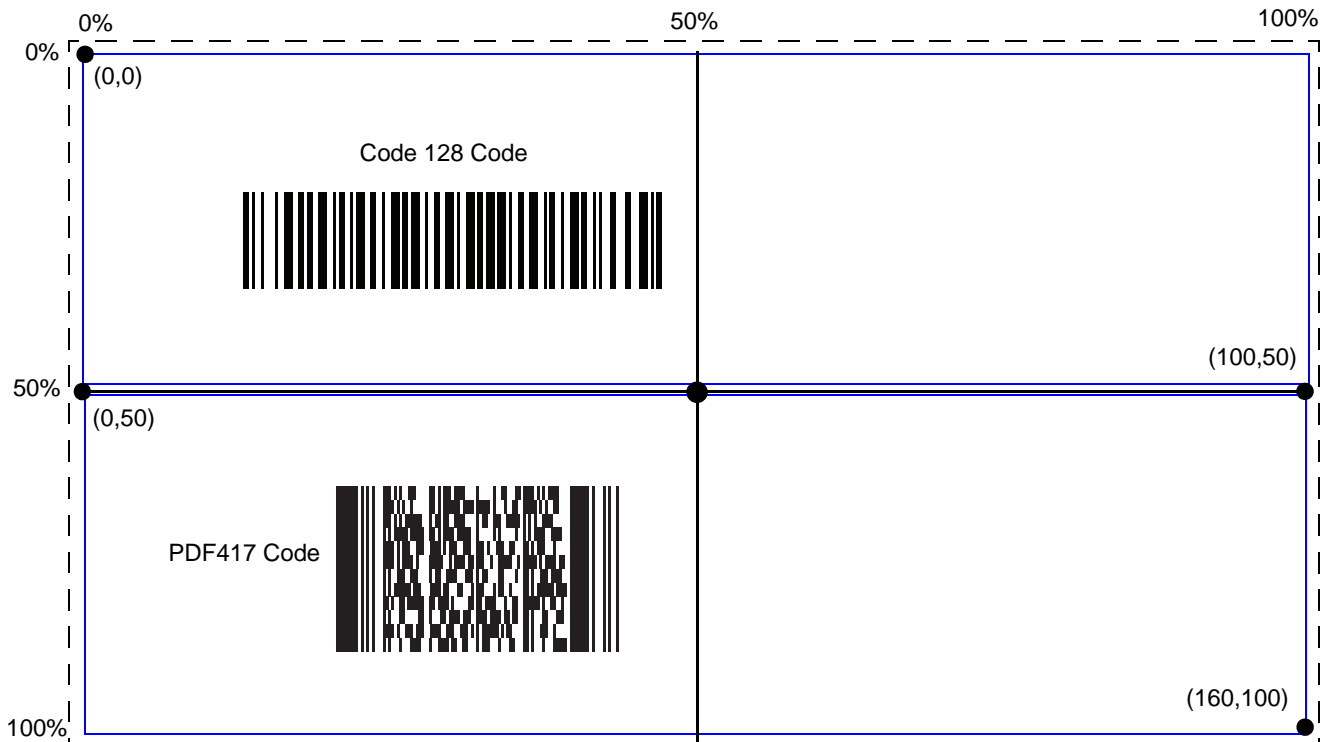


Figure 5-2 Multicode Expression Example 2

Example 3

To decode the set of three bar codes while excluding the center Code 128 bar code, as in [Figure 5-3](#), the expression is:

The expression in decimal is (formatted for readability):

```
3 C 2 0 15 R 4 0 0 50 50 ; C 2 [F0 24] R 4 70 0 100 40 ; C 2 0 8 R 4 65 60 100 100 ;
```

To program the expression via scanning parameters the sequence is:

```
[MultiCode-Expression] 03 C 02 00 0F R 04 00 00 32 32 ; C 02 F0 24 R 04 46 00 64 28 ;  
C 02 00 08 R 04 41 3C 64 64 ; [End Of Message]
```

To program the expression via host command (SSI/SNAPI) the sequence is:

```
0x03 0x43 0x02 0x00 0x0F 0x52 0x04 0x00 0x00 0x32 0x32 0x3B 0x43 0x02 0xF0 0x24 0x52 0x04 0x46  
0x00 0x64 0x28 0x3B 0x43 0x02 0x00 0x08 0x52 0x04 0x41 0x3C 0x64 0x64 0x3B
```

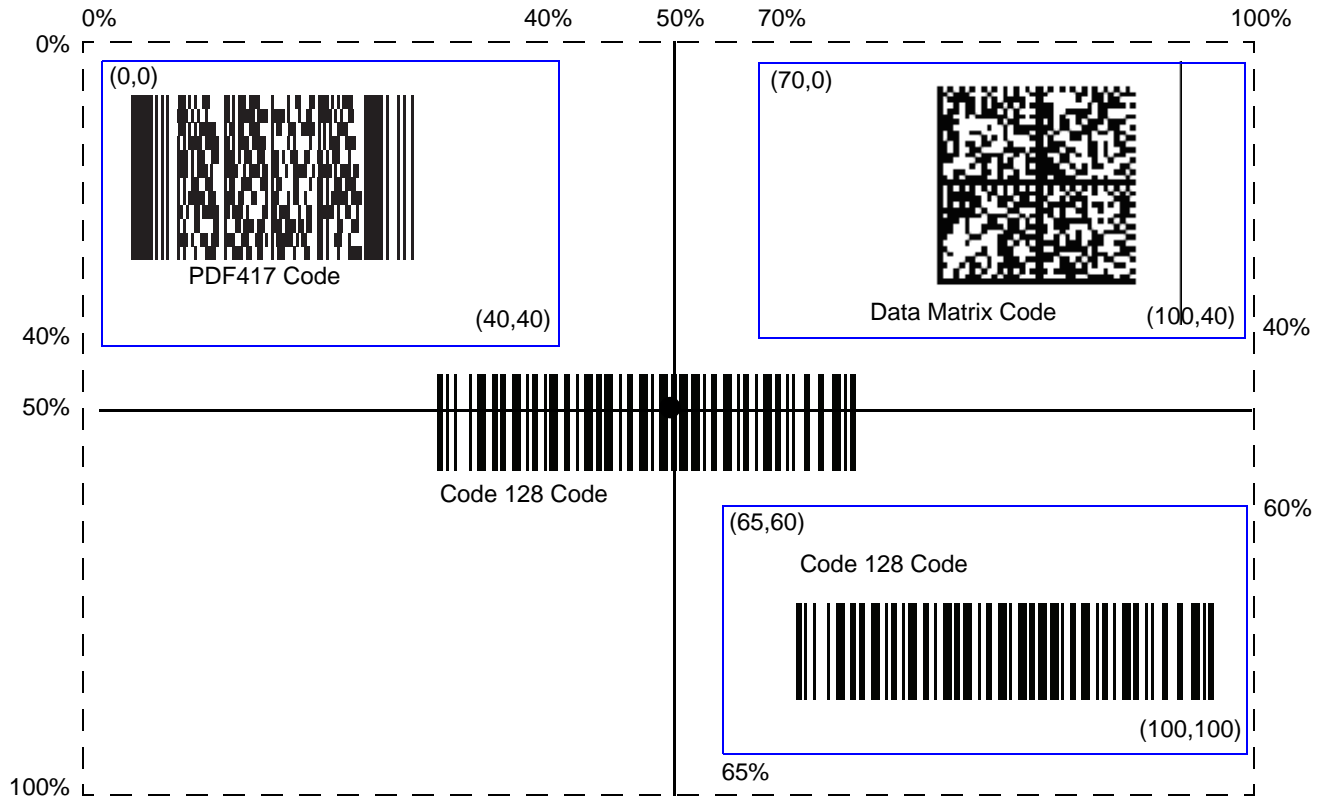


Figure 5-3 Multicode Expression Example 3

Multicode Mode Concatenation (DS3578-SR / DS3578-HD)

Parameter # 717

Enable this parameter to transmit multiple decoded bar codes, as specified by the *Multicode Expression (DS3578-SR / DS3578-HD)*, as one bar code. Use the *Multicode Concatenation Symbology (DS3578-SR / DS3578-HD)* parameter to specify how the concatenated bar codes transmit.

Disable this to transmit decoded bar codes separately.

- ✓ **NOTE** When using Multicode Mode Concatenation, disable *Transmit Code ID Character on page 5-41* and check digits.
- ✓ **NOTE** The DS3578-DP and DS3578-ER configurations do not support this feature.



Enable Multicode Mode Concatenation
(1)



*Disable Multicode Mode Concatenation
(0)

Multicode Concatenation Symbology (DS3578-SR / DS3578-HD)

Parameter # 722

Use this parameter to specify how to transmit the concatenated bar codes decoded as specified by the *Multicode Expression (DS3578-SR / DS3578-HD)*. *Multicode Mode Concatenation (DS3578-SR / DS3578-HD)* must be enabled to use this option.

 
✓ **NOTE** The DS3578-DP and DS3578-ER configurations do not support this feature.



Concatenation as Code 128
(1)



*Concatenation as PDF417
(2)



Concatenation as Data Matrix
(3)



Concatenation as Maxicode
(4)

Multicode Troubleshooting

Troubleshooting Multicode Expression Programming

Use the following suggestions if encountering problems programming a multicode expression:

- Ensure the expression is valid. Invalid expressions are rejected during programming. When an expression is rejected the previous expression remains intact. If after programming the expression the digital scanner can still decode any bar code, the expression was possibly rejected.
- When programming the multicode expression via parameter bar code, the digital scanner generates beeps. If any of the following beeps do not sound during programming, an error occurred (see [Table on page 2-1](#) and [Table on page 2-4](#) for error indicators):
 - Scanning the **Multicode Expression** bar code produces a two-tone (same pitch) beep.
 - Scanning each value of the expression produces a two-tone (same pitch) beep.
 - Scanning the **End Of Message** bar code produces a four-tone (high-low-high-low) beep.
- Check the expression for syntax errors.
- Try programming a simple expression to ensure the syntax is correct. See [Examples of Simple Multicode Expressions](#).
- Review [Defining Multicode Expression Notes on page 5-33](#) for additional hints.

Troubleshooting Multicode Mode Scanning and Decoding

Use the following suggestions if encountering problems using multicode mode:

- If the digital scanner appears to decode any single bar code instead of the intended multiple bar codes, ensure you enabled [Multicode Mode \(DS3578-SR / DS3578-HD\) on page 5-31](#). Programming the multicode expression does not enable multicode mode.
- When specifying **Region**, ensure:
 - Coordinates are within range the 0-100 decimal (or 0x00 - 0x64 hexadecimal).
 - Top, Left is above Bottom, Right. Top, Left is 0,0 (0x00, 0x00 hexadecimal), and Bottom, Right is 100,100 (0x64, 0x64 hexadecimal).
 - Regions for two or more bar codes do not overlap.
- When specifying **Code Type** ensure the digital scanner supports the code type. Try decoding a single bar code without using multicode. If it does not decode try enabling the bar code type. See [Chapter 12, Symbologies](#).
- Experiment with simpler expressions, then add to it until you discover the source of the error. For example try the simplest expression (see [Examples of Simple Multicode Expressions](#)) and make sure you can scan a single bar code. If so, extend the expression by adding a second bar code, specifying a region, or specifying the code type. Verify that the digital scanner can decode this new expression. Continue adding to the expression until it fails to decode as expected, indicating the source of the error.
- Review [Defining Multicode Expression Notes on page 5-33](#) for additional hints.

Examples of Simple Multicode Expressions

The simplest multicode expression is:

- One bar code of any type, anywhere in the image.
- To program this use: **[MultiCode-Expression] 01 ; [End Of Message]**

Another simple multicode expression is:

- One Code 128 bar code, anywhere in the image.
- To program this use: **[MultiCode-Expression] 01 C 02 00 08 ; [End Of Message]**

Miscellaneous Scanner Parameters

 
Transmit Code ID Character

Parameter # 45


A Code ID character identifies the code type of a scanned bar code. This is useful when decoding more than one code type. In addition to any single character prefix already selected, the Code ID character is inserted between the prefix and the decoded symbol.

Select no Code ID character, a Symbol Code ID character, or an AIM Code ID character. For Code ID Characters, see [Symbol Code Identifiers on page B-1](#) and [Programming Reference on page B-1](#).


✓ **NOTE** If you enable Symbol Code ID Character or AIM Code ID Character, and enable [Transmit "No Read" Message on page 5-45](#), the digital scanner appends the code ID for Code 39 to the NR message.



Symbol Code ID Character
(2)

 

AIM Code ID Character
(1)

 

*None
(0)

Prefix/Suffix Values

Key Category Parameter # P = 99, S1 = 98, S2 = 100

 
Decimal Value Parameter # P = 105, S1 = 104, S2 = 106

You can append a prefix and/or one or two suffixes to scan data for use in data editing. To set a value for a prefix or suffix, scan a four-digit number (i.e., four bar codes from [Appendix D, Numeric Bar Codes](#)) that corresponds to that value. See [Appendix D, Numeric Bar Codes](#) for the four-digit codes.


When using host commands to set the prefix or suffix, set the key category parameter to 1, then set the 3-digit decimal value. See [Appendix D, Numeric Bar Codes](#) for the four-digit codes.

To correct an error or change a selection, scan [Cancel on page D-3](#).

✓ **NOTE** To use Prefix/Suffix values, first set the [Scan Data Transmission Format on page 5-42](#).



Scan Prefix
(7)

 

Scan Suffix 1
(6)



Scan Suffix 2
(8)



Data Format Cancel

Scan Data Transmission Format

Parameter # 235

To change the scan data format, scan one of the following eight bar codes corresponding to the desired format.

✓ **NOTE** If using this parameter do not use ADF rules to set the prefix/suffix.

To set values for the prefix and/or suffix, see [Prefix/Suffix Values on page 5-42](#).



*Data As Is
(0)



<DATA> <SUFFIX 1>
(1)



<DATA> <SUFFIX 2>
(2)



<DATA> <SUFFIX 1> <SUFFIX 2>
(3)



<PREFIX> <DATA >
(4)

Scan Data Transmission Format (continued)



<PREFIX> <DATA> <SUFFIX 1>
(5)



<PREFIX> <DATA> <SUFFIX 2>
(6)



<PREFIX> <DATA> <SUFFIX 1> <SUFFIX 2>
(7)

FN1 Substitution Values

Key Category Parameter # 103

 
Decimal Value Parameter # 109

The Wedge and USB HID Keyboard hosts support a FN1 Substitution feature. Enabling this substitutes any FN1 character (0x1b) in an EAN128 bar code with a value. This value defaults to 7013 (Enter Key).

When using host commands to set the FN1 substitution value, set the key category parameter to 1, then set the 3-digit keystroke value. See the ASCII Character Set table for the current host interface for the desired value.

To select a FN1 substitution value via bar code menus:

1. Scan the bar code below.



Set FN1 Substitution Value

2. Locate the keystroke desired for FN1 Substitution in the ASCII Character Set table for the current host interface. Enter the 4-digit ASCII Value by scanning each digit in [Appendix D, Numeric Bar Codes](#).

To correct an error or change the selection, scan **Cancel**.

To enable FN1 substitution for USB HID keyboard, scan the **Enable FN1 Substitution** bar code on page [5-44](#).

Transmit "No Read" Message

Parameter # 94

Scan a bar code below to select whether or not to transmit a No Read message. Enable this to transmit the characters NR when a successful decode does not occur before trigger release or the **Decode Session Timeout** expires. See [Decode Session Timeout on page 5-23](#). Disable this to send nothing to the host if a symbol does not decode.



NOTE If you enable **Transmit No Read**, and also enable Symbol Code ID Character or AIM Code ID Character for [Transmit Code ID Character on page 5-41](#), the digital scanner appends the code ID for Code 39 to the NR message.



Enable No Read
(1)



*Disable No Read
(0)

Unsolicited Heartbeat Interval

Parameter # 1118

 
The digital scanner supports sending *Unsolicited Heartbeat Messages* to assist in diagnostics. To enable this feature and set the desired unsolicited heartbeat interval, scan one of the time interval bar codes below, or scan **Set Another Interval** followed by four numeric bar codes from [Appendix D, Numeric Bar Codes](#) (scan sequential numbers that correspond to the desired number of seconds).

Scan **Disable Unsolicited Heartbeat Interval** to turn off the feature.


The heartbeat event is sent as decode data (with no decode beep) in the form of:

MOTEVTHB:nnn

where *nnn* is a three-digit sequence number starting at 001 and wrapping after 100.



10 seconds
(10)

 

1 minute
(60)



Set Another Interval



*Disable Unsolicited Heartbeat Interval
(0)

Dump Scanner Parameters

To debug scanner issues, scan the bar code below to output all the scanner's asset tracking information and parameter settings. This outputs information a text document in human readable format.

Scan **STISCANPARAMS** with the scanner connected in USB HID keyboard mode to Microsoft® Windows Notepad or Wordpad, or with the scanner connected via RS232 to a Windows hyperterminal. Use the parameter numbers in this guide or the Attribute Data Dictionary (index of parameters) to interpret the parameter/attribute numbers in this output. The Attribute Data Dictionary (72E-149786-xx) is located on the Zebra Support site at: <http://www.zebra.com/support>.



NOTE It may be necessary to first scan <DATA><SUFFIX1> for proper formatting. See [Scan Data Transmission Format on page 5-42](#).



STISCANPARAMS

UID Parsing

Parameter # F1h E4h

 
- ✓ **NOTE** UID parsing is only supported by DP configurations of the digital scanner.

- ✓ **NOTE** UID constructs are compliant with the US Department of Defense MIL - STD - 130N.

A UID, or Unique Identifier, is used to identify and track data (e.g., manufacturer, distribution, lifetime of products and other information) specified by the United States Department of Defense for all imported packages containing merchandise equal to or greater than \$5,000.00. Vendors are required to provide a legible and permanent UID marking, in the form of a data matrix bar code, with the contents.

DP configurations of the digital scanner read the data matrix bar code, verify it is a valid UID bar code and parse the data into a UID bar code (**Criterion: Parsed UID** bar code type with UID fields). This output can be used at a later date.

To enable/disable UID parsing, scan the appropriate bar code below. UID parsing is disabled by default. Scan **Enable Embedded UID Parsing** to start the parsing process.



* Disable UID Parsing



Enable Embedded UID Parsing

UID Parsing Output

When a UID successfully parses the fields shown in [Table 5-2](#) are created. Each field is separated by a comma. If data is missing from a field in the UID, a lone comma fills the field.

- ✓ **NOTE** When a UID successfully parses, a parsed UID bar code type transmits to the host.
When parsing is unsuccessful but data transmits to the host anyway, the data is in the data matrix format.

Table 5-2 *Output Fields*

Field	Description
1	Concatenated UID
2	Construct type (UID1 or UID2)
3	Enterprise ID
4	Serialized part #
5	Original part #
6	Lot #
7	Current part #
8	Scanned data in ASCII mode

Example Output - Successful Parsed Data

```
D12345WS51-004041,UID2,12345,041,WS51-004,,]> rs 06 gs 17V12345 gs 1PWS51-004 gs S041 rs
eot
```

Table 5-3 *Output Fields*

Field	Description
1	D12345WS51-004041
2	UID2
3	12345
4	041
5	WS51-004
6	(no data supplied, comma filled field)
7	(no data supplied, comma filled field)
8]> rs 06 gs 17V12345 gs 1PWS51-004 gs S041 rs eot

UID Error Mode Options

Parameter # F1h E6h

- **UID Error Beep** (default): Scan **UID Error Beep** to program the digital scanner not to parse the data contained in the UID when the UID is not formatted correctly. An error tone sounds and no data transmits to the host.
- **UID Error Pass Data**: Scan **UID Error Pass Data** to program the digital scanner to transmit data to the host even when parsing fails. The digital scanner reads the incorrectly encoded UID, assumes the host can process the data and transmits the unformatted contents of the bar code. No error tone sounds.
- **UID Error Beep and Pass Data**: Scan **UID Error Pass Data** to program the digital scanner to transmit data to the host even when parsing fails. The digital scanner reads the incorrectly encoded UID, assumes the host can process the data and transmits the unformatted contents of the bar code. An error tone sounds.

Scan the appropriate bar code below to program potential error conditions.



UID Error Beep



UID Error Pass Data



UID Error Beep and Pass Data

Sample ADF Rule for UID

To transmit only the concatenated UID field of the parsed UID, scan the bar codes below, in order.



 
Begin New Rule



Criterion: Parsed UID




Send Data Up to Character



,
(Comma)



Save Rule

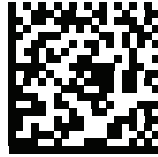UID Sample Bar Codes**05 Format**

WS51-004041,UID2,,041,WS51-004,,[]> rs 05 gs 01WS51-004 gs 21041 rs eot

Table 5-4 Sample 05 Formatted Data


Field	Description
1 - Concatenated UID	WS51-004041
2 - Construct type (UID1 or UID2)	UID2
3 - Enterprise ID	, (no data supplied)
4 - Serialized part #	041
5 - Original part #	WS51-004
6 - Lot #	, (no data supplied)
7 - Current part #	, (no data supplied)
8 - Scanned data in ASCII mode	[]> rs 05 gs 01WS51-004 gs 21041 rs eot

06 Format

D12345WS51-004041,UID2,12345,041,WS51-004,,[]> rs 06 gs 17V12345 gs 1PWS51-004 gs S041 rs eot

Table 5-5 Sample 06 Formatted Data


Field	Description
1 - Concatenated UID	D12345WS51-004041
2 - Construct type (UID1 or UID2)	UID2
3 - Enterprise ID	12345
4 - Serialized part #	041
5 - Original part #	WS51-004
6 - Lot #	, (no data supplied)
7 - Current part #	, (no data supplied)
8 - Scanned data in ASCII mode	[]> rs 06 gs 17V12345 gs 1PWS51-004 gs S041 rs eot

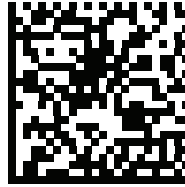12 Format

D12345WS51-004041,UID2,12345,041,WS51-004,,[)]> rs 12 gs MFR 12345 gs PNO WS51-004 gs SEQ 041 rs eot

Table 5-6 Sample 12 Formatted Data

Field	Description
1 - Concatenated UID	D12345WS51-004041
2 - Construct type (UID1 or UID2)	UID2
3 - Enterprise ID	12345
4 - Serialized part #	041
5 - Original part #	WS51-004
6 - Lot #	, (no data supplied)
7 - Current part #	, (no data supplied)
8 - Scanned data in ASCII mode	[)]> rs 12 gs MFR 12345 gs PNO WS51-004 gs SEQ 041 rs eot

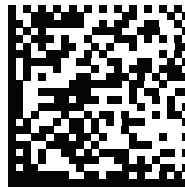DD Format

D12345WS51-004041,UID2,12345,041,WS51-004,,[)]> rs DD gs MFR 12345 gs PNO WS51-004 gs SEQ 041 rs eot

Table 5-7 Sample DD Formatted Data

Field	Description
1 - Concatenated UID	D12345WS51-004041
2 - Construct type (UID1 or UID2)	UID2
3 - Enterprise ID	12345
4 - Serialized part #	041
5 - Original part #	WS51-004
6 - Lot #	, (no data supplied)
7 - Current part #	, (no data supplied)
8 - Scanned data in ASCII mode	[)]> rs DD gs MFR 12345 gs PNO WS51-004 gs SEQ 041 rs eot

CHAPTER 6 IMAGING PREFERENCES

Introduction

✓ **NOTE** The DS3578-ER configuration does not support imaging preferences parameters.

You can program the digital scanner to perform various functions, or activate different features. This chapter describes imaging preference features and provides programming bar codes for selecting these features.

✓ **NOTE** Only the Symbol Native API (SNAPI) with Imaging interface supports image capture. See [USB Device Type on page 10-5](#) to enable this host.


The digital scanner ships with the settings in [Imaging Preferences Parameter Defaults on page 6-2](#) (also see [Appendix A, Standard Default Parameters](#) for all host device and miscellaneous defaults). If the default values suit requirements, programming is not necessary.

To set feature values, scan a single bar code or a short bar code sequence. The settings are stored in non-volatile memory and are preserved even when you power down the digital scanner.

✓ **NOTE** Most computer monitors allow scanning the bar codes directly on the screen. When scanning from the screen, be sure to set the document magnification to a level where you can see the bar code clearly, and bars and/or spaces are not merging. To improve bar code reading performance off of mobile phones and electronic displays, select [Enable Mobile Phone/Display Mode \(1\) on page 5-20](#).

If not using a USB cable, select a host type after the power-up beeps sound. See [Chapter 10, USB Interface](#) and [Chapter 9, RS-232 Interface](#) for specific host information. This is only necessary upon the first power-up when connecting to a new host.

To return all features to default values, scan the [Default Parameters on page 5-4](#). Throughout the programming bar code menus, asterisks (*) indicate default values.

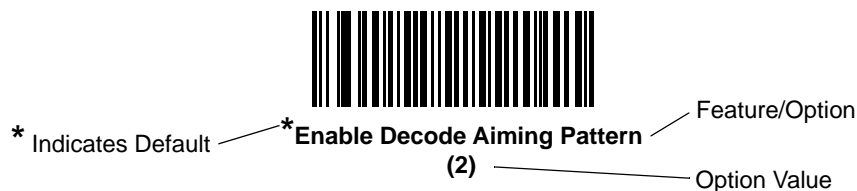

Scanning Sequence Examples

In most cases scanning one bar code sets the parameter value. For example, to disable image capture illumination, scan the **Disable Image Capture Illumination** bar code under *Image Capture Illumination on page 6-5*. The digital scanner issues a fast warble beep and the LED turns green, signifying a successful parameter entry.

Other parameters require scanning several bar codes. See these parameter descriptions for this procedure.

Errors While Scanning

Unless otherwise specified, to correct an error during a scanning sequence, just re-scan the correct parameter.

Imaging Preferences Parameter Defaults

Table 6-1 lists the defaults for imaging preferences parameters. To change the default values, scan the appropriate bar codes in this guide. These new values replace the standard default values in memory. To recall the default parameter values, scan the *Default Parameters on page 5-4*.

✓ **NOTE** See *Appendix A, Standard Default Parameters* for all user preferences, hosts, symbologies, and miscellaneous default parameters.

Table 6-1 *Imaging Preferences Parameter Defaults*

Parameter	Parameter Number	Default	Page Number
Imaging Preferences			
Operational Modes	N/A	N/A	6-4
Image Capture Illumination	361	Enable	6-5
Gain / Exposure Priority for Snapshot Mode	562	Autodetect	6-6
Snapshot Mode Timeout	323	0 (30 seconds)	6-7
Snapshot Aiming Pattern	300	Enable	6-7
Image Cropping	301	Disable	6-8
Crop to Pixel Addresses	315 316 317 318	0 top 0 left 479 bottom 751 right	6-9
Image Size (Number of Pixels)	302	Full	6-10
Image Brightness (Target White)	390	180	6-11
JPEG Image Options	299	Quality	6-11
JPEG Target File Size	561	160 kB	6-12

Table 6-1 *Imaging Preferences Parameter Defaults (Continued)*

Parameter	Parameter Number	Default	Page Number
JPEG Quality Value	305	65	6-12
Image Enhancement	564	Off (0)	6-13
Image File Format Selection	304	JPEG	6-14
Image Rotation	665	0	6-15
Bits per Pixel (BPP)	303	8 BPP	6-16
Signature Capture	93	Disable	6-17
Signature Capture Image File Format Selection	313	JPEG	6-18
Signature Capture Bits per Pixel (BPP)	314	8 BPP	6-19
Signature Capture Width	366	400	6-20
Signature Capture Height	367	100	6-20
Signature Capture JPEG Quality	421	65	6-20

Imaging Preferences

The parameters in this chapter control image capture characteristics. Image capture occurs in all modes of operation, including decode and snapshot.



NOTE Imaging preference parameters are for use with the STB/FLB3578 With FIPS Cradles only.

Operational Modes

The digital scanner has two modes of operation:

- Decode Mode
- Snapshot Mode.

Decode Mode

By default, when you pull the trigger the digital scanner attempts to locate and decode enabled bar codes within its field of view. The digital scanner remains in this mode until it decodes a bar code or you release the trigger.

Snapshot Mode

Use Snapshot Mode to capture a high-quality image and transmit it to the host. To temporarily enter this mode scan the **Snapshot Mode** bar code. While in this mode the digital scanner blinks the green LED at 1-second intervals to indicate it is not in standard operating (decode) mode.

In Snapshot Mode, the digital scanner turns on its laser aiming pattern to highlight the area to capture in the image. The next trigger pull instructs the digital scanner to capture a high quality image and transmit it to the host. A short time may pass (less than 2 seconds) between when the trigger is pulled and the image is captured as the digital scanner adjusts to the lighting conditions. Hold the digital scanner steady until the image is captured, denoted by a single beep.

If you do not press the trigger within the Snapshot Mode Timeout period, the digital scanner returns to Decode Mode. Use [Snapshot Mode Timeout on page 6-7](#) to adjust this timeout period. The default timeout period is 30 seconds.

To disable the laser aiming pattern during Snapshot Mode, see [Snapshot Aiming Pattern on page 6-7](#).



Snapshot Mode

Image Capture Illumination

 
Parameter # 361

Selecting **Enable Image Capture Illumination** causes illumination to turn on during every image capture. Disable illumination to prevent the digital scanner from using illumination.

Enabling illumination usually results in superior images. The effectiveness of illumination decreases as the distance to the target increases.



***Enable Image Capture Illumination
(1)**



**Disable Image Capture Illumination
(0)**

Gain/Exposure Priority for Snapshot Mode

Parameter # 562

This parameter alters the digital scanner's gain exposure priority when it acquires an image in Snapshot Mode in auto exposure mode.

- Scan **Low Exposure Priority** to set a mode in which the digital scanner favors higher gain over exposure to capture an image. This results in an image that is less susceptible to motion blur at the expense of noise artifacts. However, for most applications, the amount of noise is acceptable.
- Scan **Low Gain Priority** to set a mode in which the digital scanner favors longer exposure time rather than higher gain to capture an image. This ensures that the image is less noisy and produces fewer artifacts during post processing activities like image enhancement (sharpening). The mode is recommended for fixed mount / fixed object image capture since the image acquired is susceptible to motion blur.
- Scan **Autodetect** (default) to set a mode in which the digital scanner automatically selects Gain Priority or Low Exposure Priority mode for Snapshot Mode. If the digital scanner is in a magnetic read switch enabled stand (or it is configured in Blink Mode), it uses Low Gain Priority mode. Otherwise, it uses the Low Exposure Priority mode.



Low Gain Priority
(0)



Low Exposure Priority
(1)



*** Autodetect**
(2)

Snapshot Mode Timeout

Parameter # 323

This parameter sets the amount of time the digital scanner remains in Snapshot Mode. The digital scanner exits Snapshot Mode when you pull the trigger, or when the Snapshot Mode Timeout elapses. To set this timeout value, scan the bar code below followed by a bar code from [Appendix D, Numeric Bar Codes](#). The default value is 0 which represents 30 seconds; values increment by 30. For example, 1 = 60 seconds, 2 = 90 seconds, etc.



Snapshot Mode Timeout

Snapshot Aiming Pattern

Parameter # 300

Select **Enable Snapshot Aiming Pattern** to project the aiming pattern when in Snapshot Mode, or **Disable Snapshot Aiming Pattern** to turn the aiming pattern off.



*Enable Snapshot Aiming Pattern
(1)



Disable Snapshot Aiming Pattern
(0)

Image Cropping

Parameter # 301

This parameter crops a captured image. Select **Disable Image Cropping** to present the full 752 x 480 pixels. Select **Enable Image Cropping** to crop the image to the pixel addresses set in [Crop to Pixel Addresses on page 6-9](#).



Enable Image Cropping
(1)



*Disable Image Cropping
(Use Full 752 x 480 Pixels)
(0)

Crop to Pixel Addresses

Parameter # 315 (Top)

Parameter # 316 (Left)

Parameter # 317 (Bottom)

Parameter # 318 (Right)

 
If you selected **Enable Image Cropping**, set the pixel addresses from (0,0) to (751,479) to crop to.

Columns are numbered from 0 to 751, rows from 0 to 479. Specify four values for Top, Left, Bottom, and Right, where Top and Bottom correspond to row pixel addresses, and Left and Right correspond to column pixel addresses. For example, for a 4 row x 8 column image in the extreme bottom-right section of the image set the following values:

Top = 476, Bottom = 479, Left = 744, Right = 751

To set the crop to pixel address, scan each pixel address bar code below followed by three numeric bar codes representing the value. Leading zeros are required. For example, to crop the top pixel address to 3, scan 0, 0, 3. See [Appendix D, Numeric Bar Codes](#) for numeric bar codes.

✓ **NOTE** The digital scanner has a cropping resolution of 4 pixels. Setting the cropping area to less than 4 pixels (after resolution adjustment, see [Image Size \(Number of Pixels\) on page 6-10](#)) transfers the entire image.



Top Pixel Address
(0 - 479 Decimal)



Left Pixel Address
(0 - 751 Decimal)



Bottom Pixel Address
(0 - 479 Decimal)



Right Pixel Address
(0 - 751 Decimal)

Image Size (Number of Pixels)

Parameter # 302

This option alters image resolution before compression. Multiple pixels are combined to one pixel, resulting in a smaller image containing the original content with reduced resolution.

Select one of the following values:

Resolution Value	Uncropped Image Size
Full	752 x 480
1/2	376 x 240
1/4	180 x 120



*Full Resolution
(0)



1/2 Resolution
(1)



1/4 Resolution
(3)

Image Brightness (Target White)

Parameter # 390

Type: Byte

Range: 1 - 240

This parameter sets the Target White value used in Snapshot and Video Viewfinder mode when using auto exposure. White and black are defined as 240 decimal and 1, respectively. Setting the value to the factory default of 180 sets the white level of the image to ~180.

To set the Image Brightness parameter, scan **Image Brightness** below followed by three numeric bar codes representing the value. Leading zeros are required. For example, to set an Image Brightness value of 99, scan 0, 9, 9. See [Appendix D, Numeric Bar Codes](#) for numeric bar codes.



*180



Image Brightness
(3 digits)

JPEG Image Options

Parameter # 299

Select an option to optimize JPEG images for either size or for quality. Scan the **JPEG Quality Selector** bar code to enter a quality value; the digital scanner then selects the corresponding image size. Scan the **JPEG Size Selector** bar code to enter a size value; the digital scanner then selects the best image quality.



*JPEG Quality Selector
(1)



JPEG Size Selector
(0)

JPEG Target File Size

Parameter # 561

Type: Word

Range: 5-350

This parameter defines the target JPEG file size in terms 1 Kilobytes (1024 bytes). The default value is 160 kB which represents 160 Kilobytes.



CAUTION JPEG compress may take 10 to 15 seconds based on the amount of information in the target image. Scanning **JPEG Quality Selector** (default setting) on [page 6-11](#) produces a compressed image that is consistent in quality and compression time.

To set the JPEG Target File Size parameter, scan **JPEG Target File Size** below followed by three numeric bar codes representing the value. Leading zeros are required. For example, to set an Image Brightness value of 99, scan 0, 9, 9 in [Appendix D, Numeric Bar Codes](#).



JPEG Target File Size
(3 digits)

JPEG Quality Value

Parameter # 305

If you selected **JPEG Quality Selector**, scan the **JPEG Quality Value** bar code followed by 3 bar codes from [Appendix D, Numeric Bar Codes](#) corresponding to a value from 5 to 100, where 100 represents the highest quality image.



JPEG Quality Value
(Default: 065)
(5 - 100 Decimal)

Image Enhancement

Parameter # 564

This parameter configures the digital scanner's Image Enhance feature. This feature uses a combination of edge sharpening and contrast enhancement to produce an image that is visually pleasing.

The levels of image enhancement are:

- Off (0) - Default
- Low (1)
- Med (2)
- High (3).



*Off
(0)



Low
(1)



Medium
(2)



High
(3)

Image File Format Selector

Parameter # 304

Select an image format appropriate for the system (BMP, TIFF, or JPEG). The digital scanner stores captured images in the selected format.



BMP File Format
(3)



***JPEG File Format**
(1)



TIFF File Format
(4)

Image Rotation

Parameter # 665

This parameter controls the rotation of the image by 0, 90, 180, or 270 degrees.



 
***Rotate 0°
(0)**



**Rotate 90°
(1)**



**Rotate 180°
(2)**



**Rotate 270°
(3)**

Bits Per Pixel

Parameter # 303

Select the number of significant bits per pixel (BPP) to use when capturing an image. Select **1 BPP** for a black and white image, **4 BPP** to assign 1 of 16 levels of grey to each pixel, or **8 BPP** to assign 1 of 256 levels of grey to each pixel.



NOTE The digital scanner ignores these settings for JPEG file formats, which only support **8 BPP**.

The digital scanner ignores 1 BPP for TIFF file formats, which only support **4 BPP** and **8 BPP**. 1 BPP is coerced to 4 BPP for TIFF file formats.



1 BPP
(0)



4 BPP
(1)



***8 BPP**
(2)

Signature Capture

Parameter # 93

A signature capture bar code is a special-purpose symbology which delineates a signature capture area in a document with a machine-readable format. The recognition pattern is variable so it can optionally provide an index to various signatures. The region inside the bar code pattern is considered the signature capture area. See [Appendix G, Signature Capture Code](#) for more information.

Output File Format

Decoding a signature capture bar code de-skews the signature image and converts the image to a BMP, JPEG, or TIFF file format. The output data includes the file descriptor followed by the formatted signature image.

File Descriptor			Signature Image
Output Format (1 byte)	Signature Type (1 byte)	Signature Image Size (4 bytes) (BIG Endian)	
JPEG - 1 BMP - 3 TIFF - 4	1-8	0x00000400	0x00010203....

To enable or disable Signature Capture, scan the appropriate bar code below.



**Enable Signature Capture
(1)**



***Disable Signature Capture
(0)**

Signature Capture File Format Selector

Parameter # 313

Select a signature file format appropriate for the system (BMP, TIFF, or JPEG). The digital scanner stores captured signatures in the selected format.



BMP Signature Format
(3)



***JPEG Signature Format**
(1)



TIFF Signature Format
(4)

Signature Capture Bits Per Pixel

Parameter # 314

Select the number of significant bits per pixel (BPP) to use when capturing a signature. Select **1 BPP** for a black and white image, **4 BPP** to assign 1 of 16 levels of grey to each pixel, or **8 BPP** to assign 1 of 256 levels of grey to each pixel.

✓ **NOTE** The digital scanner ignores these settings for JPEG file formats, which only support **8 BPP**.



1 BPP
(0)



4 BPP
(1)



*8 BPP
(2)

Signature Capture Width

Parameter # 366

The aspect ratio of the Signature Capture Width and Signature Capture Height parameters must match that of the signature capture area. For example, a 4 x 1 inch signature capture area would require a 4 to 1 aspect ratio of width to height.

To set the width of the signature capture box, scan the **Signature Capture Width** bar code, followed by 3 bar codes from [Appendix D, Numeric Bar Codes](#) corresponding to a value in the range of 001 to 752 decimal.



Signature Capture Width
(Default: 400)
(001 - 752 Decimal)

Signature Capture Height

Parameter # 367

To set the height of the signature capture box, scan the **Signature Capture Height** bar code, followed by 3 bar codes from [Appendix D, Numeric Bar Codes](#) corresponding to a value in the range of 001 to 480 decimal.



Signature Capture Height (Default: 100)
(001 - 480 Decimal)

Signature Capture JPEG Quality

Parameter # 421

Scan the **JPEG Quality Value** bar code followed by 3 bar codes from [Appendix D, Numeric Bar Codes](#) corresponding to a value from 005 to 100, where 100 represents the highest quality image.



JPEG Quality Value (Default: 065)
(5 - 100 Decimal)

CHAPTER 7 ETHERNET INTERFACE

Introduction

The DS3578 FIPS digital scanner pairs to the STB3574 Industrial Ethernet cradle. The Industrial Ethernet interface supports PROFINET, EtherNet/IP, and Modbus TCP standard protocols.

For detailed information about these protocols, Ethernet software, and bar code data transfers refer to the *STB3574 Industrial Ethernet Cradle Developer Guide*, p/n MN-002694-01.

CHAPTER 8 KEYBOARD WEDGE INTERFACE

Introduction



IMPORTANT The Keyboard Wedge interface is not applicable to the STB3574 Industrial Ethernet cradle.

This chapter provides instructions for programming the digital scanner for keyboard wedge host interface, used to connect the digital scanner between the keyboard and host computer. The digital scanner translates the bar code data into keystrokes, and transmits the information to the host computer via the cradle interface. The host computer accepts the keystrokes as if they originated from the keyboard.

This interface adds bar code reading functionality to a system designed for manual keyboard input. In this mode the keyboard keystrokes are simply passed through.

Throughout the programming bar code menus, default values are indicated with asterisks (*).



* Indicates Default — *North American — Feature/Option

Connecting a Keyboard Wedge Interface

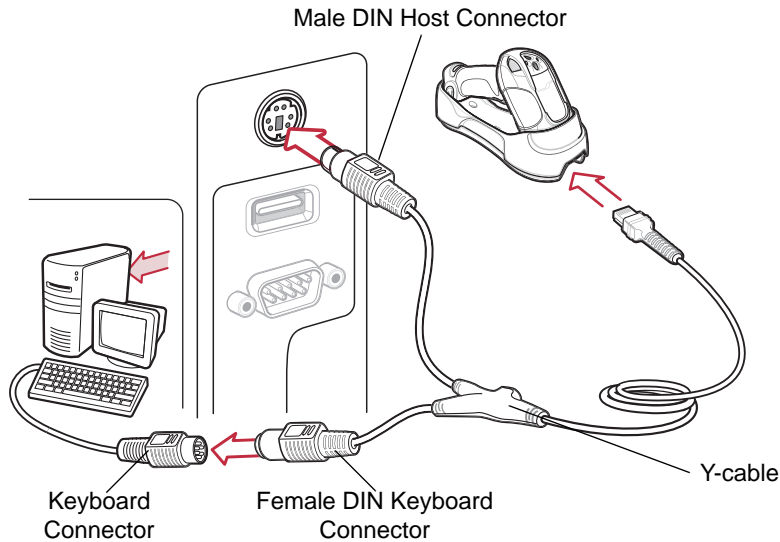


Figure 8-1 Keyboard Wedge Interface Connection with Y-cable

To connect the keyboard wedge interface Y-cable:

1. Turn off the host and unplug the keyboard connector.
2. Attach the modular connector of the Y-cable to the cable interface port on the cradle. See [Connecting the Cradle on page 1-5](#).
3. Connect the round male DIN host connector of the Y-cable to the keyboard port on the host.
4. Connect the round female DIN keyboard connector of the Y-cable to the keyboard connector.
5. If required, connect the power supply to the cradle.
6. Ensure that all connections are secure.
7. Turn on the host system.
8. Pair the digital scanner to the cradle by scanning the bar code on the cradle.
9. Select the keyboard wedge host type by scanning the appropriate bar code from [Keyboard Wedge Host Types on page 8-4](#).
10. To modify any other parameter options, scan the appropriate bar codes in this chapter.
11. Connect an external power supply if desired.

✓ **NOTE** Interface cables vary depending on configuration. The connectors illustrated in [Figure 8-1](#) are examples only. The connectors may be different from those illustrated, but the steps to connect the cradle remain the same.

✓ **NOTE** Disconnect the power supply before changing host cables or the digital scanner may not recognize the new host.

Keyboard Wedge Default Parameters

Table 8-1 lists the defaults for keyboard wedge host parameters. To change any option, scan the appropriate bar code(s) provided in this chapter.

✓ **NOTE** See *Appendix A, Standard Default Parameters* for all user preference, host, symbology, and miscellaneous default parameters.


Table 8-1 *Keyboard Wedge Host Default Table*

Parameter	Default	Page Number
Keyboard Wedge Host Parameters		
Keyboard Wedge Host Type	IBM PC/AT& IBM PC Compatibles	8-4
Keyboard Wedge Country Types (Country Codes)	North American	8-5
Ignore Unknown Characters	Enable	8-7
Keystroke Delay	0 msec (No Delay)	8-7
Intra-Keystroke Delay	Disable	8-8
Alternate Numeric Keypad Emulation	Disable	8-8
Caps Lock On	Disable	8-9
Caps Lock Override	Disable	8-9
Convert Wedge Data	Do Not Convert Wedge Data	8-10
Function Key Mapping	Disable	8-10
FN1 Substitution	Disable	8-11
Send Make and Break	Send Make and Break Scan Codes	8-11


Keyboard Wedge Host Parameters

Keyboard Wedge Host Types

 Select the keyboard wedge host by scanning one of the following bar codes.




***IBM PC/AT & IBM PC Compatibles**

 

IBM AT Notebook

Keyboard Wedge Country Types (Country Codes)

 Scan the bar code corresponding to the keyboard type. If the particular keyboard type is not listed, see [Alternate Numeric Keypad Emulation on page 8-8](#).



***North American**



 
German Windows



French Windows



French Canadian Windows 95/98



French Canadian Windows XP/2000

 


French International Windows


Keyboard Wedge Country Types (Country Codes) (continued)




Spanish Windows




Italian Windows

 

Swedish Windows

 

UK English Windows

 


Japanese Windows




Brazilian-Portuguese Windows

Ignore Unknown Characters

 Unknown characters are characters the host does not recognize. When **Send Bar Codes With Unknown Characters** is selected, all bar code data is sent except for unknown characters, and the digital scanner emits no error beeps. When **Do Not Send Bar Codes With Unknown Characters** is selected, bar code data is sent until the first unknown character is encountered, and the digital scanner emits an error beep.



 
***Send Bar Codes with Unknown Characters
(Enable)**



**Do Not Send Bar Codes with Unknown Characters
(Disable)**

Keystroke Delay

 
This is the delay in milliseconds between emulated keystrokes. Scan a bar code below to increase the delay when hosts require a slower data transmission.



***0 msec (No Delay)**



 
20 msec (Medium Delay)



40 msec (Long Delay)

Intra-Keystroke Delay

 Enable Intra-Keystroke Delay to insert an additional delay between each emulated key press and release. This also sets the Keystroke Delay parameter to a minimum of 5 msec.




Enable Intra-Keystroke Delay




***Disable Intra-Keystroke Delay**

 Alternate Numeric Keypad Emulation

This allows emulation of most other country keyboard types not listed in [Keyboard Wedge Country Types \(Country Codes\)](#) on page 8-5 in a Microsoft® operating system environment.




Enable Alternate Numeric Keypad

 


***Disable Alternate Numeric Keypad**

Caps Lock On

 When enabled, the digital scanner emulates keystrokes as if the Caps Lock key is always pressed.




Enable Caps Lock On

 

***Disable Caps Lock On**

Caps Lock Override

 When enabled, on AT or AT Notebook hosts, the keyboard ignores the state of the Caps Lock key and matches the case (upper or lower) of the sent character. Therefore, an upper case 'A' in the bar code is sent as an upper case 'A,' and a lower case 'a' in the bar code is sent as a lower case 'a,' no matter what the state of the keyboard's Caps Lock key.



Enable Caps Lock Override




***Disable Caps Lock Override**



 
NOTE If both Caps Lock On and Caps Lock Override are enabled, Caps Lock Override takes precedence.

Convert Wedge Data

When enabled, the digital scanner converts all bar code data to the selected case.



Convert Wedge Data to Upper Case

 


Convert Wedge Data to Lower Case



***Do Not Convert Wedge Data**

 Function Key Mapping

ASCII values under 32 are normally sent as control key sequences (see [Table 8-2 on page 8-13](#)). Enable this parameter to send the keys in bold in place of the standard key mapping. Table entries that do not have a bold entry remain the same regardless of this parameter.



Enable Function Key Mapping




***Disable Function Key Mapping**

 FN1 Substitution

When enabled, this parameter replaces any FN1 character in an EAN128 bar code with a keystroke chosen by the user. See [FN1 Substitution Values on page 5-44](#).




Enable FN1 Substitution




***Disable FN1 Substitution**

Send Make and Break

 When enabled, the scan codes for releasing a key are not sent.



***Send Make and Break Scan Codes**

 

Send Make Scan Code Only

Keyboard Maps

The following keyboard maps are provided for prefix/suffix keystroke parameters. To program the prefix/suffix values, see the bar codes on [page 5-42](#).

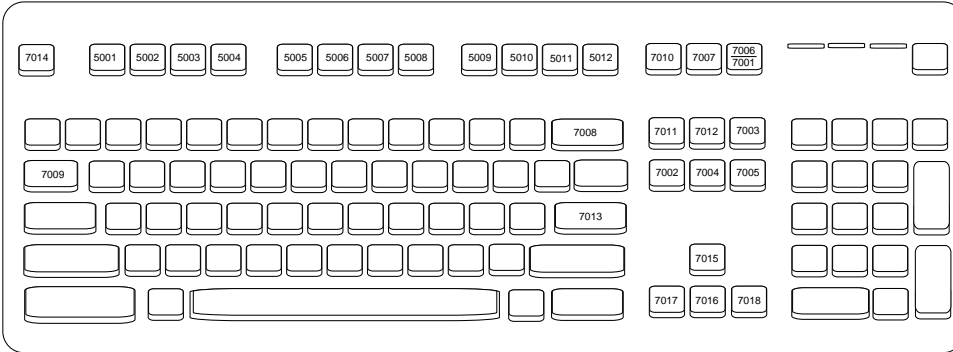


Figure 8-2 IBM PS2 Type Keyboard

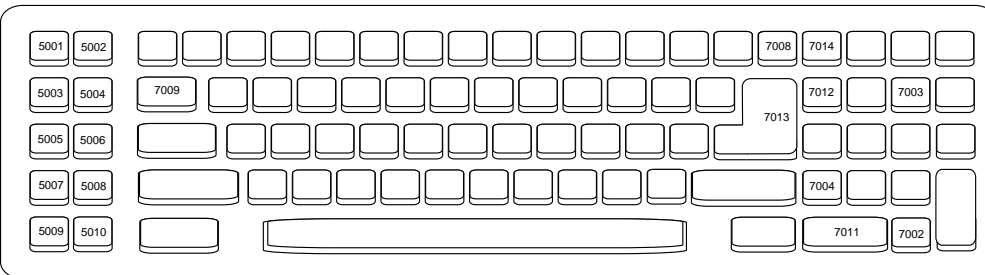


Figure 8-3 IBM PC/AT

ASCII Character Set

- ✓ **NOTE** Code 39 Full ASCII interprets the bar code special character (\$ + % /) preceding a Code 39 character and assigns an ASCII character value to the pair. For example, when Code 39 Full ASCII is enabled and a +B is scanned, it is interpreted as b, %J as ?, and %V as @. Scanning ABC%i outputs the keystroke equivalent of ABC >.

Table 8-2 Keyboard Wedge ASCII Character Set

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1001	\$A	CTRL A
1002	\$B	CTRL B
1003	\$C	CTRL C
1004	\$D	CTRL D
1005	\$E	CTRL E
1006	\$F	CTRL F
1007	\$G	CTRL G
1008	\$H	CTRL H/ BACKSPACE ¹
1009	\$I	CTRL I/ HORIZONTAL TAB ¹
1010	\$J	CTRL J
1011	\$K	CTRL K
1012	\$L	CTRL L
1013	\$M	CTRL M/ ENTER ¹
1014	\$N	CTRL N
1015	\$O	CTRL O
1016	\$P	CTRL P
1017	\$Q	CTRL Q
1018	\$R	CTRL R
1019	\$S	CTRL S
1020	\$T	CTRL T
1021	\$U	CTRL U

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 8-2 Keyboard Wedge ASCII Character Set (Continued)

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1022	\$V	CTRL V
1023	\$W	CTRL W
1024	\$X	CTRL X
1025	\$Y	CTRL Y
1026	\$Z	CTRL Z
1027	%A	CTRL [/ESC ¹
1028	%B	CTRL \
1029	%C	CTRL]
1030	%D	CTRL 6
1031	%E	CTRL -
1032	Space	Space
1033	/A	!
1034	/B	"
1035	/C	#
1036	/D	\$
1037	/E	%
1038	/F	&
1039	/G	'
1040	/H	(
1041	/I)
1042	/J	*
1043	/K	+
1044	/L	,
1045	-	-
1046	.	.
1047	/O	/
1048	0	0
1049	1	1

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 8-2 Keyboard Wedge ASCII Character Set (Continued)

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1050	2	2
1051	3	3
1052	4	4
1053	5	5
1054	6	6
1055	7	7
1056	8	8
1057	9	9
1058	/Z	:
1059	%F	;
1060	%G	<
1061	%H	=
1062	%I	>
1063	%J	?
1064	%V	@
1065	A	A
1066	B	B
1067	C	C
1068	D	D
1069	E	E
1070	F	F
1071	G	G
1072	H	H
1073	I	I
1074	J	J
1075	K	K
1076	L	L
1077	M	M

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 8-2 Keyboard Wedge ASCII Character Set (Continued)

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1078	N	N
1079	O	O
1080	P	P
1081	Q	Q
1082	R	R
1083	S	S
1084	T	T
1085	U	U
1086	V	V
1087	W	W
1088	X	X
1089	Y	Y
1090	Z	Z
1091	%K	[
1092	%L	\
1093	%M]
1094	%N	^
1095	%O	_
1096	%W	'
1097	+A	a
1098	+B	b
1099	+C	c
1100	+D	d
1101	+E	e
1102	+F	f
1103	+G	g
1104	+H	h
1105	+I	i

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 8-2 Keyboard Wedge ASCII Character Set (Continued)

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1106	+J	j
1107	+K	k
1108	+L	l
1109	+M	m
1110	+N	n
1111	+O	o
1112	+P	p
1113	+Q	q
1114	+R	r
1115	+S	s
1116	+T	t
1117	+U	u
1118	+V	v
1119	+W	w
1120	+X	x
1121	+Y	y
1122	+Z	z
1123	%P	{
1124	%Q	
1125	%R	}
1126	%S	~

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 8-3 Keyboard Wedge ALT Key Character Set

ALT Keys	Keystroke
2065	ALT A
2066	ALT B
2067	ALT C
2068	ALT D
2069	ALT E

Table 8-3 Keyboard Wedge ALT Key Character Set (Continued)

ALT Keys	Keystroke
2070	ALT F
2071	ALT G
2072	ALT H
2073	ALT I
2074	ALT J
2075	ALT K
2076	ALT L
2077	ALT M
2078	ALT N
2079	ALT O
2080	ALT P
2081	ALT Q
2082	ALT R
2083	ALT S
2084	ALT T
2085	ALT U
2086	ALT V
2087	ALT W
2088	ALT X
2089	ALT Y
2090	ALT Z

Table 8-4 Keyboard Wedge GUI Key Character Set

GUI Keys	Keystrokes
3000	Right Control Key
3048	GUI 0
3049	GUI 1
3050	GUI 2
3051	GUI 3
3052	GUI 4
3053	GUI 5
3054	GUI 6

Table 8-4 Keyboard Wedge GUI Key Character Set (Continued)

GUI Keys	Keystrokes
3055	GUI 7
3056	GUI 8
3057	GUI 9
3065	GUI A
3066	GUI B
3067	GUI C
3068	GUI D
3069	GUI E
3070	GUI F
3071	GUI G
3072	GUI H
3073	GUI I
3074	GUI J
3075	GUI K
3076	GUI L
3077	GUI M
3078	GUI N
3079	GUI O
3080	GUI P
3081	GUI Q
3082	GUI R
3083	GUI S
3084	GUI T
3085	GUI U
3086	GUI V
3087	GUI W
3088	GUI X
3089	GUI Y
3090	GUI Z

Table 8-5 *Keyboard Wedge F Key Character Set*

F Keys	Keystroke
5001	F1
5002	F2
5003	F3
5004	F4
5005	F5
5006	F6
5007	F7
5008	F8
5009	F9
5010	F10
5011	F11
5012	F12
5013	F13
5014	F14
5015	F15
5016	F16
5017	F17
5018	F18
5019	F19
5020	F20
5021	F21
5022	F22
5023	F23
5024	F24

Table 8-6 *Keyboard Wedge Numeric Keypad Character Set*

Numeric Keypad	Keystroke
6042	*
6043	+
6044	undefined

Table 8-6 Keyboard Wedge Numeric Keypad Character Set (Continued)

Numeric Keypad	Keystroke
6045	-
6046	.
6047	/
6048	0
6049	1
6050	2
6051	3
6052	4
6053	5
6054	6
6055	7
6056	8
6057	9
6058	Enter
6059	Num Lock

Table 8-7 Keyboard Wedge Extended Keypad Character Set

Extended Keypad	Keystroke
7001	Break
7002	Delete
7003	Pg Up
7004	End
7005	Pg Dn
7006	Pause
7007	Scroll Lock
7008	Backspace
7009	Tab
7010	Print Screen
7011	Insert
7012	Home
7013	Enter

Table 8-7 *Keyboard Wedge Extended Keypad Character Set (Continued)*

Extended Keypad	Keystroke
7014	Escape
7015	Up Arrow
7016	Dn Arrow
7017	Left Arrow
7018	Right Arrow

CHAPTER 9 RS-232 INTERFACE

Introduction



IMPORTANT The RS-232 interface is not applicable to the STB3574 Industrial Ethernet cradle.

 
This chapter provides instructions for programming the digital scanner to interface with an RS-232 host interface. The RS-232 interface is used to attach the cradle to point-of-sale devices, host computers, or other devices with an available RS-232 port (i.e., COM port).

If the particular host is not listed in [Table 9-2](#), set the communication parameters to match the host device. Refer to the documentation for the host device.



NOTE This digital scanner uses TTL RS-232 signal levels, which interface with most system architectures. For system architectures requiring RS-232C signal levels, Zebra offers different cables providing the TTL to RS-232C conversion. Contact Zebra Support for more information.

Throughout the bar code menus, default values are indicated with asterisks (*).



* Indicates Default *Baud Rate 9600 Feature/Option

Connecting an RS-232 Interface

This connection is made directly from the cradle to the host computer.

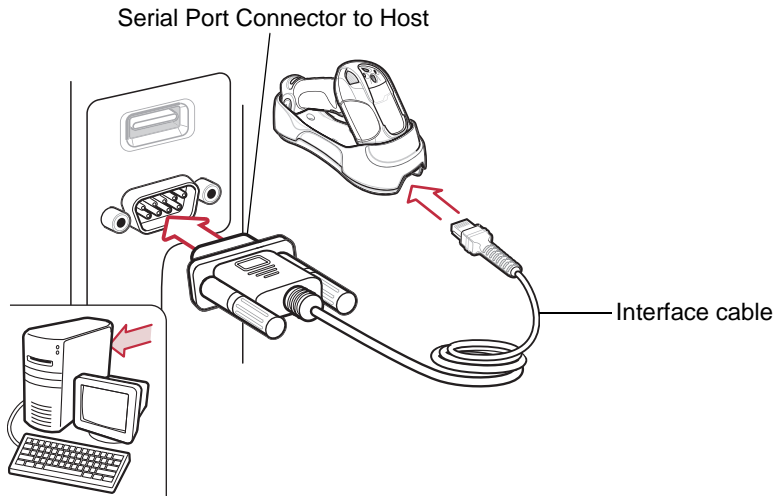


Figure 9-1 RS-232 Direct Connection

✓ **NOTE** Interface cables vary depending on configuration. The connectors illustrated in [Figure 9-1](#) are examples only. The connectors may be different from those illustrated, but the steps to connect the cradle remain the same.

✓ **NOTE** Disconnect the power supply before changing host cables or the digital scanner may not recognize the new host.

1. Attach the modular connector of the RS-232 interface cable to the cable interface port on the cradle
See [Connecting the Cradle on page 1-5](#).
2. Connect the other end of the RS-232 interface cable to the serial port on the host.
3. If required, connect the power supply to the cradle.
4. Ensure that all connections are secure.
5. Pair the digital scanner to the cradle by scanning the bar code on the cradle.
6. Select the RS-232 host type by scanning the appropriate bar code from [RS-232 Host Types on page 9-6](#).
7. To modify any other parameter options, scan the appropriate bar codes in this chapter.

RS-232 Default Parameters

Table 9-1 lists the defaults for RS-232 host parameters. To change any option, scan the appropriate bar code(s) provided in the parameter descriptions section beginning on [page 9-4](#).



NOTE See [Appendix A, Standard Default Parameters](#) for all user preference, host, symbology, and miscellaneous default parameters.

Table 9-1 *RS-232 Host Default Table*

Parameter	Default	Page Number
RS-232 Host Parameters		
RS-232 Host Types	Standard RS-232	9-6
Baud Rate	9600	9-7
Parity	None	9-8
Check Receive Errors	Enable	9-8
Stop Bit Select	1 Stop Bit	9-9
Data Bits	8-Bit	9-9
Hardware Handshaking	None	9-10
Software Handshaking	None	9-12
Host Serial Response Time-out	Minimum: 2 sec	9-14
RTS Line State	Host: Low RTS	9-15
Beep on <BEL>	Disable	9-15
Intercharacter Delay	Minimum: 0 msec	9-16
Nixdorf Beep/LED Options	Normal Operation	9-17
Ignore Unknown Characters	Send Bar Code	9-18

RS-232 Host Parameters

Various RS-232 host types are set up with their own parameter default settings. Selecting the host type sets the parameter defaults as listed in [Table 9-2](#).

Table 9-2 Terminal Specific RS-232

Parameter	Standard RS-232 (Default)	ICL	Wincor-Nixdorf Mode A	Wincor-Nixdorf Mode B	Olivetti	Omron	OPOS/JPOS	Fujitsu	CUTE
Transmit Code ID	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Data Transmission Format	Data as is	Data/Suffix	Data/Suffix	Data/Suffix	Prefix/Data/Suffix	Data/Suffix	Data/Suffix	Data/Suffix	Prefix/Data/Suffix
Suffix	CR/LF (7013)	CR (1013)	CR (1013)	CR (1013)	ETX (1002)	CR (1013)	CR (1013)	CR (1013)	CR (1013) ETX (1003)
Baud Rate	9600	9600	9600	9600	9600	9600	9600	9600	9600
Parity	None	Even	Odd	Odd	Even	None	Odd	None	Even
Hardware Handshaking	None	RTS/CTS Option 3	RTS/CTS Option 3	RTS/CTS Option 3	None	None	RTS/CTS Option 3	None	None
Software Handshaking	None	None	None	None	Ack/Nak	None	None	None	None
Serial Response Time-out	2 Sec.	9.9 Sec.	9.9 Sec.	9.9 Sec.	9.9 Sec.	9.9 Sec.	9.9 Sec.	2 Sec.	9.9 Sec.
Stop Bit Select	One	One	One	One	One	One	One	One	One
ASCII Format	8-Bit	8-Bit	8-Bit	8-Bit	7-Bit	8-Bit	8-Bit	8-Bit	7-Bit
Beep On <BEL>	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
RTS Line State	Low	High	Low	Low = No data to send	Low	High	Low = No data to send	Low	High
Prefix	None	None	None	None	STX (1003)	None	None	None	STX (1002)

In the Nixdorf Mode B, if CTS is low, scanning is disabled. When CTS is high, scanning is enabled. If you scan Nixdorf Mode B without connecting the digital scanner to the proper host, it may appear unable to scan. If this happens, scan a different RS-232 host type within 5 seconds of cycling power to the digital scanner.

The CUTE host disables all parameter scanning, including Set Defaults. If you inadvertently select CUTE, scan **Enable Parameter Bar Code Scanning (1)* on page 5-5, then change the host selection.

RS-232 Host Parameters (continued)


Selecting the ICL, Wincor-Nixdorf Mode A, Wincor-Nixdorf Mode B, Olivetti, Omron, OPOS/JPOS, Fujitsu or CUTE host type enables the transmission of code ID characters listed in [Table 9-3](#). These code ID characters are not programmable and are separate from the Transmit Code ID feature. Do not enable the Transmit Code ID feature for these terminals.

Table 9-3 Terminal Specific Code ID Characters


Code Type	ICL	Wincor-Nixdorf Mode A	Wincor-Nixdorf Mode B	Olivetti	Omron	OPOS/JPOS	Fujitsu	CUTE
UPC-A	A	A	A	A	A	A	A	A
UPC-E	E	C	C	C	E	C	E	None
EAN-8/JAN-8	FF	B	B	B	FF	B	FF	None
EAN-13/JAN-13	F	A	A	A	F	A	F	A
Code 39	C <len>	M	M	M <len>	C <len>	M	None	3
Code 39 Full ASCII	None	M	M	None	None	M	None	3
Codabar	N <len>	N	N	N <len>	N <len>	N	None	None
Code 128	L <len>	K	K	K <len>	L <len>	K	None	5
I 2 of 5	I <len>	I	I	I <len>	I <len>	I	None	1
Code 93	None	L	L	L <len>	None	L	None	None
D 2 of 5	H <len>	H	H	H <len>	H <len>	H	None	2
GS1-128	L <len>	P	P	P <len>	L <len>	P	None	5
MSI	None	O	O	O <len>	None	O	None	None
Bookland EAN	F	A	A	A	F	A	F	None
Trioptic	None	None	None	None	None	None	None	None
Code 11	None	None	None	None	None	None	None	None
IATA	H<len>	H	H	None	None	H	None	2
Code 32	None	None	None	None	None	None	None	None
GS1 Databar Variants	None	E	E	None	None	None	None	None
PDF417	None	Q	Q	None	None	None	None	6
Datamatrix	None	R	R	None	None	R	None	None
Micro PDF	None	S	S	None	None	S	None	None
Maxicode	None	T	T	None	None	T	None	None
QR Codes, Macro QR and Micro QR	None	U	U	None	None	U	None	None
Aztec/Aztec Rune	None	V	V	None	None	V	None	None

RS-232 Host Types


To select an RS-232 host type, scan one of the following bar codes.

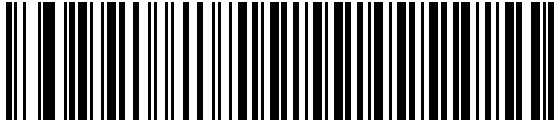


***Standard RS-232**

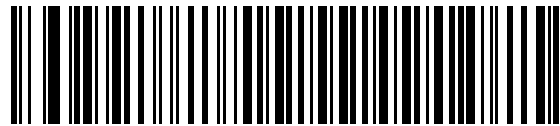

ICL RS-232

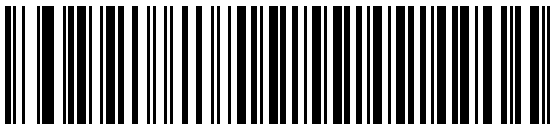

Wincor-Nixdorf RS-232 Mode A

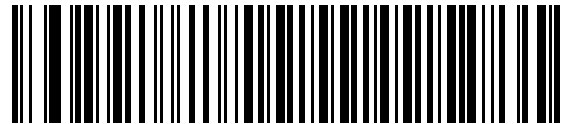

Wincor-Nixdorf RS-232 Mode B




Olivetti ORS4500




Omron


RS-232 Host Types (continued)

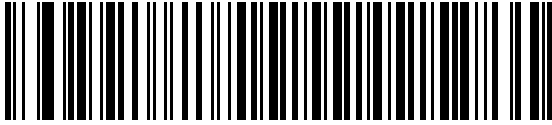

OPOS/JPOS

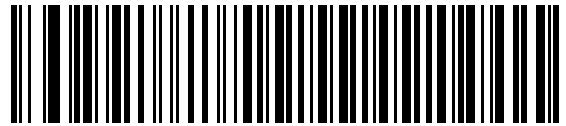

Fujitsu RS-232

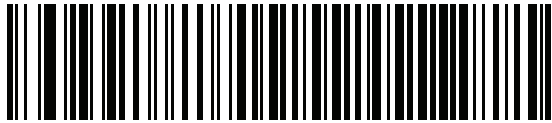


SITA/CUTE

Baud Rate


Baud rate is the number of bits of data transmitted per second. Set the digital scanner's baud rate to match the baud rate setting of the host device. Otherwise, data may not reach the host device or may reach it in distorted form.



 *Baud Rate 9600



Baud Rate 19,200

 

Baud Rate 38,400

Parity

A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements:

- Select **Odd** parity to set the parity bit value to 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.
- Select **Even** parity to set the parity bit value to 0 or 1, based on data, to ensure that an even number of 1 bits are contained in the coded character.
- Select **None** when no parity bit is required.



Odd



Even



***None**

Check Receive Errors

Select whether or not to check the parity, framing, and overrun of received characters. The parity value of received characters is verified against the parity parameter selected above.



***Check For Received Errors (Enable)**



 
Do Not Check For Received Errors (Disable)

Stop Bit Select

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. The number of stop bits selected (one or two) depends on the number the receiving terminal is programmed to accommodate. Set the number of stop bits to match host device requirements.



*1 Stop Bit




2 Stop Bits

Data Bits

This parameter allows the digital scanner to interface with devices requiring a 7-bit or 8-bit ASCII protocol.



 7-Bit



*8-Bit

Hardware Handshaking

The data interface consists of an RS-232 port designed to operate either with or without the hardware handshaking lines, *Request to Send* (RTS), and *Clear to Send* (CTS).

If Standard RTS/CTS handshaking is not selected, scan data is transmitted as it becomes available. If Standard RTS/CTS handshaking is selected, scan data is transmitted according to the following sequence:

- The digital scanner reads the CTS line for activity. If CTS is asserted, the digital scanner waits up to the Host Serial Response Time-out for the host to de-assert the CTS line. If, after Host Serial Response Time-out (default), the CTS line is still asserted, the digital scanner sounds a transmit error, and any scanned data is lost.
- When the CTS line is de-asserted, the digital scanner asserts the RTS line and waits up to the Host Serial Response Time-out for the host to assert CTS. When the host asserts CTS, data is transmitted. If, after Host Serial Response Time-out (default), the CTS line is still de-asserted, the digital scanner sounds a transmit error, and discards the data.
- When data transmission is complete, the digital scanner de-asserts RTS 10 msec after sending the last character.
- The host should respond by de-asserting CTS. The digital scanner checks for a de-asserted CTS upon the next transmission of data.

During the transmission of data, the CTS line should be asserted. If CTS is de-asserted for more than 50 ms between characters, the transmission is aborted, the digital scanner sounds a transmission error, and the data is discarded.

If this communications sequence fails, the digital scanner issues an error indication. In this case, the data is lost and must be rescanned.

If Hardware Handshaking and Software Handshaking are both enabled, Hardware Handshaking takes precedence.

 


NOTE The DTR signal is jumpered (set) to the active state.

Scan one of the following bar codes to select a hardware handshaking option:

- **None** - Scan the bar code below if no hardware handshaking is desired.
- **Standard RTS/CTS** - Scan the bar code below to select standard RTS/CTS hardware handshaking.
- **RTS/CTS Option 1** - When RTS/CTS Option 1 is selected, the digital scanner asserts RTS before transmitting and ignores the state of CTS. The digital scanner de-asserts RTS when the transmission is complete.
- **RTS/CTS Option 2** - When Option 2 is selected, RTS is always high or low (user-programmed logic level). However, the digital scanner waits for CTS to be asserted before transmitting data. If CTS is not asserted within Host Serial Response Time-out (default), the digital scanner issues an error indication and discards the data.
- **RTS/CTS Option 3** - When Option 3 is selected, the digital scanner asserts RTS prior to any data transmission, regardless of the state of CTS. The digital scanner waits up to Host Serial Response Time-out (default) for CTS to be asserted. If CTS is not asserted during this time, the digital scanner issues an error indication and discards the data. The digital scanner de-asserts RTS when transmission is complete.


Hardware Handshaking (continued)



***None**



 
Standard RTS/CTS



RTS/CTS Option 1



 RTS/CTS Option 2



RTS/CTS Option 3

Software Handshaking

 
This parameter offers control of the data transmission process in addition to, or instead of, that offered by hardware handshaking. If software handshaking and hardware handshaking are both enabled, hardware handshaking takes precedence.

Select one of the following five options:


- **None** - Select this option to transmit data immediately. No response is expected from the host.
- **ACK/NAK** - When this option is selected, after transmitting data, the digital scanner expects either an ACK or NAK response from the host. When a NAK is received, the digital scanner transmits the same data again and waits for either an ACK or NAK. After three unsuccessful attempts to send data when NAKs are received, the digital scanner issues an error indication and discards the data.

The digital scanner waits up to the programmable Host Serial Response Time-out to receive an ACK or NAK. If the digital scanner does not get a response in this time, it issues an error indication and discards the data. There are no retries when a time-out occurs.


- **ENQ** - When this option is selected, the digital scanner waits for an ENQ character from the host before transmitting data. If an ENQ is not received within the Host Serial Response Time-out, the digital scanner issues an error indication and discards the data. The host must transmit an ENQ character at least every Host Serial Response Time-out to prevent transmission errors.
- **ACK/NAK with ENQ** - This combines the two previous options. For re-transmissions of data, due to a NAK from the host, an additional ENQ is not required.
- **XON/XOFF** - An XOFF character turns the digital scanner transmission off until the digital scanner receives an XON character. There are two situations for XON/XOFF:
 - **XOFF** is received before the digital scanner has data to send. When the digital scanner has data to send, it waits up to Host Serial Response Time-out for an XON character before transmission. If the XON is not received within this time, the digital scanner issues an error indication and discards the data.
 - **XOFF** is received during a transmission. Data transmission then stops after sending the current byte. When the digital scanner receives an XON character, it sends the rest of the data message. The digital scanner waits up to 30 seconds for the XON.

Software Handshaking (continued)

***None**

 


ACK/NAK

 

ENQ



 ACK/NAK with ENQ



XON/XOFF

Host Serial Response Time-out

This parameter specifies how long the digital scanner waits for an ACK, NAK, or CTS before determining that a transmission error has occurred. This only applies when in one of the ACK/NAK Software Handshaking modes, or RTS/CTS Hardware Handshaking option.


✓ **NOTE** This parameter does not apply to the Wincor-Nixdorf RS-232 Mode A/B and the OPOS/JPOS host types.



***Minimum: 2 sec**



 
Low: 2.5 Sec



Medium: 5 Sec



 
High: 7.5 Sec




Maximum: 9.9 Sec

RTS Line State

 This parameter sets the idle state of the Serial Host RTS line. Scan a bar code below to select **Low RTS** or **High RTS** line state.



***Host: Low RTS**

 

Host: High RTS

 
Beep on <BEL>

Point-to-Point Mode Only


When this parameter is enabled, the digital scanner issues a beep when a <BEL> character is detected on the RS-232 serial line. <BEL> is issued to indicate an illegal entry or other important event.



NOTE This parameter is not supported in Multipoint-to-Point Mode.



**Beep On <BEL> Character
(Enable)**

 

***Do Not Beep On <BEL> Character
(Disable)**

Intercharacter Delay


This parameter specifies the intercharacter delay inserted between character transmissions.



***Minimum: 0 msec**



 
Low: 25 msec



Medium: 50 msec



 High: 75 msec




Maximum: 99 msec


Nixdorf Mode A/B and OPOS/JPOS Beep/LED Options

When Nixdorf Mode A, Nixdorf Mode B, or OPOS/JPOS is selected, this parameter indicates when the digital scanner should beep and turn on its LED after a decode.

 
✓ **NOTE** The **Beep/LED After CTS Pulse** option is not valid when Nixdorf Mode A is selected.



 ***Normal Operation**
(Beep/LED Immediately After Decode)



Beep/LED After Transmission

 

Beep/LED After CTS Pulse

Ignore Unknown Characters

Unknown characters are characters the host does not recognize. When **Send Bar Codes with Unknown Characters** is selected, all bar code data is sent except for unknown characters, and no error beeps sound on the digital scanner. When **Do Not Send Bar Codes With Unknown Characters** is selected, bar code data is sent up to the first unknown character and then an error beep sounds on the digital scanner.



***Send Bar Code with Unknown Characters
(Enable)**



**Do Not Send Bar Codes with Unknown Characters
(Disable)**

RS-232 ASCII Character Set

The values in [Table 9-4](#) can be assigned as prefixes or suffixes for ASCII character data transmission.

Table 9-4 RS-232 Prefix/Suffix Values

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1000	%U	NUL
1001	\$A	SOH
1002	\$B	STX
1003	\$C	ETX
1004	\$D	EOT
1005	\$E	ENQ
1006	\$F	ACK
1007	\$G	BELL
1008	\$H	BCKSPC
1009	\$I	HORIZ TAB
1010	\$J	LF/NW LN
1011	\$K	VT

Table 9-4 RS-232 Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1012	\$L	FF
1013	\$M	CR/ENTER
1014	\$N	SO
1015	\$O	SI
1016	\$P	DLE
1017	\$Q	DC1/XON
1018	\$R	DC2
1019	\$S	DC3/XOFF
1020	\$T	DC4
1021	\$U	NAK
1022	\$V	SYN
1023	\$W	ETB
1024	\$X	CAN
1025	\$Y	EM
1026	\$Z	SUB
1027	%A	ESC
1028	%B	FS
1029	%C	GS
1030	%D	RS
1031	%E	US
1032	Space	Space
1033	/A	!
1034	/B	"
1035	/C	#
1036	/D	\$
1037	/E	%
1038	/F	&
1039	/G	'
1040	/H	(
1041	/I)
1042	/J	*

Table 9-4 RS-232 Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1043	/K	+
1044	/L	,
1045	-	-
1046	.	.
1047	/O	/
1048	0	0
1049	1	1
1050	2	2
1051	3	3
1052	4	4
1053	5	5
1054	6	6
1057	7	7
1056	8	8
1057	9	9
1058	/Z	:
1059	%F	;
1060	%G	<
1061	%H	=
1062	%I	>
1063	%J	?
1064	%V	@
1065	A	A
1066	B	B
1067	C	C
1068	D	D
1069	E	E
1070	F	F
1071	G	G
1072	H	H
1073	I	I

Table 9-4 RS-232 Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1074	J	J
1075	K	K
1076	L	L
1077	M	M
1078	N	N
1079	O	O
1080	P	P
1081	Q	Q
1082	R	R
1083	S	S
1084	T	T
1085	U	U
1086	V	V
1087	W	W
1088	X	X
1089	Y	Y
1090	Z	Z
1091	%K	[
1092	%L	\
1093	%M]
1094	%N	^
1095	%O	_
1096	%W	`
1097	+A	a
1098	+B	b
1099	+C	c
1100	+D	d
1101	+E	e
1102	+F	f
1103	+G	g
1104	+H	h

Table 9-4 RS-232 Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1105	+I	i
1106	+J	j
1107	+K	k
1108	+L	l
1109	+M	m
1110	+N	n
1111	+O	o
1112	+P	p
1113	+Q	q
1114	+R	r
1115	+S	s
1116	+T	t
1117	+U	u
1118	+V	v
1119	+W	w
1120	+X	x
1121	+Y	y
1122	+Z	z
1123	%P	{
1124	%Q	
1125	%R	}
1126	%S	~
1127		Undefined
7013		ENTER

CHAPTER 10 USB INTERFACE

Introduction



IMPORTANT The USB interface is not applicable to the STB3574 Industrial Ethernet cradle.

This chapter provides instructions for programming the digital scanner to interface with a USB host. The cradle connects directly to a USB host, or a powered USB hub. The USB host can power the cradle and recharge the digital scanner battery, but this charging method has limitations. See [Using the USB Interface to Supply Power on page 1-6](#).

Throughout the programming bar code menus, default values are indicated with asterisks (*).



* Indicates Default — *North American Standard USB Keyboard — Feature/Option

Connecting a USB Interface

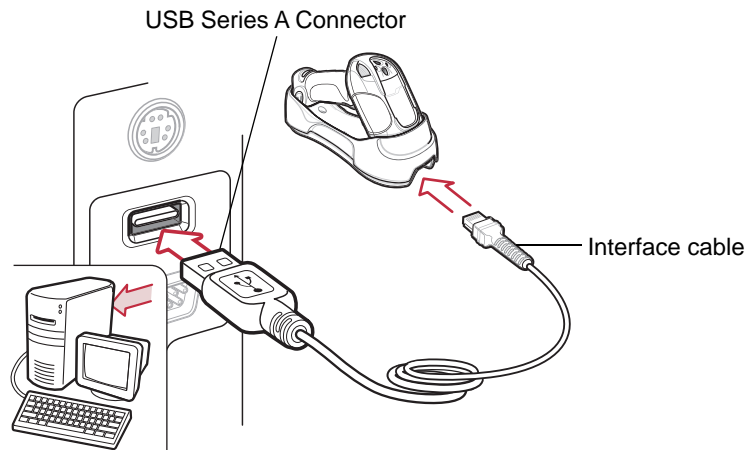


Figure 10-1 USB Connection

The cradle connects with USB-capable hosts including:

- Desktop PCs and notebooks
- Apple™ Macintosh
- IBM SurePOS terminals
- Sun, IBM, and other network computers that support more than one keyboard.

The following operating systems support the digital scanner through USB:

- Windows® 98, 2000, ME, XP, Vista
- Mac OS 8.5 and above
- IBM 4690 OS.

The cradle also interfaces with other USB hosts which support USB Human Interface Devices (HID).

To connect the cradle to a USB host:

1. Attach the modular connector of the USB interface cable to the cable interface port on the digital scanner. See [Connecting the Cradle on page 1-5](#).
2. Plug the series A connector in the USB host or hub, or plug the Plus Power connector in an available port of the IBM SurePOS terminal.
3. Ensure all connections are secure.
4. Pair the digital scanner to the cradle by scanning the bar code on the cradle.
5. Select the USB device type by scanning the appropriate bar code from [USB Device Type on page 10-5](#).

6. On first installation when using Windows, the software displays a prompt to select or install the *Human Interface Device* driver. To install the Human Interface Device driver provided by Windows, click **Next** through all the choices and click **Finished** on the last choice. The digital scanner powers up during this installation.
7. To modify any other parameter options, scan the appropriate bar codes in this chapter.
8. Connect an external power supply if desired.

✓ **NOTE** Interface cables vary depending on configuration. The connectors illustrated in [Figure 10-1](#) are examples only. The connectors may be different from those illustrated, but the steps to connect the cradle remain the same.

✓ **NOTE** Disconnect the power supply before changing host cables or the digital scanner may not recognize the new host.

If problems occur, see [Troubleshooting on page 3-2](#).

USB Default Parameters

Table 10-1 lists the defaults for USB host parameters. To change any option, scan the appropriate bar code(s) provided in the parameter descriptions section beginning on [page 10-5](#).

✓ **NOTE** See [Appendix A, Standard Default Parameters](#) for all user preference, host, symbology, and miscellaneous default parameters.

Table 10-1 *USB Host Default Table*


Parameter	Default	Page Number
USB Host Parameters		
USB Device Type	USB Keyboard (HID)	10-5
USB Country Keyboard Types (Country Codes)	North American	10-7
Symbol Native API (SNAPI) Status Handshaking	Enable	10-9
USB Keystroke Delay	No Delay (0 msec)	10-9
USB Caps Lock Override	Disable	10-10
USB Ignore Unknown Characters	Enable	10-10
Emulate Keypad	Disable	10-11
Emulate Keypad with Leading Zero	Disable	10-11
Quick Keypad Emulation	Disable	10-12
USB Keyboard FN1 Substitution	Disable	10-12
Function Key Mapping	Disable	10-13
Simulated Caps Lock	Disable	10-13
Convert Case	No Case Conversion	10-14
USB Static CDC	Disable	10-14
USB Polling Interval	8 msec	10-15
Ignore Beep	Disable	10-17
Ignore Bar Code Configuration	Disable	10-17

USB Host Parameters

USB Device Type

Select the desired USB device type.

 
- ✓ **NOTE** When changing USB Device Types, the digital scanner disconnects and reconnects as the cradle re-enumerates on the USB bus.
- ✓ **NOTE** Select **IBM Hand-Held USB** to disable data transmission when an IBM register issues a Scan Disable command. Aim, illumination, and decoding is still permitted. Select **IBM OPOS (IBM Hand-Held USB with Full Scan Disable)** to completely shut off the scanner when an IBM register issues a Scan Disable command, including aim, illumination, decoding and data transmission.
- ✓ **NOTE** The **SSI over USB CDC** option enables a subset of the SSI protocol over the USB CDC interface which omits all hardware handshaking functionality. For more information refer to the *SSI Programmer's Guide*.



*USB Keyboard (HID)



 
IBM Table-Top USB



IBM Hand-Held USB



 IBM OPOS
(IBM Hand-Held USB with Full Scan Disable)



Simple COM Port Emulation

USB Device Type (continued)



USB CDC Host



SSI over USB CDC



Symbol Native API (SNAPI) with Imaging Interface



Symbol Native API (SNAPI) without Imaging Interface

 


NOTE Symbol Native API (SNAPI) is for use with the STB/FLB578 With FIPS Cradles only.


USB Country Keyboard Types (Country Codes)

Scan the bar code corresponding to the keyboard type. This setting applies only to the USB HID Keyboard Emulation device.


✓ **NOTE** When changing USB Country Keyboard Types, the digital scanner resets and issues the standard startup beep sequences.




*North American Standard USB Keyboard

 

German Windows

 

French Windows

 

French Canadian Windows 95/98



French Canadian Windows 2000/XP

 
USB Country Keyboard Types (Country Codes) (continued)




French International Windows




Spanish Windows




Italian Windows

 


Swedish Windows

 

UK English Windows

 

Japanese Windows (ASCII)

 

Brazilian-Portuguese Windows

Symbol Native API (SNAPI) Status Handshaking

After selecting a SNAPI interface as the USB device type, select whether to enable or disable status handshaking.




***Enable SNAPI Status Handshaking**



 Disable SNAPI Status Handshaking

USB Keystroke Delay


This parameter sets the delay, in milliseconds, between emulated keystrokes. Scan a bar code below to increase the delay when hosts require slower data transmission.



***No Delay (0 msec)**



 
Medium Delay (20 msec)




Long Delay (40 msec)

USB Caps Lock Override

 This option applies only to the HID Keyboard Emulation device. When enabled, the case of the data is preserved regardless of the state of the caps lock key. This setting is always enabled for the Japanese, Windows (ASCII) keyboard type and can not be disabled.



**Override Caps Lock Key
(Enable)**

 

***Do Not Override Caps Lock Key
(Disable)**

USB Ignore Unknown Characters

Unknown characters are characters the host does not recognize. When **Send Bar Codes With Unknown Characters** is selected, all bar code data is sent except for unknown characters, and no error beeps sound. When **Do Not Send Bar Codes With Unknown Characters** is selected, bar codes containing at least one unknown character are not sent to the host, and an error beep sounds.



***Send Bar Codes with Unknown Characters
(Enable)**




**Do Not Send Bar Codes with Unknown Characters
(Disable)**

Emulate Keypad

When enabled, all characters are sent as ASCII sequences over the numeric keypad. For example ASCII A is sent as "ALT make" 0 6 5 "ALT Break."




***Disable Keypad Emulation**

 


Enable Keypad Emulation

Emulate Keypad with Leading Zero

 Enable this to send character sequences sent over the numeric keypad as ISO characters which have a leading zero. For example ASCII A transmits as "ALT MAKE" 0 0 6 5 "ALT BREAK".




*** Disable Keypad Emulation with Leading Zero**

 


Enable Keypad Emulation with Leading Zero

Quick Keypad Emulation

 This option applies only to the HID Keyboard Emulation Device and if Emulate Keypad is enabled. This parameter enables a quicker method of keypad emulation where ASCII sequences are only sent for ASCII characters not found on the keyboard. The default value is **Disable**.



Enable

 

*** Disable**

USB Keyboard FN 1 Substitution

This option applies only to the USB HID Keyboard Emulation device. When enabled, this replaces any FN 1 characters in an EAN 128 bar code with a Key Category and a selected value. See [FN1 Substitution Values on page 5-44](#) to set the Key Category and Key Value.



 
Enable USB Keyboard FN 1 Substitution




***Disable USB Keyboard FN 1 Substitution**

Function Key Mapping

ASCII values under 32 are normally sent as control-key sequences (see [Table 10-2 on page 10-18](#)). When this parameter is enabled, the keys in bold are sent in place of the standard key mapping. Table entries that do not have a bold entry remain the same regardless of this parameter.



***Disable Function Key Mapping**

 


Enable Function Key Mapping

Simulated Caps Lock

When enabled, the digital scanner inverts upper and lower case characters on the digital scanner bar code as if the Caps Lock state is enabled on the keyboard. This inversion is done regardless of the keyboard's Caps Lock state.



***Disable Simulated Caps Lock**

 


Enable Simulated Caps Lock

Convert Case


When enabled, the digital scanner converts all bar code data to the selected case.



***No Case Conversion**

 

Convert All to Upper Case

 

Convert All to Lower Case

USB Static CDC

When disabled, each device connected consumes another COM port (first device = COM1, second device = COM2, third device = COM3, etc.)

When enabled, each device connects to the same COM port.



***Enable USB Static CDC**



Disable USB Static CDC

USB Polling Interval

Scan a bar code below to set the polling interval. The polling interval determines the rate at which data can be sent between the digital scanner and host computer. A lower number indicates a faster data rate.




NOTE When changing USB Device Types, the cradle automatically restarts. The digital scanner issues a disconnect-reconnect beep sequence.



IMPORTANT Ensure your host machine can handle the selected data rate



1 msec

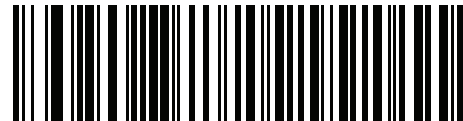

2 msec

 


3msec



4 msec


USB Polling Interval (continued)



5 msec



 6 msec



7 msec



* 8 msec



9 msec

Optional USB Parameters

If you configure the digital scanner and find the settings were not saved, or changed, when the system is restarted scan the bar codes that follow to override USB interface defaults.

Scan a bar code below after setting defaults and before configuring the digital scanner.

Ignore Beep

The host can send a beep request to the digital scanner. When this parameter is enabled, the request is not sent to the attached digital scanner. All directives are still acknowledged to the USB host as if it were processed.



***Disable**



Enable

Ignore Bar Code Configuration

The host has the ability to enable/disable code types. When this parameter is enabled, the request is not sent to the attached digital scanner. All directives are still acknowledged to the USB host as if it were processed.



***Disable**



Enable

USB ASCII Character Set

Table 10-2 USB Prefix/Suffix Values

Prefix/ Suffix Value	Full ASCII Code 39 Encode Character	Keystroke
1000	%U	CTRL 2
1001	\$A	CTRL A
1002	\$B	CTRL B
1003	\$C	CTRL C
1004	\$D	CTRL D
1005	\$E	CTRL E
1006	\$F	CTRL F
1007	\$G	CTRL G
1008	\$H	CTRL H/ BACKSPACE ¹
1009	\$I	CTRL I / HORIZONTAL TAB ¹
1010	\$J	CTRL J
1011	\$K	CTRL K
1012	\$L	CTRL L
1013	\$M	CTRL M/ ENTER ¹
1014	\$N	CTRL N
1015	\$O	CTRL O
1016	\$P	CTRL P
1017	\$Q	CTRL Q
1018	\$R	CTRL R
1019	\$S	CTRL S
1020	\$T	CTRL T
1021	\$U	CTRL U
1022	\$V	CTRL V
1023	\$W	CTRL W
1024	\$X	CTRL X
1025	\$Y	CTRL Y

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 10-2 USB Prefix/Suffix Values (Continued)

Prefix/ Suffix Value	Full ASCII Code 39 Encode Character	Keystroke
1026	\$Z	CTRL Z
1027	%A	CTRL [/ESC ¹
1028	%B	CTRL \
1029	%C	CTRL]
1030	%D	CTRL 6
1031	%E	CTRL -
1032	Space	Space
1033	/A	!
1034	/B	“
1035	/C	#
1036	/D	\$
1037	/E	%
1038	/F	&
1039	/G	,
1040	/H	(
1041	/I)
1042	/J	*
1043	/K	+
1044	/L	,
1045	-	-
1046	.	.
1047	/O	/
1048	0	0
1049	1	1
1050	2	2
1051	3	3
1052	4	4
1053	5	5
1054	6	6

¹The keystroke in bold is sent only if the “Function Key Mapping” is enabled. Otherwise, the unbolded keystroke is sent.

Table 10-2 USB Prefix/Suffix Values (Continued)

Prefix/ Suffix Value	Full ASCII Code 39 Encode Character	Keystroke
1055	7	7
1056	8	8
1057	9	9
1058	/Z	:
1059	%F	;
1060	%G	<
1061	%H	=
1062	%I	>
1063	%J	?
1064	%V	@
1065	A	A
1066	B	B
1067	C	C
1068	D	D
1069	E	E
1070	F	F
1071	G	G
1072	H	H
1073	I	I
1074	J	J
1075	K	K
1076	L	L
1077	M	M
1078	N	N
1079	O	O
1080	P	P
1081	Q	Q
1082	R	R
1083	S	S

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 10-2 USB Prefix/Suffix Values (Continued)

Prefix/ Suffix Value	Full ASCII Code 39 Encode Character	Keystroke
1084	T	T
1085	U	U
1086	V	V
1087	W	W
1088	X	X
1089	Y	Y
1090	Z	Z
1091	%K	[
1092	%L	\
1093	%M]
1094	%N	^
1095	%O	_
1096	%W	`
1097	+A	a
1098	+B	b
1099	+C	c
1100	+D	d
1101	+E	e
1102	+F	f
1103	+G	g
1104	+H	h
1105	+I	i
1106	+J	j
1107	+K	k
1108	+L	l
1109	+M	m
1110	+N	n
1111	+O	o
1112	+P	p

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 10-2 USB Prefix/Suffix Values (Continued)

Prefix/ Suffix Value	Full ASCII Code 39 Encode Character	Keystroke
1113	+Q	q
1114	+R	r
1115	+S	s
1116	+T	t
1117	+U	u
1118	+V	v
1119	+W	w
1120	+X	x
1121	+Y	y
1122	+Z	z
1123	%P	{
1124	%Q	
1125	%R	}
1126	%S	~

¹The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table 10-3 *USB ALT Key Character Set*

ALT Keys	Keystroke
2064	ALT 2
2065	ALT A
2066	ALT B
2067	ALT C
2068	ALT D
2069	ALT E
2070	ALT F
2071	ALT G
2072	ALT H
2073	ALT I
2074	ALT J
2075	ALT K
2076	ALT L
2077	ALT M
2078	ALT N
2079	ALT O
2080	ALT P
2081	ALT Q
2082	ALT R
2083	ALT S
2084	ALT T
2085	ALT U
2086	ALT V
2087	ALT W
2088	ALT X
2089	ALT Y
2090	ALT Z

Table 10-4 *USB GUI Key Character Set*

GUI Key	Keystroke
3000	Right Control Key
3048	GUI 0
3049	GUI 1
3050	GUI 2
3051	GUI 3
3052	GUI 4
3053	GUI 5
3054	GUI 6
3055	GUI 7
3056	GUI 8
3057	GUI 9
3065	GUI A
3066	GUI B
3067	GUI C
3068	GUI D
3069	GUI E
3070	GUI F
3071	GUI G
3072	GUI H
3073	GUI I
3074	GUI J
3075	GUI K
3076	GUI L
3077	GUI M
3078	GUI N
3079	GUI O
3080	GUI P
3081	GUI Q

Note: GUI Shift Keys - The Apple™ iMac keyboard has an apple key on either side of the space bar. Windows-based systems have a GUI key to the left of the left ALT key, and to the right of the right ALT key.

Table 10-4 *USB GUI Key Character Set (Continued)*

GUI Key	Keystroke
3082	GUI R
3083	GUI S
3084	GUI T
3085	GUI U
3086	GUI V
3087	GUI W
3088	GUI X
3089	GUI Y
3090	GUI Z

Note: GUI Shift Keys - The Apple™ iMac keyboard has an apple key on either side of the space bar. Windows-based systems have a GUI key to the left of the left ALT key, and to the right of the right ALT key.

Table 10-5 *USB F Key Character Set*

F Keys	Keystroke
5001	F1
5002	F2
5003	F3
5004	F4
5005	F5
5006	F6
5007	F7
5008	F8
5009	F9
5010	F10
5011	F11
5012	F12
5013	F13
5014	F14
5015	F15
5016	F16
5017	F17

Table 10-5 *USB F Key Character Set (Continued)*

F Keys	Keystroke
5018	F18
5019	F19
5020	F20
5021	F21
5022	F22
5023	F23
5024	F24

Table 10-6 *USB Numeric Keypad Character Set*

Numeric Keypad	Keystroke
6042	*
6043	+
6044	undefined
6045	-
6046	.
6047	/
6048	0
6049	1
6050	2
6051	3
6052	4
6053	5
6054	6
6055	7
6056	8
6057	9
6058	Enter
6059	Num Lock

Table 10-7 *USB Extended Keypad Character Set*

Extended Keypad	Keystroke
7001	Break
7002	Delete
7003	PgUp
7004	End
7005	Pg Dn
7006	Pause
7007	Scroll Lock
7008	Backspace
7009	Tab
7010	Print Screen
7011	Insert
7012	Home
7013	Enter
7014	Escape
7015	Up Arrow
7016	Down Arrow
7017	Left Arrow
7018	Right Arrow

CHAPTER 11 IBM 468X/469X INTERFACE

Introduction



IMPORTANT The IBM interface is not applicable to the STB3574 Industrial Ethernet cradle.

This chapter provides instructions for programming the digital scanner to interface with an IBM 468X/469X host computer.

Throughout the programming bar code menus, default values are indicated with asterisks (*).



* Indicates Default ***Disable Convert to** Feature/Option
Code 39

Connecting to an IBM 468X/469X Host

This connection is made directly from the cradle to the host interface.

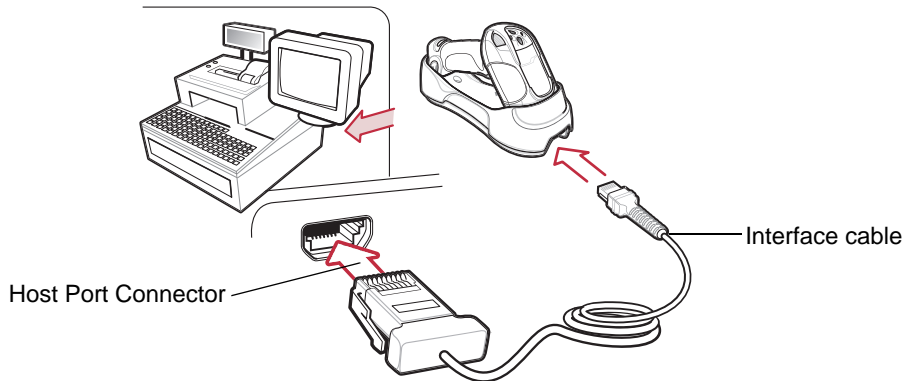


Figure 11-1 IBM Direct Connection

✓ **NOTE** Interface cables vary depending on configuration. The connectors illustrated in [Figure 11-1](#) are examples only. The connectors may be different from those illustrated, but the steps to connect the cradle remain the same.

✓ **NOTE** Disconnect the power supply before changing host cables or the digital scanner may not recognize the new host.

1. Connect the modular connector of the IBM 46XX interface cable to the cable interface port on the cradle. See [Connecting the Cradle on page 1-5](#).
2. Connect the other end of the IBM 46XX interface cable to the appropriate port on the host (typically Port 9).
3. Connect an external power supply.
4. Ensure all connections are secure.
5. Pair the digital scanner to the cradle by scanning the bar code on the cradle.
6. Select the port address by scanning the appropriate bar code from [Port Address on page 11-4](#).
7. To modify other parameter options, scan the appropriate bar codes in this chapter.

✓ **NOTE** The only required configuration is the port address. Most other digital scanner parameters are typically controlled by the IBM system.

IBM Default Parameters

Table 11-1 lists the defaults for IBM host parameters. To change any option, scan the appropriate bar code(s) provided in the parameter descriptions section beginning on [page 11-4](#).

✓ **NOTE** See [Appendix A, Standard Default Parameters](#) for all user preference, host, symbology, and miscellaneous default parameters.

Table 11-1 *IBM Host Default Table*


Parameter	Default	Page Number
IBM 468X/469X Host Parameters		
Port Address	None Selected	11-4
Convert Unknown to Code 39	Disable	11-4
Ignore Beep	Disable	11-5
Ignore Bar Code Configuration	Disable	11-5

IBM 468X/469X Host Parameters

Port Address

Use this parameter to set the IBM 468X/469X port.

 ✓ **NOTE** Scanning one of these bar codes enables the RS-485 interface on the digital scanner.



Hand-held Scanner Emulation (Port 9B)



Non-IBM Scanner Emulation (Port 5B)


 



Table-top Scanner Emulation (Port 17)

Convert Unknown to Code 39

 Scan one of the following bar codes to enable or disable the conversion of unknown bar code type data to Code 39.



Convert Unknown to Code 39 (Enable)

 

*Do Not Convert Unknown to Code 39 (Disable)

Optional IBM Parameters

If you configure the digital scanner and find the settings were not saved, or changed, when the system is restarted scan the bar codes that follow to override IBM interface defaults.

Scan a bar code below after setting defaults and before configuring the digital scanner.

Ignore Beep

The host can send a beep request to the digital scanner. When this parameter is enabled, the request is not sent to the attached digital scanner. All directives are still acknowledged to the IBM RS485 host as if it were processed.



***Disable**



Enable

Ignore Bar Code Configuration

The host has the ability to enable/disable code types. When this parameter is enabled, the request is not sent to the attached digital scanner. All directives are still acknowledged to the IBM RS485 host as if it were processed.



***Disable**



Enable

CHAPTER 12 SYMBOLOGIES

Introduction

This chapter describes symbology features and provides the programming bar codes for selecting these features. Before programming, follow the instructions in [Chapter 1, Getting Started](#).

To set feature values, scan a single bar code or a short bar code sequence. The settings are stored in non-volatile memory and are preserved even when the digital scanner is powered down.

✓ **NOTE** Most computer monitors allow scanning the bar codes directly on the screen. When scanning from the screen, be sure to set the document magnification to a level where the bar code can be seen clearly, and bars and/or spaces are not merging.

Select a host type (see each host chapter for specific host information) after the power-up beeps sound. This is only necessary upon the first power-up when connected to a new host.

To return all features to default values, scan the [Default Parameters on page 5-4](#). Throughout the programming bar code menus, default values are indicated with asterisks (*).



* Indicates Default — *Enable UPC-A — Feature/Option
(1) — Option Value

Scanning Sequence Examples

In most cases, scanning one bar code sets the parameter value. For example, to transmit bar code data without the UPC-A check digit, simply scan the **Do Not Transmit UPC-A Check Digit** bar code under [Transmit UPC-A Check Digit on page 12-16](#). The digital scanner issues a fast warble beep and the LED turns green, signifying a successful parameter entry.

Other parameters, such as **Set Length(s) for D 2 of 5** require scanning several bar codes. See the individual parameter, such as **Set Length(s) for D 2 of 5**, for this procedure.

Errors While Scanning

Unless otherwise specified, to correct an error during a scanning sequence, just re-scan the correct parameter.

Symbology Parameter Defaults

[Table 12-1](#) lists the defaults for all symbologies parameters. There are two ways to change the default values:

- Scan the appropriate bar codes in this guide. These new values replace the standard default values in memory. To recall the default parameter values, scan the [Default Parameters on page 5-4](#).
- Download data through the device's serial port using SSI. Hexadecimal parameter numbers are shown in this chapter below the parameter title, and options are shown in parenthesis beneath the accompanying bar codes. See the *Simple Serial Interface (SSI) Programmer's Guide* for detailed instructions for changing parameters using this method.

✓ **NOTE** See [Appendix A, Standard Default Parameters](#) for all user preferences, hosts, and miscellaneous default parameters.

Table 12-1 *Parameter Defaults*

Parameter	Parameter Number	Default	Page Number
UPC/EAN			
UPC-A	1	Enable	12-7
UPC-E	2	Enable	12-7
UPC-E1	12	Disable	12-8
EAN-8/JAN 8	4	Enable	12-8
EAN-13/JAN 13	3	Enable	12-9
Bookland EAN	83	Disable	12-9
Decode UPC/EAN/JAN Supplementals (2 and 5 digits)	16	Ignore	12-10
User-Programmable Supplementals	579 580		12-13
UPC/EAN/JAN Supplemental Redundancy	80	10	12-14
UPC/EAN/JAN Supplemental AIM ID Format	672	Combined	12-15
Transmit UPC-A Check Digit	40	Enable	12-16
Transmit UPC-E Check Digit	41	Enable	12-16
Transmit UPC-E1 Check Digit	42	Enable	12-17
UPC-A Preamble	34	System Character	12-17
UPC-E Preamble	35	System Character	12-17
UPC-E1 Preamble	36	System Character	12-19

Table 12-1 *Parameter Defaults (Continued)*

Parameter	Parameter Number	Default	Page Number
Convert UPC-E to A	37	Disable	12-20
Convert UPC-E1 to A	38	Disable	12-20
EAN-8/JAN-8 Extend	39	Disable	12-21
Bookland ISBN Format	576	ISBN-10	12-21
UCC Coupon Extended Code	85	Disable	12-22
Coupon Report	730	New Coupon Format	12-23
ISSN EAN	617	Disable	12-24
Code 128			
Code 128	8	Enable	12-25
Set Length(s) for Code 128	209, 210	Any Length	12-25
GS1-128 (formerly UCC/EAN-128)	14	Enable	12-27
ISBT 128	84	Enable	12-27
ISBT Concatenation	577	Disable	12-28
Check ISBT Table	578	Enable	12-29
ISBT Concatenation Redundancy	223	10	12-29
Code 39			
Code 39	0	Enable	12-30
Trioptic Code 39	13	Disable	12-30
Convert Code 39 to Code 32 (Italian Pharmacy Code)	86	Disable	12-31
Code 32 Prefix	231	Disable	12-31
Set Length(s) for Code 39	18, 19	2 to 55	12-32
Code 39 Check Digit Verification	48	Disable	12-34
Transmit Code 39 Check Digit	43	Disable	12-34
Code 39 Full ASCII Conversion	17	Disable	12-35
Code 93			
Code 93	9	Disable	12-36
Set Length(s) for Code 93	26, 27	4 to 55	12-36
Code 11			
Code 11	10	Disable	12-38
Set Lengths for Code 11	28, 29	4 to 55	12-38

Table 12-1 Parameter Defaults (Continued)

Parameter	Parameter Number	Default	Page Number
Code 11 Check Digit Verification	52	Disable	12-40
Transmit Code 11 Check Digit(s)	47	Disable	12-40
Interleaved 2 of 5 (ITF)			
Interleaved 2 of 5 (ITF)	6	Disable	12-41
Set Lengths for I 2 of 5	22, 23	14	12-41
I 2 of 5 Check Digit Verification	49	Disable	12-43
Transmit I 2 of 5 Check Digit	44	Disable	12-43
Convert I 2 of 5 to EAN 13	82	Disable	12-44
Discrete 2 of 5 (DTF)			
Discrete 2 of 5	5	Disable	12-45
Set Length(s) for D 2 of 5	20, 21	12	12-45
Codabar (NW - 7)			
Codabar	7	Disable	12-47
Set Lengths for Codabar	24, 25	5 to 55	12-47
CLSI Editing	54	Disable	12-49
NOTIS Editing	55	Disable	12-49
Codabar Upper or Lower Case Start/Stop Characters Transmission	855	Upper Case	12-50
MSI			
MSI	11	Disable	12-51
Set Length(s) for MSI	30, 31	4 to 55	12-51
MSI Check Digits	50	One	12-53
Transmit MSI Check Digit	46	Disable	12-53
MSI Check Digit Algorithm	51	Mod 10/Mod 10	12-54
Chinese 2 of 5			
Chinese 2 of 5	408	Disable	12-55
Matrix 2 of 5			
Matrix 2 of 5	618	Disable	12-55
Matrix 2 of 5 Lengths	619, 620	1 Length - 14	12-56
Matrix 2 of 5 Check Digit	622	Disable	12-57
Transmit Matrix 2 of 5 Check Digit	623	Disable	12-57

Table 12-1 *Parameter Defaults (Continued)*

Parameter	Parameter Number	Default	Page Number
Korean 3 of 5			
Korean 3 of 5	581	Disable	12-58
Inverse 1D			
Inverse 1D	586	Regular (SR/HD) Inverse Autodetect (DP)	12-59
Postal Codes			
US Postnet	89	Disable	12-60
US Planet	90	Disable	12-60
Transmit US Postal Check Digit	95	Enable	12-61
UK Postal	91	Disable	12-61
Transmit UK Postal Check Digit	96	Enable	12-62
Japan Postal	290	Disable	12-62
Australia Post	291	Disable	12-63
Netherlands KIX Code	326	Disable	12-63
USPS 4CB/One Code/Intelligent Mail	592	Disable	12-64
UPU FICS Postal	611	Disable	12-64
GS1 DataBar			
GS1 DataBar Omnidirectional (formerly GS1 DataBar-14)	338	Enable	12-65
GS1 DataBar Limited	339	Disable	12-65
GS1 DataBar Limited Security Level	728	Level 3	12-66
GS1 DataBar Expanded	340	Enable	12-67
Convert GS1 DataBar to UPC/EAN	397	Disable	12-67
Composite			
Composite CC-C	341	Disable	12-68
Composite CC-A/B	342	Disable	12-68
Composite TLC-39	371	Disable	12-69
UPC Composite Mode	344	Never Linked	12-69
Composite Beep Mode	398	Beep As Each Code Type is Decoded	12-70
GS1-128 Emulation Mode for UCC/EAN Composite Codes	427	Disable	12-70

Table 12-1 *Parameter Defaults (Continued)*

 
Parameter	Parameter Number	Default	Page Number
2D Symbologies			
PDF417	15	Enable	12-71
MicroPDF417	227	Disable	12-71
Code 128 Emulation	123	Disable	12-72
Data Matrix	292	Enable	12-73
Data Matrix Inverse	588	Regular (SR/HD) Inverse Autodetect (DP)	12-73
Maxicode	294	Enable	12-74
QR Code	293	Enable	12-74
QR Inverse	587	Regular	12-75
MicroQR	573	Enable	12-75
Aztec	574	Enable	12-76
Aztec Inverse	589	Autodetect	12-76
Symbology-Specific Security Levels			
Redundancy Level	78	1	12-77
Security Level	77	1	12-79
Intercharacter Gap Size	381	Normal	12-80
Report Version			
Report Version	N/A	None	12-80
Macro PDF			
Flush Macro PDF Buffer	N/A	None	12-81
Abort Macro PDF Entry	N/A	None	12-81

UPC/EAN


Enable/Disable UPC-A

Parameter # 1

To enable or disable UPC-A, scan the appropriate bar code below.



*Enable UPC-A
(1)

 


Disable UPC-A
(0)


Enable/Disable UPC-E

Parameter # 2

 To enable or disable UPC-E, scan the appropriate bar code below.



*Enable UPC-E
(1)

 

Disable UPC-E
(0)

 
Enable/Disable UPC-E1

Parameter # 12

UPC-E1 is disabled by default.

To enable or disable UPC-E1, scan the appropriate bar code below.

✓ **NOTE** UPC-E1 is not a UCC (Uniform Code Council) approved symbology.



Enable UPC-E1
(1)

 


*Disable UPC-E1
(0)

Enable/Disable EAN-8/JAN-8

Parameter # 4

To enable or disable EAN-8/JAN-8, scan the appropriate bar code below.



*Enable EAN-8/JAN-8
(1)

 


Disable EAN-8/JAN-8
(0)


Enable/Disable EAN-13/JAN-13

Parameter # 3

To enable or disable EAN-13/JAN-13, scan the appropriate bar code below.



*Enable EAN-13/JAN-13
(1)

 


Disable EAN-13/JAN-13
(0)

Enable/Disable Bookland EAN

Parameter # 83

 To enable or disable Bookland EAN, scan the appropriate bar code below.



Enable Bookland EAN
(1)



*Disable Bookland EAN
(0)



NOTE If you enable Bookland EAN, select a [Bookland ISBN Format on page 12-21](#). Also select either Decode UPC/EAN Supplementals, Autodiscriminate UPC/EAN Supplementals, or Enable 978/979 Supplemental Mode in [Decode UPC/EAN/JAN Supplementals on page 12-10](#).

Decode UPC/EAN/JAN Supplementals

Parameter # 16

 
Supplementals are bar codes appended according to specific format conventions (e.g., UPC A+2, UPC E+2, EAN 13+2). The following options are available:

- If you select **Ignore UPC/EAN with Supplementals**, and the digital scanner is presented with a UPC/EAN plus supplemental symbol, the digital scanner decodes UPC/EAN and ignores the supplemental characters.
- If you select **Decode UPC/EAN with Supplementals**, the digital scanner only decodes UPC/EAN symbols with supplemental characters, and ignores symbols without supplementals.
- If you select **Autodiscriminate UPC/EAN Supplementals**, the digital scanner decodes UPC/EAN symbols with supplemental characters immediately. If the symbol does not have a supplemental, the digital scanner must decode the bar code the number of times set via [UPC/EAN/JAN Supplemental Redundancy on page 12-14](#) before transmitting its data to confirm that there is no supplemental.
- If you select one of the following **Supplemental Mode** options, the digital scanner immediately transmits EAN-13 bar codes starting with that prefix that have supplemental characters. If the symbol does not have a supplemental, the digital scanner must decode the bar code the number of times set via [UPC/EAN/JAN Supplemental Redundancy on page 12-14](#) before transmitting its data to confirm that there is no supplemental. The digital scanner transmits UPC/EAN bar codes that do not have that prefix immediately.
 - **Enable 378/379 Supplemental Mode**
 - **Enable 978/979 Supplemental Mode**


✓ **NOTE** If you select 978/979 Supplemental Mode and are scanning Bookland EAN bar codes, see [Enable/Disable Bookland EAN on page 12-9](#) to enable Bookland EAN, and select a format using [Bookland ISBN Format on page 12-21](#).

- **Enable 977 Supplemental Mode**
- **Enable 414/419/434/439 Supplemental Mode**
- **Enable 491 Supplemental Mode**
- **Enable Smart Supplemental Mode** - applies to EAN-13 bar codes starting with any prefix listed previously.
- **Supplemental User-Programmable Type 1** - applies to EAN-13 bar codes starting with a 3-digit user-defined prefix. Set this 3-digit prefix using [User-Programmable Supplementals on page 12-13](#).
- **Supplemental User-Programmable Type 1 and 2** - applies to EAN-13 bar codes starting with either of two 3-digit user-defined prefixes. Set the 3-digit prefixes using [User-Programmable Supplementals on page 12-13](#).
- **Smart Supplemental Plus User-Programmable 1** - applies to EAN-13 bar codes starting with any prefix listed previously or the user-defined prefix set using [User-Programmable Supplementals on page 12-13](#).
- **Smart Supplemental Plus User-Programmable 1 and 2** - applies to EAN-13 bar codes starting with any prefix listed previously or one of the two user-defined prefixes set using [User-Programmable Supplementals on page 12-13](#).


✓ **NOTE** To minimize the risk of invalid data transmission, select either to decode or ignore supplemental characters.

Decode UPC/EAN/JAN Supplementals (continued)

 
**Decode UPC/EAN/JAN Only With Supplementals
(1)**



***Ignore Supplementals
(0)**

 

 **Autodiscriminate UPC/EAN/JAN Supplementals
(2)**



**Enable 378/379 Supplemental Mode
(4)**



**Enable 978/979 Supplemental Mode
(5)**



**Enable 977 Supplemental Mode
(7)**

Decode UPC/EAN/JAN Supplementals (continued)



Enable 414/419/434/439 Supplemental Mode
(6)



Enable 491 Supplemental Mode
(8)



Enable Smart Supplemental Mode
(3)



Supplemental User-Programmable Type 1
(9)



Supplemental User-Programmable Type 1 and 2
(10)



Smart Supplemental Plus User-Programmable 1
(11)



Smart Supplemental Plus User-Programmable 1 and 2
(12)

User-Programmable Supplementals

Supplemental 1: Parameter # 579

Supplemental 2: Parameter # 580

If you selected a Supplemental User-Programmable option from [Decode UPC/EAN/JAN Supplementals on page 12-10](#), select **User-Programmable Supplemental 1** to set the 3-digit prefix. Then select the 3 digits using the numeric bar codes beginning on [page D-1](#). Select **User-Programmable Supplemental 2** to set a second 3-digit prefix. Then select the 3 digits using the numeric bar codes beginning on [page D-1](#).



User-Programmable Supplemental 1



 
User-Programmable Supplemental 2

UPC/EAN/JAN Supplemental Redundancy

Parameter # 80

With **Autodiscriminate UPC/EAN/JAN Supplementals** selected, this option adjusts the number of times a symbol without supplementals is decoded before transmission. The range is from two to thirty times. Five or above is recommended when decoding a mix of UPC/EAN/JAN symbols with and without supplementals, and the autodiscriminate option is selected. The default is set at 10.

Scan the bar code below to set a decode redundancy value. Next, scan two numeric bar codes in [Appendix D, Numeric Bar Codes](#). Single digit numbers must have a leading zero. To correct an error or change a selection, scan [Cancel on page D-3](#).



UPC/EAN/JAN Supplemental Redundancy

UPC/EAN/JAN Supplemental AIM ID Format

Parameter # 672

Select an output format when reporting UPC/EAN/JAN bar codes with Supplementals with *Transmit Code ID Character* on page 5-41 set to **AIM Code ID Character**:

- **Separate** - transmit UPC/EAN with supplementals with separate AIM IDs but one transmission, i.e.:
]E<0 or 4><data>]E<1 or 2>[supplemental data]
- **Combined** – transmit UPC/EAN with supplementals with one AIM ID and one transmission, i.e.:
]E3<data+supplemental data>
- **Separate Transmissions** - transmit UPC/EAN with supplementals with separate AIM IDs and separate transmissions, i.e.:
]E<0 or 4><data>
]E<1 or 2>[supplemental data]



Separate
(0)



*Combined
(1)

 


Separate Transmissions
(2)


Transmit UPC-A Check Digit

Parameter # 40

The check digit is the last character of the symbol used to verify the integrity of the data. Scan the appropriate bar code below to transmit the bar code data with or without the UPC-A check digit. It is always verified to guarantee the integrity of the data.



***Transmit UPC-A Check Digit
(1)**

 


**Do Not Transmit UPC-A Check Digit
(0)**

Transmit UPC-E Check Digit

Parameter # 41

 The check digit is the last character of the symbol used to verify the integrity of the data. Scan the appropriate bar code below to transmit the bar code data with or without the UPC-E check digit. It is always verified to guarantee the integrity of the data.



***Transmit UPC-E Check Digit
(1)**



**Do Not Transmit UPC-E Check Digit
(0)**

 
Transmit UPC-E1 Check Digit

Parameter # 42

The check digit is the last character of the symbol used to verify the integrity of the data. Scan the appropriate bar code below to transmit the bar code data with or without the UPC-E1 check digit. It is always verified to guarantee the integrity of the data.



***Transmit UPC-E1 Check Digit
(1)**



**Do Not Transmit UPC-E1 Check Digit
(0)**

 
UPC-A Preamble

Parameter # 34

Preamble characters are part of the UPC symbol, and include Country Code and System Character. There are three options for transmitting a UPC-A preamble to the host device: transmit System Character only, transmit System Character and Country Code ("0" for USA), and transmit no preamble. Select the appropriate option to match the host system.



**No Preamble (<DATA>)
(0)**



***System Character (<SYSTEM CHARACTER> <DATA>)
(1)**

 


**System Character & Country Code
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)
(2)**


UPC-E Preamble

Parameter # 35


Preamble characters are part of the UPC symbol, and include Country Code and System Character. There are three options for transmitting a UPC-E preamble to the host device: transmit System Character only, transmit System Character and Country Code ("0" for USA), and transmit no preamble. Select the appropriate option to match the host system.



No Preamble (<DATA>)
(0)

 

 *System Character (<SYSTEM CHARACTER> <DATA>)
(1)




System Character & Country Code
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)
(2)


UPC-E1 Preamble

Parameter # 36

 
Preamble characters are part of the UPC symbol, and include Country Code and System Character. There are three options for transmitting a UPC-E1 preamble to the host device: transmit System Character only, transmit System Character and Country Code ("0" for USA), and transmit no preamble. Select the appropriate option to match the host system.



No Preamble (<DATA>)
(0)

 

 *System Character (<SYSTEM CHARACTER> <DATA>)
(1)




System Character & Country Code
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)
(2)

Convert UPC-E to UPC-A


Parameter # 37

Enable this to convert UPC-E (zero suppressed) decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

 Disable this to transmit UPC-E decoded data as UPC-E data, without conversion.



Convert UPC-E to UPC-A (Enable)
(1)

 


*Do Not Convert UPC-E to UPC-A (Disable)
(0)

Convert UPC-E1 to UPC-A


Parameter # 38

Enable this to convert UPC-E1 decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

 Disable this to transmit UPC-E1 decoded data as UPC-E1 data, without conversion.



Convert UPC-E1 to UPC-A (Enable)
(1)

 

*Do Not Convert UPC-E1 to UPC-A (Disable)
(0)

 
EAN-8/JAN-8 Extend

Parameter # 39

Enable this parameter to add five leading zeros to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols. Disable this to transmit EAN-8 symbols as is.



Enable EAN/JAN Zero Extend
(1)



*Disable EAN/JAN Zero Extend
(0)

Bookland ISBN Format

Parameter # 576

If you enabled Bookland EAN using [Enable/Disable Bookland EAN on page 12-9](#), select one of the following formats for Bookland data:

- **Bookland ISBN-10** - The digital scanner reports Bookland data starting with 978 in traditional 10-digit format with the special Bookland check digit for backward-compatibility. Data starting with 979 is not considered Bookland in this mode.
- **Bookland ISBN-13** - The digital scanner reports Bookland data (starting with either 978 or 979) as EAN-13 in 13-digit format to meet the 2007 ISBN-13 protocol.



*Bookland ISBN-10
(0)



Bookland ISBN-13
(1)



NOTE For Bookland EAN to function properly, first enable Bookland EAN using [Enable/Disable Bookland EAN on page 12-9](#), then select either Decode UPC/EAN Supplementals, Autodiscriminate UPC/EAN Supplementals, or Enable 978/979 Supplemental Mode in [Decode UPC/EAN/JAN Supplementals on page 12-10](#).

 
UCC Coupon Extended Code

Parameter # 85


Enable this parameter in conjunction with [Coupon Report on page 12-23](#) to decode one of the following types of coupons:

- GS1 Databar Expanded coupons (set [Coupon Report](#) to *New Coupon Format* or *Autodiscriminate Coupon Format*)
- UPC-A/GS1-128 and EAN-13/GS1-128 coupons (Set [Coupon Report](#) to *Old Coupon Format* or *Autodiscriminate Coupon Format*).

✓ **NOTE** To decode the *UPC-A* and *EAN-13* coupons, *UPC-A*, *EAN-13* and *GS1-128* must be enabled.



Enable UCC Coupon Extended Code
(1)

 

*Disable UCC Coupon Extended Code
(0)

✓ **NOTE** Use the [UPC/EAN/JAN Supplemental Redundancy on page 12-14](#) parameter to control autodiscrimination of the GS1-128 (right half) of a coupon code.

Coupon Report

Parameter # 730

Select an option to determine which type of coupon format to support.

- Select **Old Coupon Format** to support UPC-A/GS1-128 and EAN-13/GS1-128.
- Select **New Coupon Format** as an interim format to support UPC-A/GS1-DataBar and EAN-13/GS1-DataBar.
- If you select **Autodiscriminate Format**, the digital scanner supports both **Old Coupon Format** and **New Coupon Format**.



Old Coupon Format
(0)



*New Coupon Format
(1)



Autodiscriminate Coupon Format
(2)

ISSN EAN

Parameter # 617

To enable or disable ISSN EAN, scan the appropriate bar code below.



Enable ISSN EAN

(1)



*Disable ISSN EAN


(0)

Code 128


Enable/Disable Code 128

Parameter # 8

 To enable or disable Code 128, scan the appropriate bar code below.



*Enable Code 128
(1)

 

Disable Code 128
(0)

Set Lengths for Code 128


Parameter # L1 = 209, L2 = 210

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Code 128 to any length, one or two discrete lengths, or lengths within a specific range.


✓ **NOTE** When setting lengths for different bar code types, enter a leading zero for single digit numbers.

- **One Discrete Length** - Select this option to decode only Code 128 symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Code 128 symbols with 14 characters, scan **Code 128 - One Discrete Length**, then scan **1** followed by **4**. To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Two Discrete Lengths** - Select this option to decode only Code 128 symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Code 128 symbols containing either 2 or 14 characters, select **Code 128 - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Length Within Range** - Select this option to decode a Code 128 symbol with a specific length range. Select lengths using numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode Code 128 symbols containing between 4 and 12 characters, first scan **Code 128 - Length Within Range**. Then scan **0, 4, 1**, and **2** (enter a leading zero for single digit numbers). To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Any Length** - Select this option to decode Code 128 symbols containing any number of characters within the digital scanner's capability.


Set Lengths for Code 128 (continued)

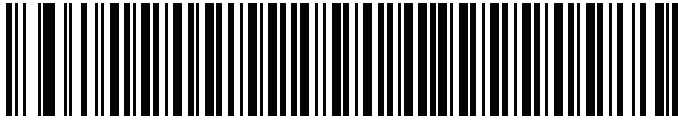


Code 128 - One Discrete Length

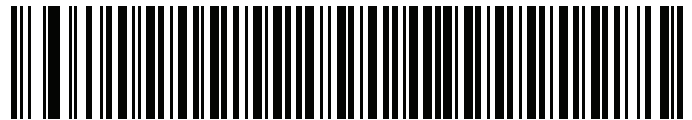

Code 128 - Two Discrete Lengths

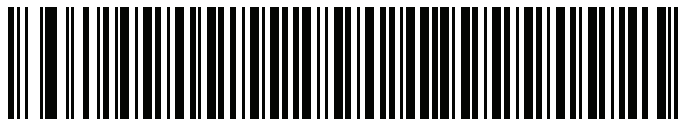

Code 128 - Length Within Range

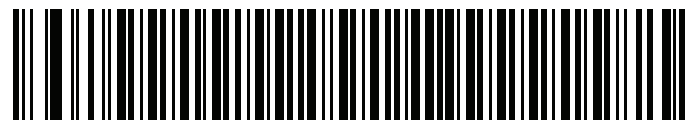


*Code 128 - Any Length

Enable/Disable GS1-128 (formerly UCC/EAN-128)

Parameter # 14

 To enable or disable GS1-128, scan the appropriate bar code below.



*Enable GS1-128
(1)



Disable GS1-128
(0)

Enable/Disable ISBT 128

Parameter # 84

ISBT 128 is a variant of Code 128 used in the blood bank industry. Scan a bar code below to enable or disable ISBT 128. If necessary, the host must perform concatenation of the ISBT data.



*Enable ISBT 128
(1)



 
Disable ISBT 128
(0)

ISBT Concatenation

Parameter # 577

Select an option for concatenating pairs of ISBT code types:

- If you select **Disable ISBT Concatenation**, the digital scanner does not concatenate pairs of ISBT codes it encounters.
- If you select **Enable ISBT Concatenation**, there must be two ISBT codes in order for the digital scanner to decode and perform concatenation. The digital scanner does not decode single ISBT symbols.
- If you select **Autodiscriminate ISBT Concatenation**, the digital scanner decodes and concatenates pairs of ISBT codes immediately. If only a single ISBT symbol is present, the digital scanner must decode the symbol the number of times set via *ISBT Concatenation Redundancy on page 12-29* before transmitting its data to confirm that there is no additional ISBT symbol.



*Disable ISBT Concatenation
(0)



Enable ISBT Concatenation
(1)



Autodiscriminate ISBT Concatenation
(2)

Check ISBT Table

Parameter # 578

The ISBT specification includes a table that lists several types of ISBT bar codes that are commonly used in pairs. If you set **ISBT Concatenation** to **Enable**, enable **Check ISBT Table** to concatenate only those pairs found in this table. Other types of ISBT codes are not concatenated.



*Enable Check ISBT Table
(1)



Disable Check ISBT Table
(0)

ISBT Concatenation Redundancy

Parameter # 223

If you set **ISBT Concatenation** to **Autodiscriminate**, use this parameter to set the number of times the digital scanner must decode an ISBT symbol before determining that there is no additional symbol.

Scan the bar code below, then scan two numeric bar codes in [Appendix D, Numeric Bar Codes](#) to set a value between 2 and 20. Enter a leading zero for single digit numbers. To correct an error or change a selection, scan [Cancel on page D-3](#). The default is 10.




ISBT Concatenation Redundancy

Code 39


Enable/Disable Code 39

Parameter # 0

 To enable or disable Code 39, scan the appropriate bar code below.



*Enable Code 39
(1)

 


Disable Code 39
(0)

Enable/Disable Trioptic Code 39

Parameter # 13

 Trioptic Code 39 is a variant of Code 39 used in the marking of computer tape cartridges. Trioptic Code 39 symbols always contain six characters. To enable or disable Trioptic Code 39, scan the appropriate bar code below.



Enable Trioptic Code 39
(1)



*Disable Trioptic Code 39
(0)



 
NOTE You cannot enable Trioptic Code 39 and Code 39 Full ASCII simultaneously.

Convert Code 39 to Code 32


Parameter # 86

Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Scan the appropriate bar code below to enable or disable converting Code 39 to Code 32.

✓ **NOTE** Code 39 must be enabled for this parameter to function.



Enable Convert Code 39 to Code 32
(1)

 


*Disable Convert Code 39 to Code 32
(0)

Code 32 Prefix


Parameter # 231

Scan the appropriate bar code below to enable or disable adding the prefix character "A" to all Code 32 bar codes.

 ✓ **NOTE** Convert Code 39 to Code 32 must be enabled for this parameter to function.



Enable Code 32 Prefix
(1)

 

*Disable Code 32 Prefix
(0)

Set Lengths for Code 39

Parameter # L1 = 18, L2 = 19

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Code 39 to any length, one or two discrete lengths, or lengths within a specific range. If Code 39 Full ASCII is enabled, **Length Within a Range** or **Any Length** are the preferred options.

- ✓ **NOTE** When setting lengths for different bar code types by scanning single digit numbers, single digit numbers must always be preceded by a leading zero.
- **One Discrete Length** - Select this option to decode only Code 39 symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Code 39 symbols with 14 characters, scan **Code 39 - One Discrete Length**, then scan **1** followed by **4**. To correct an error or change the selection, scan [Cancel on page D-3](#).
 - **Two Discrete Lengths** - Select this option to decode only Code 39 symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only those Code 39 symbols containing either 2 or 14 characters, select **Code 39 - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or change the selection, scan [Cancel on page D-3](#).
 - **Length Within Range** - Select this option to decode a Code 39 symbol with a specific length range. Select lengths using numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode Code 39 symbols containing between 4 and 12 characters, first scan **Code 39 - Length Within Range**. Then scan **0, 4, 1**, and **2** (single digit numbers must always be preceded by a leading zero). To correct an error or change the selection, scan [Cancel on page D-3](#).
 - **Any Length** - Select this option to decode Code 39 symbols containing any number of characters within the digital scanner capability.

Set Lengths for Code 39 (continued)



Code 39 - One Discrete Length



Code 39 - Two Discrete Lengths



Code 39 - Length Within Range




Code 39 - Any Length


Code 39 Check Digit Verification

Parameter # 48

 Enable this feature to check the integrity of all Code 39 symbols to verify that the data complies with specified check digit algorithm. Only Code 39 symbols which include a modulo 43 check digit are decoded. Enable this feature if the Code 39 symbols contain a Modulo 43 check digit.



Enable Code 39 Check Digit
(1)

 


*Disable Code 39 Check Digit
(0)

Transmit Code 39 Check Digit

Parameter # 43

 Scan a bar code below to transmit Code 39 data with or without the check digit.



Transmit Code 39 Check Digit (Enable)
(1)



*Do Not Transmit Code 39 Check Digit (Disable)
(0)



NOTE Code 39 Check Digit Verification must be enabled for this parameter to function.

 
Code 39 Full ASCII Conversion

Parameter # 17

Code 39 Full ASCII is a variant of Code 39 which pairs characters to encode the full ASCII character set. To enable or disable Code 39 Full ASCII, scan the appropriate bar code below.



Enable Code 39 Full ASCII
(1)



*Disable Code 39 Full ASCII
(0)



NOTE Trioptic Code 39 and Code 39 Full ASCII cannot be enabled simultaneously.


Code 39 Full ASCII to Full ASCII Correlation is host-dependent, and is therefore described in the ASCII Character Set Table for the appropriate interface. See the [RS-232 ASCII Character Set on page 9-18](#) or the [USB ASCII Character Set on page 10-18](#).

Code 93


Enable/Disable Code 93

Parameter # 9

 To enable or disable Code 93, scan the appropriate bar code below.



Enable Code 93
(1)

 

*Disable Code 93
(0)

Set Lengths for Code 93

Parameter # L1 = 26, L2 = 27

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Code 93 to any length, one or two discrete lengths, or lengths within a specific range.

- **One Discrete Length** - Select this option to decode only Code 93 symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Code 93 symbols with 14 characters, scan **Code 93 - One Discrete Length**, then scan **1** followed by **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Two Discrete Lengths** - Select this option to decode only Code 93 symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only those Code 93 symbols containing either 2 or 14 characters, select **Code 93 - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Length Within Range** - Select this option to decode a Code 93 symbol with a specific length range. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode Code 93 symbols containing between 4 and 12 characters, first scan **Code 93 - Length Within Range**. Then scan **0, 4, 1**, and **2** (single digit numbers must always be preceded by a leading zero). To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Any Length** - Scan this option to decode Code 93 symbols containing any number of characters within the digital scanner's capability.

Set Lengths for Code 93 (continued)



Code 93 - One Discrete Length



Code 93 - Two Discrete Lengths



Code 93 - Length Within Range




Code 93 - Any Length

Code 11

Code 11

Parameter # 10

 To enable or disable Code 11, scan the appropriate bar code below.



Enable Code 11
(1)



*Disable Code 11
(0)

Set Lengths for Code 11

Parameter # L1 = 28, L2 = 29

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Code 11 to any length, one or two discrete lengths, or lengths within a specific range.

- **One Discrete Length** - Select this option to decode only Code 11 symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Code 11 symbols with 14 characters, scan **Code 11 - One Discrete Length**, then scan **1** followed by **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Two Discrete Lengths** - Select this option to decode only Code 11 symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only those Code 11 symbols containing either 2 or 14 characters, select **Code 11 - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Length Within Range** - Select this option to decode a Code 11 symbol with a specific length range. Select lengths using numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode Code 11 symbols containing between 4 and 12 characters, first scan **Code 11 - Length Within Range**. Then scan **0, 4, 1**, and **2** (single digit numbers must always be preceded by a leading zero). To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Any Length** - Scan this option to decode Code 11 symbols containing any number of characters within the digital scanner capability.

Set Lengths for Code 11 (continued)



Code 11 - One Discrete Length



Code 11 - Two Discrete Lengths



Code 11 - Length Within Range




Code 11 - Any Length

Code 11 Check Digit Verification


Parameter # 52

This feature allows the digital scanner to check the integrity of all Code 11 symbols to verify that the data complies with the specified check digit algorithm. This selects the check digit mechanism for the decoded Code 11 bar code. The options are to check for one check digit, check for two check digits, or disable the feature.

 
To enable this feature, scan the bar code below corresponding to the number of check digits encoded in the Code 11 symbols.



*Disable
(0)

 

One Check Digit
(1)

 


Two Check Digits
(2)

Transmit Code 11 Check Digits

Parameter # 47

 This feature selects whether or not to transmit the Code 11 check digit(s).



Transmit Code 11 Check Digit(s) (Enable)
(1)



*Do Not Transmit Code 11 Check Digit(s) (Disable)
(0)



 
NOTE Code 11 Check Digit Verification must be enabled for this parameter to function.

Interleaved 2 of 5 (ITF)

Enable/Disable Interleaved 2 of 5

Parameter # 6

To enable or disable Interleaved 2 of 5, scan the appropriate bar code below, and select an Interleaved 2 of 5 length from the following pages.



Enable Interleaved 2 of 5
(1)



*Disable Interleaved 2 of 5
(0)

Set Lengths for Interleaved 2 of 5

Parameter # L1 = 22, L2 = 23

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for I 2 of 5 to any length, one or two discrete lengths, or lengths within a specific range.

- **One Discrete Length** - Select this option to decode only I 2 of 5 symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only I 2 of 5 symbols with 14 characters, scan **I 2 of 5 - One Discrete Length**, then scan **1** followed by **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Two Discrete Lengths** - Select this option to decode only I 2 of 5 symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only those I 2 of 5 symbols containing either 2 or 14 characters, select **I 2 of 5 - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Length Within Range** - Select this option to decode an I 2 of 5 symbol with a specific length range. Select lengths using numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode I 2 of 5 symbols containing between 4 and 12 characters, first scan **I 2 of 5 - Length Within Range**. Then scan **0, 4, 1**, and **2** (single digit numbers must always be preceded by a leading zero). To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Any Length** - Scan this option to decode I 2 of 5 symbols containing any number of characters within the digital scanner capability.

✓ **NOTE** Due to the construction of the I 2 of 5 symbology, it is possible for a scan line covering only a portion of the code to be interpreted as a complete scan, yielding less data than is encoded in the bar code. To prevent this, select specific lengths (I 2 of 5 - One Discrete Length - Two Discrete Lengths) for I 2 of 5 applications.

Set Lengths for Interleaved 2 of 5



I 2 of 5 - One Discrete Length



I 2 of 5 - Two Discrete Lengths



I 2 of 5 - Length Within Range



I 2 of 5 - Any Length

I 2 of 5 Check Digit Verification

Parameter # 49

Enable this feature to check the integrity of all I 2 of 5 symbols to verify the data complies with either the specified Uniform Symbology Specification (USS), or the Optical Product Code Council (OPCC) check digit algorithm.



*Disable
(0)



USS Check Digit
(1)



OPCC Check Digit
(2)

 
Transmit I 2 of 5 Check Digit

Parameter # 44

Scan the appropriate bar code below to transmit I 2 of 5 data with or without the check digit.



Transmit I 2 of 5 Check Digit (Enable)
(1)



*Do Not Transmit I 2 of 5 Check Digit (Disable)
(0)

Convert I 2 of 5 to EAN-13

Parameter # 82

Enable this parameter to convert 14-character I 2 of 5 codes to EAN-13, and transmit to the host as EAN-13. To accomplish this, the I 2 of 5 code must be enabled, and the code must have a leading zero and a valid EAN-13 check digit.



Convert I 2 of 5 to EAN-13 (Enable)
(1)



 
*Do Not Convert I 2 of 5 to EAN-13 (Disable)
(0)

Discrete 2 of 5 (DTF)

Enable/Disable Discrete 2 of 5

Parameter # 5

To enable or disable Discrete 2 of 5, scan the appropriate bar code below.



Enable Discrete 2 of 5
(1)



*Disable Discrete 2 of 5
(0)

Set Lengths for Discrete 2 of 5

Parameter # L1 = 20, L2 = 21

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for D 2 of 5 to any length, one or two discrete lengths, or lengths within a specific range.

- **One Discrete Length** - Select this option to decode only D 2 of 5 symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only D 2 of 5 symbols with 14 characters, scan **D 2 of 5 - One Discrete Length**, then scan **1** followed by **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Two Discrete Lengths** - Select this option to decode only D 2 of 5 symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only those D 2 of 5 symbols containing either 2 or 14 characters, select **D 2 of 5 - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Length Within Range** - Select this option to decode a D 2 of 5 symbol with a specific length range. Select lengths using numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode D 2 of 5 symbols containing between 4 and 12 characters, first scan **D 2 of 5 - Length Within Range**. Then scan **0, 4, 1**, and **2** (single digit numbers must always be preceded by a leading zero). To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Any Length** - Scan this option to decode D 2 of 5 symbols containing any number of characters within the digital scanner capability.

✓ **NOTE** Due to the construction of the D 2 of 5 symbology, it is possible for a scan line covering only a portion of the code to be interpreted as a complete scan, yielding less data than is encoded in the bar code. To prevent this, select specific lengths (**D 2 of 5 - One Discrete Length - Two Discrete Lengths**) for D 2 of 5 applications.

Set Lengths for Discrete 2 of 5 (continued)



D 2 of 5 - One Discrete Length



D 2 of 5 - Two Discrete Lengths



D 2 of 5 - Length Within Range



 
D 2 of 5 - Any Length

Codabar (NW - 7)


Enable/Disable Codabar

Parameter # 7

To enable or disable Codabar, scan the appropriate bar code below.



Enable Codabar
(1)

 

*Disable Codabar
(0)

Set Lengths for Codabar

Parameter # L1 = 24, L2 = 25

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Codabar to any length, one or two discrete lengths, or lengths within a specific range.

- **One Discrete Length** - Select this option to decode only Codabar symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Codabar symbols with 14 characters, scan **Codabar - One Discrete Length**, then scan **1** followed by **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Two Discrete Lengths** - Select this option to decode only Codabar symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Codabar symbols containing either 2 or 14 characters, select **Codabar - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Length Within Range** - Select this option to decode a Codabar symbol with a specific length range. Select lengths using numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode Codabar symbols containing between 4 and 12 characters, first scan **Codabar - Length Within Range**. Then scan **0, 4, 1**, and **2** (single digit numbers must always be preceded by a leading zero). To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Any Length** - Scan this option to decode Codabar symbols containing any number of characters within the digital scanner capability.

Set Lengths for Codabar (continued)



Codabar - One Discrete Length



Codabar - Two Discrete Lengths



Codabar - Length Within Range



 
Codabar - Any Length

CLSI Editing


Parameter # 54

Enable this parameter to strip the start and stop characters and insert a space after the first, fifth, and tenth characters of a 14-character Codabar symbol. Enable this feature if the host system requires this data format.

✓ **NOTE** Symbol length does not include start and stop characters.



Enable CLSI Editing
(1)

 


*Disable CLSI Editing
(0)


NOTIS Editing

Parameter # 55

 Enable this parameter to strip the start and stop characters from a decoded Codabar symbol. Enable this feature if the host system requires this data format.



Enable NOTIS Editing
(1)

 


*Disable NOTIS Editing
(0)

Codabar Upper or Lower Case Start/Stop Characters Transmission

Parameter # 855

 Select whether to transmit upper case or lower case Codabar start/stop characters.



*Upper Case
(0)



 
Lower Case
(1)

MSI


Enable/Disable MSI

Parameter # 11

To enable or disable MSI, scan the appropriate bar code below.



Enable MSI
(1)

 

*Disable MSI
(0)

Set Lengths for MSI

Parameter # L1 = 30, L2 = 31

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for MSI to any length, one or two discrete lengths, or lengths within a specific range.

- **One Discrete Length** - Select this option to decode only MSI symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only MSI symbols with 14 characters, scan **MSI - One Discrete Length**, then scan **1** followed by **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Two Discrete Lengths** - Select this option to decode only MSI symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only MSI symbols containing either 2 or 14 characters, select **MSI - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Length Within Range** - Select this option to decode a MSI symbol with a specific length range. Select lengths using numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode MSI symbols containing between 4 and 12 characters, first scan **MSI - Length Within Range**. Then scan **0, 4, 1**, and **2** (single digit numbers must always be preceded by a leading zero). To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Any Length** - Scan this option to decode MSI symbols containing any number of characters within the digital scanner capability.

✓ **NOTE** Due to the construction of the MSI symbology, it is possible for a scan line covering only a portion of the code to be interpreted as a complete scan, yielding less data than is encoded in the bar code. To prevent this, select specific lengths (**MSI - One Discrete Length - Two Discrete Lengths**) for MSI applications.

Set Lengths for MSI (continued)



MSI - One Discrete Length



MSI - Two Discrete Lengths



MSI - Length Within Range



 
MSI - Any Length

MSI Check Digits


Parameter # 50

With MSI symbols, one check digit is mandatory and always verified by the reader. The second check digit is optional. If the MSI codes include two check digits, scan the **Two MSI Check Digits** bar code to enable verification of the second check digit.

See [MSI Check Digit Algorithm on page 12-54](#) for the selection of second digit algorithms.



* One MSI Check Digit
(0)

 


Two MSI Check Digits
(1)


Transmit MSI Check Digit(s)

Parameter # 46

 Scan a bar code below to transmit MSI data with or without the check digit.



 Transmit MSI Check Digit(s) (Enable)
(1)




* Do Not Transmit MSI Check Digit(s) (Disable)
(0)


MSI Check Digit Algorithm

Parameter # 51

 Two algorithms are possible for the verification of the second MSI check digit. Select the bar code below corresponding to the algorithm used to encode the check digit.



MOD 10/MOD 11
(0)

 


*MOD 10/MOD 10
(1)

Chinese 2 of 5


Enable/Disable Chinese 2 of 5

Parameter # 408

 To enable or disable Chinese 2 of 5, scan the appropriate bar code below.



Enable Chinese 2 of 5
(1)

 

*Disable Chinese 2 of 5
(0)

Matrix 2 of 5

Enable/Disable Matrix 2 of 5

Parameter # 618

To enable or disable Matrix 2 of 5, scan the appropriate bar code below.



Enable Matrix 2 of 5
(1)



 
*Disable Matrix 2 of 5
(0)

Set Lengths for Matrix 2 of 5

Parameter # L1 = 619, L2 = 620

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Matrix 2 of 5 to any length, one or two discrete lengths, or lengths within a specific range.


- **One Discrete Length** - Select this option to decode only Matrix 2 of 5 symbols containing a selected length. Select the length using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Matrix 2 of 5 symbols with 14 characters, scan **Matrix 2 of 5 - One Discrete Length**, then scan **1** followed by **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Two Discrete Lengths** - Select this option to decode only Matrix 2 of 5 symbols containing either of two selected lengths. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode only Matrix 2 of 5 symbols containing either 2 or 14 characters, select **Matrix 2 of 5 - Two Discrete Lengths**, then scan **0, 2, 1**, and then **4**. To correct an error or to change the selection, scan [Cancel on page D-3](#).
- **Length Within Range** - Select this option to decode a Matrix 2 of 5 symbol with a specific length range. Select lengths using the numeric bar codes in [Appendix D, Numeric Bar Codes](#). For example, to decode Matrix 2 of 5 symbols containing between 4 and 12 characters, first scan **Matrix 2 of 5 - Length Within Range**. Then scan **0, 4, 1**, and **2** (enter a leading zero for single digit numbers). To correct an error or change the selection, scan [Cancel on page D-3](#).
- **Any Length** - Scan this option to decode Matrix 2 of 5 symbols containing any number of characters within the digital scanner's capability.



*Matrix 2 of 5 - One Discrete Length



 Matrix 2 of 5 - Two Discrete Lengths



Matrix 2 of 5 - Length Within Range



Matrix 2 of 5 - Any Length

Matrix 2 of 5 Check Digit

Parameter # 622

The check digit is the last character of the symbol used to verify the integrity of the data. Scan the appropriate bar code below to transmit the bar code data with or without the Matrix 2 of 5 check digit.



Enable Matrix 2 of 5 Check Digit
(1)

 


*Disable Matrix 2 of 5 Check Digit
(0)

Transmit Matrix 2 of 5 Check Digit

Parameter # 623

Scan a bar code below to transmit Matrix 2 of 5 data with or without the check digit.



Transmit Matrix 2 of 5 Check Digit
(1)



*Do Not Transmit Matrix 2 of 5 Check Digit
(0)

Korean 3 of 5

Enable/Disable Korean 3 of 5

 
Parameter # 581

To enable or disable Korean 3 of 5, scan the appropriate bar code below.

NOTE The length for Korean 3 of 5 is fixed at 6.



Enable Korean 3 of 5
(1)



*Disable Korean 3 of 5
(0)

Inverse 1D

Parameter # 586

This parameter sets the 1D inverse decoder setting. Options are:

- **Regular Only** - the digital scanner decodes regular 1D bar codes only.
- **Inverse Only** - the digital scanner decodes inverse 1D bar codes only.
- **Inverse Autodetect** - the digital scanner decodes both regular and inverse 1D bar codes.



*Regular
(0)



Inverse Only
(1)



**Inverse Autodetect
(2)



NOTE *The Data Matrix Inverse default is **Regular** for the *SR* and *HD* configurations.
The Data Matrix Inverse default is **Inverse Autodetect for the *DP* configuration.

Postal Codes

US Postnet

Parameter # 89

To enable or disable US Postnet, scan the appropriate bar code below.



Enable US Postnet
(1)



*Disable US Postnet
(0)

US Planet

Parameter # 90

To enable or disable US Planet, scan the appropriate bar code below.



Enable US Planet
(1)

 


*Disable US Planet
(0)

Transmit US Postal Check Digit

Parameter # 95

Select whether to transmit US Postal data, which includes both US Postnet and US Planet, with or without the check digit.



***Transmit US Postal Check Digit
(1)**



**Do Not Transmit US Postal Check Digit
(0)**

UK Postal

Parameter # 91

To enable or disable UK Postal, scan the appropriate bar code below.



**Enable UK Postal
(1)**



***Disable UK Postal
(0)**

Transmit UK Postal Check Digit

Parameter # 96

Select whether to transmit UK Postal data with or without the check digit.



***Transmit UK Postal
Check Digit
(1)**



**Do Not Transmit UK Postal Check Digit
(0)**

Japan Postal

Parameter # 290

To enable or disable Japan Postal, scan the appropriate bar code below.



**Enable Japan Postal
(1)**



***Disable Japan Postal
(0)**

Australia Post

Parameter # 291

To enable or disable Australia Post, scan the appropriate bar code below.



**Enable Australia Post
(1)**



***Disable Australia Post
(0)**

Netherlands KIX Code

Parameter # 326

To enable or disable Netherlands KIX Code, scan the appropriate bar code below.



**Enable Netherlands KIX Code
(1)**



***Disable Netherlands KIX Code
(0)**

USPS 4CB/One Code/Intelligent Mail

Parameter # 592

To enable or disable USPS 4CB/One Code/Intelligent Mail, scan the appropriate bar code below.



Enable USPS 4CB/One Code/Intelligent Mail
(1)



*Disable USPS 4CB/One Code/Intelligent Mail
(0)

UPU FICS Postal

Parameter # 611

To enable or disable UPU FICS Postal, scan the appropriate bar code below.



Enable UPU FICS Postal
(1)



 
*Disable UPU FICS Postal
(0)

GS1 DataBar

The variants of GS1 DataBar are DataBar-14, DataBar Expanded, and DataBar Limited. The limited and expanded versions have stacked variants. Scan the appropriate bar code below to enable or disable each variant of GS1 DataBar.

GS1 DataBar Omnidirectional (formerly GS1 DataBar-14)

Parameter # 338




*Enable GS1 DataBar Omnidirectional
(1)



Disable GS1 DataBar Omnidirectional
(0)

GS1 DataBar Limited

 Parameter # 339



Enable GS1 DataBar Limited
(1)



*Disable GS1 DataBar Limited
(0)

GS1 DataBar Limited Security Level

Parameter # 728

The digital scanner offers four levels of decode security for GS1 DataBar Limited bar codes. There is an inverse relationship between security and digital scanner aggressiveness. Increasing the level of security may result in reduced aggressiveness in scanning, so choose only that level of security necessary.

- Level 1 – No clear margin required. This complies with the original GS1 standard, yet might result in erroneous decoding of the DataBar Limited bar code when scanning some UPC symbols that start with digits “9” and “7”
- Level 2 – Automatic risk detection. This level of security may result in erroneous decoding of DataBar Limited bar codes when scanning some UPC symbols. The digital scanner defaults to Level 3, otherwise to Level 1.
- Level 3 – Security level reflects newly proposed GS1 standard that requires a 5 times trailing clear margin.
- Level 4 – Security level extends beyond the standard required by GS1. This level of security requires a 5 times leading and trailing clear margin.



GS1 DataBar Limited Security Level 1
(1)



GS1 DataBar Limited Security Level 2
(2)



 
*GS1 DataBar Limited Security Level 3
(3)




GS1 DataBar Limited Security Level 4
(4)

GS1 DataBar Expanded

Parameter # 340



*Enable GS1 DataBar Expanded
(1)

 


Disable GS1 DataBar Expanded
(0)

Convert GS1 DataBar to UPC/EAN


Parameter # 397

This parameter only applies to DataBar-14 and DataBar Limited symbols not decoded as part of a Composite symbol. Enable this to strip the leading '010' from DataBar-14 and DataBar Limited symbols encoding a single zero as the first digit, and report the bar code as EAN-13.

 For bar codes beginning with two or more zeros but not six zeros, this parameter strips the leading '0100' and reports the bar code as UPC-A. The UPC-A Preamble parameter that transmits the system character and country code applies to converted bar codes. Note that neither the system character nor the check digit can be stripped.



 Enable Convert GS1 DataBar to UPC/EAN
(1)




*Disable Convert GS1 DataBar to UPC/EAN
(0)

Composite

Composite CC-C

Parameter # 341

 Scan a bar code below to enable or disable Composite bar codes of type CC-C.



Enable CC-C
(1)



*Disable CC-C
(0)

Composite CC-A/B

Parameter # 342

Scan a bar code below to enable or disable Composite bar codes of type CC-A/B.



Enable CC-A/B
(1)

 


*Disable CC-A/B
(0)

Composite TLC-39

Parameter # 371

Scan a bar code below to enable or disable Composite bar codes of type TLC-39.



Enable TLC39
(1)



 
*Disable TLC39
(0)

UPC Composite Mode

Parameter # 344

Select an option for linking UPC symbols with a 2D symbol during transmission as if they were one symbol:

- Select **UPC Never Linked** to transmit UPC bar codes regardless of whether a 2D symbol is detected.
- Select **UPC Always Linked** to transmit UPC bar codes and the 2D portion. If 2D is not present, the UPC bar code does not transmit.
- If you select **Autodiscriminate UPC Composites**, the digital scanner determines if there is a 2D portion, then transmits the UPC, as well as the 2D portion if present.



*UPC Never Linked
(0)



UPC Always Linked
(1)

 


Autodiscriminate UPC Composites
(2)

Composite Beep Mode

Parameter # 398


To select the number of decode beeps when a composite bar code is decoded, scan the appropriate bar code.



Single Beep after both are decoded
(0)



 *Beep as each code type is decoded
(1)



Double Beep after both are decoded
(2)

GS1-128 Emulation Mode for UCC/EAN Composite Codes

Parameter # 427

Select whether to enable or disable this mode.



Enable GS1-128 Emulation Mode for
UCC/EAN Composite Codes
(1)



*Disable GS1-128 Emulation Mode for
UCC/EAN Composite Codes
(0)

2D Symbologies

Enable/Disable PDF417

Parameter # 15

To enable or disable PDF417, scan the appropriate bar code below.



*Enable PDF417
(1)



Disable PDF417
(0)

Enable/Disable MicroPDF417

Parameter # 227

To enable or disable MicroPDF417, scan the appropriate bar code below.



Enable MicroPDF417
(1)



*Disable MicroPDF417
(0)

Code 128 Emulation

Parameter # 123

Enable this parameter to transmit data from certain MicroPDF417 symbols as Code 128. *Transmit Code ID Character on page 5-41* must be enabled for this parameter to work.

Enable Code 128 Emulation to transmit these MicroPDF417 symbols with one of the following prefixes:

-]C1 if the first codeword is 903-905
-]C2 if the first codeword is 908 or 909
-]C0 if the first codeword is 910 or 911

Disable Code 128 Emulation to transmit these MicroPDF417 symbols with one of the following prefixes:

-]L3 if the first codeword is 903-905
-]L4 if the first codeword is 908 or 909
-]L5 if the first codeword is 910 or 911

Scan a bar code below to enable or disable Code 128 Emulation.



NOTE Linked MicroPDF codewords 906, 907, 912, 914, and 915 are not supported. Use GS1 Composites instead.



Enable Code 128 Emulation
(1)



*Disable Code 128 Emulation
(0)

Data Matrix

Parameter # 292

To enable or disable Data Matrix, scan the appropriate bar code below.



*Enable Data Matrix
(1)



Disable Data Matrix
(0)

Data Matrix Inverse

Parameter # 588

This parameter sets the Data Matrix inverse decoder setting. Options are:

- **Regular Only** - the digital scanner decodes regular Data Matrix bar codes only.
- **Inverse Only** - the digital scanner decodes inverse Data Matrix bar codes only.
- **Inverse Autodetect** - the digital scanner decodes both regular and inverse Data Matrix bar codes.



*Regular
(0)



Inverse Only
(1)



**Inverse Autodetect
(2)



NOTE *The Data Matrix Inverse default is **Regular** for the *SR* and *HD* configurations.
The Data Matrix Inverse default is **Inverse Autodetect for the *DP* configuration.

Maxicode

Parameter # 294

To enable or disable Maxicode, scan the appropriate bar code below.



***Enable Maxicode
(1)**



**Disable Maxicode
(0)**

QR Code

Parameter # 293

To enable or disable QR Code, scan the appropriate bar code below.



***Enable QR Code
(1)**



**Disable QR Code
(0)**

QR Inverse

Parameter # 587

This parameter sets the QR inverse decoder setting. Options are:

- **Regular Only** - the digital scanner decodes regular QR bar codes only.
- **Inverse Only** - the digital scanner decodes inverse QR bar codes only.
- **Inverse Autodetect** - the digital scanner decodes both regular and inverse QR bar codes.



*Regular
(0)



Inverse Only
(1)



Inverse Autodetect
(2)

MicroQR

Parameter # 573

To enable or disable MicroQR, scan the appropriate bar code below.



*Enable MicroQR
(1)



Disable MicroQR
(0)

Aztec

Parameter # 574

To enable or disable Aztec, scan the appropriate bar code below.



*Enable Aztec
(1)



Disable Aztec
(0)

Aztec Inverse

Parameter # 589

This parameter sets the Aztec inverse decoder setting. Options are:

- **Regular Only** - the digital scanner decodes regular Aztec bar codes only.
- **Inverse Only** - the digital scanner decodes inverse Aztec bar codes only.
- **Inverse Autodetect** - the digital scanner decodes both regular and inverse Aztec bar codes.



Regular
(0)



Inverse Only
(1)



*Inverse Autodetect
(2)

Redundancy Level

Parameter # 78

The digital scanner offers four levels of decode redundancy. Select higher redundancy levels for decreasing levels of bar code quality. As redundancy levels increase, the digital scanner's aggressiveness decreases.

Select the redundancy level appropriate for the bar code quality.

Redundancy Level 1

The following code types must be successfully read twice before being decoded:

Table 12-2 *Redundancy Level 1 Codes*

Code Type	Code Length
Codabar	8 characters or less
MSI	4 characters or less
D 2 of 5	8 characters or less
I 2 of 5	8 characters or less

Redundancy Level 2

The following code types must be successfully read twice before being decoded:

Table 12-3 *Redundancy Level 2 Codes*

Code Type	Code Length
All	All

Redundancy Level 3

Code types other than the following must be successfully read twice before being decoded. The following codes must be read three times:

Table 12-4 *Redundancy Level 3 Codes*

Code Type	Code Length
MSI Plessey	4 characters or less
D 2 of 5	8 characters or less
I 2 of 5	8 characters or less
Codabar	8 characters or less

Redundancy Level (continued)

Redundancy Level 4


The following code types must be successfully read three times before being decoded:

Table 12-5 *Redundancy Level 4 Codes*


Code Type	Code Length
All	All



 
*Redundancy Level 1
(1)



Redundancy Level 2
(2)

 

Redundancy Level 3
(3)

 


Redundancy Level 4
(4)

Security Level


Parameter # 77

The digital scanner offers four levels of decode security for delta bar codes, which include the Code 128 family, UPC/EAN, and Code 93. Select increasing levels of security for decreasing levels of bar code quality. There is an inverse relationship between security and digital scanner aggressiveness, so choose only that level of security necessary for any given application.

 
- **Security Level 0:** This setting allows the digital scanner to operate in its most aggressive state, while providing sufficient security in decoding most “in-spec” bar codes.
- **Security Level 1:** This default setting should eliminate most misdecodes.
- **Security Level 2:** Select this option if Security level 1 fails to eliminate misdecodes.
- **Security Level 3:** If Security Level 2 was selected and misdecodes still occur, select this security level. Be advised, selecting this option is an extreme measure against mis-decoding severely out of spec bar codes. Selecting this level of security significantly impairs the decoding ability of the digital scanner. If this level of security is necessary, try to improve the quality of the bar codes.



Security Level 0
(0)

 

*Security Level 1
(1)

 

Security Level 2
(2)



Security Level 3
(3)

Intercharacter Gap Size

Parameter # 381

The Code 39 and Codabar symbologies have an intercharacter gap that is typically quite small. Due to various bar code-printing technologies, this gap can grow larger than the maximum size allowed, preventing the digital scanner from decoding the symbol. If this problem occurs, scan the **Large Intercharacter Gaps** parameter to tolerate these out-of-specification bar codes.




***Normal Intercharacter Gaps**
(6)



Large Intercharacter Gaps
(10)

Report Version

Scan the bar code below to report the version of software installed in the digital scanner.

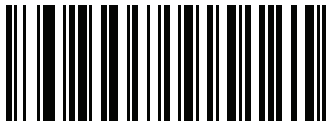

Report Software Version

 
Macro PDF Features

Macro PDF is a special feature for concatenating multiple PDF symbols into one file. The digital scanner can decode symbols that are encoded with this feature, and can store more than 64 Kb of decoded data stored in up to 50 MacroPDF symbols.

CAUTION When printing, keep each Macro PDF sequence separate, as each sequence has unique identifiers. Do not mix bar codes from several Macro PDF sequences, even if they encode the same data. When scanning Macro PDF sequences, scan the entire Macro PDF sequence without interruption. If, when scanning a mixed sequence, the digital scanner emits two long low beeps (Low/Low) this indicates an inconsistent file ID or inconsistent symbology error.

Flush Macro Buffer

This flushes the buffer of all decoded Macro PDF data stored to that point, transmits it to the host device, and aborts from Macro PDF mode.



Flush Macro PDF Buffer

Abort Macro PDF Entry

This clears all currently-stored Macro PDF data in the buffer without transmission and aborts from Macro PDF mode.



Abort Macro PDF Entry

CHAPTER 13 123SCAN2

Introduction

123Scan² is an easy to use, PC-based software tool that enables rapid customized setup of Zebra scanners.

123Scan² uses a wizard tool to guide users through a streamlined set up process. Settings are saved in a configuration file that can be distributed via e-mail, electronically downloaded via a USB cable, or used to generate a sheet of scannable programming bar codes.

Additionally 123Scan² can upgrade scanner firmware, check online to enable support for newly released products, generate a collection of multi-setting bar codes if the number of settings is very large, stage a large number of scanners simultaneously, generate reports with asset tracking information, and create custom products.

Communication with 123Scan²

To communicate with the 123Scan² program which runs on a host computer running a Windows XP SP2 or Windows 7, 8, 8.1, or 10 operating system, use a USB cable to connect the scanner to the host computer.

123Scan² Requirements

- Host computer with Windows XP SP2 or Windows 7, 8, 8.1, 10
- Scanner
- USB cable.

For more information on 123Scan², go to:

<http://www.zebra.com/123Scan2>

For a 1 minute tour of 123Scan², go to:

<http://www.zebra.com/scannersoftwarevideos>

To download 123Scan² software go to:

<http://www.zebra.com/123Scan2>

Scanner SDK, Other Software Tools, and Videos

Tackle all your scanner programming needs with our diversified set of software tools. Whether you need to simply stage a device, or develop a fully featured application with image and data capture as well as asset management, these tools help you every step of the way. To download any of the free tools listed below, go to: www.zebra.com/software.

- 123Scan2 configuration utility (described in this chapter)
- Scanner SDK for Windows
- How-to videos
- Virtual COM port driver
- OPOS driver
- JPOS driver
- Scanner user documentation.

CHAPTER 14 ADVANCED DATA FORMATTING

Introduction

Advanced Data Formatting (ADF) is a means of customizing data before transmission to the host device. Use ADF to edit scan data to suit requirements. Implement ADF by scanning a related series of bar codes which program the digital scanner with ADF rules.

For information and programming bar codes for ADF, refer to the *Advanced Data Formatting Programmer Guide*, p/n 72E-69680-xx.

APPENDIX A STANDARD DEFAULT PARAMETERS

Table A-1 Standard Default Parameters Table

Parameter	Parameter Number	Default	Page Number
Radio Communications			
Bluetooth Host (Host Type)	N/A	Cradle Host	4-5
Bluetooth Friendly Name	N/A	Scanner name and serial number	4-7
Discoverable Mode	N/A	General	4-7
Apple iOS HID Feature	N/A	Disable	4-8
Android HID Feature	N/A	Disable	4-8
Country Keyboard Types (Country Code)	N/A	North American	4-10
HID Keyboard Keystroke Delay	N/A	No Delay (0 msec)	4-11
CAPS Lock Override	N/A	Disable	4-11
Ignore Unknown Characters	N/A	Enable	4-12
Emulate Keypad	N/A	Disable	4-12
Keyboard FN1 Substitution	N/A	Disable	4-13
Function Key Mapping	N/A	Disable	4-13
Simulated Caps Lock	N/A	Disable	4-14
Convert Case	N/A	No Case Conversion	4-14
Beep on Reconnect Attempt	N/A	Disable	4-15
Reconnect Attempt Interval	N/A	30 sec	4-16

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
Auto-reconnect in Bluetooth Keyboard Emulation (HID Slave) Mode	N/A	On Bar Code Data	4-17
Modes of Operation (Point-to-Point-to-Point)	N/A	Point-to-Point	4-19
Parameter Broadcast (Cradle Host Only)	N/A	Enable	4-20
Pairing Modes	N/A	Unlocked	4-21
Pairing on Contacts	N/A	Disable	4-22
FIPS Mode	N/A	Disable	4-24
Connection Maintenance Interval	N/A	15 min	4-25
Authentication	N/A	Disable	4-28
Pin Code	N/A	Static	4-29
Encryption	N/A	Disable	4-30
Secure Simple Pairing IO Capability (SPP Server and SPP Master Host Mode Only)	N/A	No Input/No Output	4-31
User Preferences			
Set Default Parameter	N/A	Set Defaults	5-4
Parameter Bar Code Scanning	236	Enable	5-5
Beep After Good Decode	56	Enable	5-5
Suppress Power Up Beeps	721	Do Not Suppress	5-6
Beeper Tone	145	Medium	5-7
Beeper Volume	140	High	5-8
Beeper Duration	628	Medium	5-9
Beep on Insertion	288	Enabled	5-9
Decode Pager Motor	613	Enable	5-10
Decode Pager Motor Duration	626	500 msec	5-10
Trigger Mode	138	Level	5-12
Batch Mode	544	Normal (Do Not Batch Data)	5-12
Time Delay to Reduced Power Mode	146	100 msec	5-15
Timeout to Low Power Mode from Auto Aim	729	15 Sec	5-17
Picklist Mode	402	Disabled Always	5-18
DPM Scanning	521	Enable	5-19

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
Mobile Phone/Display Mode	716	Disable	5-20
PDF Prioritization	719	Disable	5-21
PDF Prioritization Timeout	720	200 ms	5-21
Continuous Bar Code Read	649	Disable	5-22
Unique Bar Code Reporting	723	Disable	5-22
Decode Session Timeout	136	9.9 Sec	5-23
Timeout Between Decodes, Same Symbol	137	0.5 Sec	5-23
Fuzzy 1D Processing	514	Enable	5-24
Decode Mirror Images (Data Matrix Only)	537	Auto	5-25
Decode Aiming Pattern	306	Enable	5-26
Decoding Illumination	298	Enable	5-27
Torch Mode	747	Enable	5-28
Smart LED Mode	748	Enable	5-29
Focus Mode	422	Auto-Ranging	5-30
Multicode Mode	677	Disable	5-31
Multicode Expression	661	1	5-32
Multicode Mode Concatenation	717	Disable	5-37
Multicode Concatenation Symbology	722	Concatenate as PDF417	5-38
Miscellaneous Options			
Transmit Code ID Character	45	None	5-41
Prefix Value	99, 105	7013 <CR><LF>	5-42
Suffix 1 Value	98, 104	7013 <CR><LF>	5-42
Suffix 2 Value	100, 106		
Scan Data Transmission Format	235	Data as is	5-42
FN1 Substitution Values	103, 109	Set	5-44
Transmit "No Read" Message	94	Disable	5-45
Unsolicited Heartbeat Interval	1118	Disable	5-46
Dump Scanner Parameters	N/A	N/A	5-47
IUD Parsing	740	Disable	5-48

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
Imaging Preferences			
Operational Modes	N/A	N/A	6-4
Image Capture Illumination	361	Enable	6-5
Gain / Exposure Priority for Snapshot Mode	562	Autodetect	6-6
Snapshot Mode Timeout	323	0 (30 seconds)	6-7
Snapshot Aiming Pattern	300	Enable	6-7
Image Cropping	301	Disable	6-8
Crop to Pixel Addresses	315 316 317 318	0 Top 0 Left 479 Bottom 751 Right	6-9
Image Size (Number of Pixels)	302	Full	6-10
Image Brightness (Target White)	390	180	6-11
JPEG Image Options	299	Quality	6-11
JPEG Target File Size	561	160 kB	6-12
JPEG Quality Value	305	65	6-12
Image Enhancement	564	Off (0)	6-13
Image File Format Selection	304	JPEG	6-14
Image Rotation	665	0	6-15
Bits per Pixel (BPP)	303	8 BPP	6-16
Signature Capture	93	Disable	6-17
Signature Capture Image File Format Selection	313	JPEG	6-18
Signature Capture Bits per Pixel (BPP)	314	8 BPP	6-19
Signature Capture Width	366	400	6-20
Signature Capture Height	367	100	6-20
Signature Capture JPEG Quality	421	65	6-20

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
Keyboard Wedge Host Parameters			
Keyboard Wedge Host Type	N/A	IBM PC/AT& IBM PC Compatibles ¹	8-4
Keyboard Wedge Country Types (Country Codes)	N/A	North American	8-5
Ignore Unknown Characters	N/A	Enable	8-7
Keystroke Delay	N/A	0 msec (No Delay)	8-7
Intra-Keystroke Delay	N/A	Disable	8-8
Alternate Numeric Keypad Emulation	N/A	Disable	8-8
Caps Lock On	N/A	Disable	8-9
Caps Lock Override	N/A	Disable	8-9
Convert Wedge Data	N/A	Do Not Convert Wedge Data	8-10
Function Key Mapping	N/A	Disable	8-10
FN1 Substitution	N/A	Disable	8-11
Send Make and Break	N/A	Send Make and Break Scan Codes	8-11
RS-232 Host Parameters			
RS-232 Host Types	N/A	Standard RS-232 ¹	9-6
Baud Rate	N/A	9600	9-7
Parity	N/A	None	9-8
Check Receive Errors	N/A	Enable	9-8
Stop Bit Select	N/A	1 Stop Bit	9-9
Data Bits	N/A	8-Bit	9-9
Hardware Handshaking	N/A	None	9-10
Software Handshaking	N/A	None	9-12
Host Serial Response Time-out	N/A	Minimum: 2 Sec	9-14
RTS Line State	N/A	Host: Low RTS	9-15
Beep on <BEL>	N/A	Disable	9-15
Intercharacter Delay	N/A	Minimum: 0 msec	9-16
Nixdorf Mode A/B and OPOS/JPOS Beep/LED Options	N/A	Normal Operation	9-17

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
Ignore Unknown Characters	N/A	Send Bar Code	9-18
USB Host Parameters			
USB Device Type	N/A	USB Keyboard (HID)	10-5
USB Country Keyboard Types (Country Codes)	N/A	North American	10-7
Symbol Native API (SNAPI) Status Handshaking	N/A	Enable	10-9
USB Keystroke Delay	N/A	No Delay (0 msec)	10-9
USB CAPS Lock Override	N/A	Disable	10-10
USB Ignore Unknown Characters	N/A	Enable	10-10
Emulate Keypad	N/A	Disable	10-11
Emulate Keypad with Leading Zero	N/A	Disable	10-11
Quick Keypad Emulation	N/A	Disable	10-12
USB Keyboard FN1 Substitution	N/A	Disable	10-12
Function Key Mapping	N/A	Disable	10-13
Simulated Caps Lock	N/A	Disable	10-13
Convert Case	N/A	No Case Conversion	10-14
USB Static CDC	N/A	Disable	10-14
USB Polling Interval	N/A	8 msec	10-15
Ignore Beep	N/A	Disable	10-17
Ignore Bar Code Configuration	N/A	Disable	10-17
IBM 468X/469X Host Parameters			
Port Address	N/A	None Selected	11-4
Convert Unknown to Code 39	N/A	Disable	11-4
Ignore Beep	N/A	Disable	11-5
Ignore Bar Code Configuration	N/A	Disable	11-5
Symbologies			
UPC/EAN			
UPC-A	1	Enable	12-7
UPC-E	2	Enable	12-7

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
UPC-E1	12	Disable	12-8
EAN-8/JAN 8	3	Enable	12-8
EAN-13/JAN 13	4	Enable	12-9
Bookland EAN	83	Disable	12-9
Decode UPC/EAN/JAN Supplementals (2 and 5 digits)	16	Ignore Supplementals	12-10
User-Programmable Supplementals	579 580		12-13
UPC/EAN/JAN Supplemental Redundancy	80	10	12-14
UPC/EAN/JAN Supplemental AIM ID Format	672	Combined	12-15
Transmit UPC-A Check Digit	40	Enable	12-16
Transmit UPC-E Check Digit	41	Enable	12-16
Transmit UPC-E1 Check Digit	42	Enable	12-16
UPC-A Preamble	34	System Character	12-17
UPC-E Preamble	35	System Character	12-18
UPC-E1 Preamble	36	System Character	12-19
Convert UPC-E to A	37	Disable	12-20
Convert UPC-E1 to A	38	Disable	12-20
EAN-8/JAN-8 Extend	39	Disable	12-21
Bookland ISBN Format	576	ISBN-10	12-21
UCC Coupon Extended Code	85	Disable	12-22
Coupon Report	730	New Coupon Format	12-23
ISSN EAN	617	Disable	12-24
Code 128			
Code 128	8	Enable	12-25
Set Length(s) for Code 128	209, 210	Any Length	12-25
GS1-128 (formerly UCC/EAN-128)	14	Enable	12-27
ISBT 128	84	Enable	12-27
ISBT Concatenation	577	Disable	12-28
Check ISBT Table	578	Enable	12-29

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
ISBT Concatenation Redundancy	223	10	12-29
Code 39			
Code 39	0	Enable	12-30
Trioptic Code 39	13	Disable	12-30
Convert Code 39 to Code 32 (Italian Pharmacy Code)	86	Disable	12-31
Code 32 Prefix	231	Disable	12-31
Set Length(s) for Code 39	18, 19	2 to 55	12-32
Code 39 Check Digit Verification	48	Disable	12-34
Transmit Code 39 Check Digit	43	Disable	12-34
Code 39 Full ASCII Conversion	17	Disable	12-35
Code 93			
Code 93	9	Disable	12-36
Set Lengths for Code 93	26, 27	4 to 55	12-36
Code 11			
Code 11	10	Disable	12-38
Set Lengths for Code 11	28, 29	4 to 55	12-38
Code 11 Check Digit Verification	52	Disable	12-40
Transmit Code 11 Check Digits	47	Disable	12-40
Interleaved 2 of 5 (I 2 of 5)			
Interleaved 2 of 5 (I 2 of 5)	6	Disable	12-41
Set Lengths for Interleaved 2 of 5	22, 23	14	12-41
I 2 of 5 Check Digit Verification	49	Disable	12-43
Transmit I 2 of 5 Check Digit	44	Disable	12-43
Convert I 2 of 5 to EAN-13	82	Disable	12-44
Discrete 2 of 5 (D 2 of 5)			
Discrete 2 of 5	5	Disable	12-45
Set Lengths for D 2 of 5	20, 21	12	12-45
Codabar (NW - 7)			
Codabar	7	Disable	12-47

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
Set Lengths for Codabar	24, 25	5 to 55	12-47
CLSI Editing	54	Disable	12-49
NOTIS Editing	55	Disable	12-49
Codabar Upper or Lower Case Start/Stop Characters Transmission	855	Upper Case	12-50
MSI			
MSI	11	Disable	12-51
Set Lengths for MSI	30, 31	4 to 55	12-51
MSI Check Digits	50	One	12-53
Transmit MSI Check Digit(s)	46	Disable	12-53
MSI Check Digit Algorithm	51	Mod 10/Mod 10	12-54
Chinese 2 of 5			
Chinese 2 of 5	408	Disable	12-55
Matrix 2 of 5			
Matrix 2 of 5	618	Disable	12-55
Matrix 2 of 5 Lengths	619, 620	1 Length - 14	12-56
Matrix 2 of 5 Check Digit	622	Disable	12-57
Transmit Matrix 2 of 5 Check Digit	623	Disable	12-57
Korean 3 of 5			
Korean 3 of 5	581	Disable	12-58
Inverse 1D			
Inverse 1D	586	Regular (SR/HD) Inverse Autodetect (DP)	12-59
Postal Codes			
US Postnet	89	Disable	12-60
US Planet	90	Disable	12-60
Transmit US Postal Check Digit	95	Enable	12-61
UK Postal	91	Disable	12-61
Transmit UK Postal Check Digit	96	Enable	12-62
Japan Postal	290	Disable	12-62

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
Australia Post	291	Disable	12-63
Netherlands KIX Code	326	Disable	12-63
USPS 4CB/One Code/Intelligent Mail	592	Disable	12-64
UPU FICS Postal	611	Disable	12-64
GS1 DataBar			
GS1 DataBar Omnidirectional (formerly GS1 DataBar-14)	338	Enable	12-65
GS1 DataBar Limited	339	Disable	12-65
GS1 DataBar Limited Security Level	728	Level 3	12-66
GS1 DataBar Expanded	340	Enable	12-67
Convert GS1 DataBar to UPC/EAN	397	Disable	12-67
Composite			
Composite CC-C	341	Disable	12-68
Composite CC-A/B	342	Disable	12-68
Composite TLC-39	371	Disable	12-69
UPC Composite Mode	344	Never Linked	12-69
Composite Beep Mode	398	Beep As Each Code Type is Decoded	12-70
GS1-128 Emulation Mode for UCC/EAN Composite Codes	427	Disable	12-70
2D Symbologies			
PDF417	15	Enable	12-71
MicroPDF417	227	Disable	12-71
Code 128 Emulation	123	Disable	12-72
Data Matrix	292	Enable	12-73
Data Matrix Inverse	588	Regular (SR/HD) Inverse Autodetect (DP)	12-73
Maxicode	294	Enable	12-74
QR Code	293	Enable	12-74
QR Inverse	587	Regular	12-75
MicroQR	573	Enable	12-75

¹User selection is required to configure this interface and this is the most common selection.

Table A-1 Standard Default Parameters Table (Continued)

Parameter	Parameter Number	Default	Page Number
Aztec	574	Enable	12-76
Aztec Inverse	589	Autodetect	12-76
Symbology - Specific Security Levels			
Redundancy Level	78	1	12-77
Security Levels	77	1	12-79
Intercharacter Gap Size	381	Normal	12-80
Report Version			
Report Version	N/A	None	12-80
Macro PDF			
Flush Macro PDF Buffer	N/A	None	12-81
Abort Macro PDF Entry	N/A	None	12-81

¹User selection is required to configure this interface and this is the most common selection.

APPENDIX B PROGRAMMING REFERENCE

Symbol Code Identifiers

Table B-1 *Symbol Code Characters*

Code Character	Code Type
A	UPC/EAN
B	Code 39, Code 39 Full ASCII, Code 32
C	Codabar
D	Code 128, ISBT 128, ISBT 128 Concatenated
E	Code 93
F	Interleaved 2 of 5
G	Discrete 2 of 5, or Discrete 2 of 5 IATA
H	Code 11
J	MSI
K	GS1-128
L	Bookland EAN
M	Trioptic Code 39
R	GS1 DataBar Family
S	Matrix 2 of 5
T	UCC Composite, TLC 39
U	Chinese 2 of 5
X	ISSN EAN, PDF417, Macro PDF417, MicroPDF417

Table B-1 *Symbol Code Characters (Continued)*

Code Character	Code Type
z	Aztec, Aztec Rune
P00	Data Matrix
P01	QR Code, MicroQR
P02	Maxicode
P03	US Postnet
P04	US Planet
P05	Japan Postal
P06	UK Postal
P08	Netherlands KIX Code
P09	Australia Post
P0A	USPS 4CB/One Code/Intelligent Mail
P0B	UPU FICS Postal

AIM Code Identifiers

Each AIM Code Identifier contains the three-character string **jcm** where:

- j = Flag Character (ASCII 93)
- c = Code Character (see [Table B-2](#))
- m = Modifier Character (see [Table B-3](#))

Table B-2 *Aim Code Characters*

Code Character	Code Type
A	Code 39, Code 39 Full ASCII, Code 32
C	Code 128, ISBT 128, ISBT 128 Concatenated, GS1-128, Coupon (Code 128 portion)
d	Data Matrix
E	UPC/EAN, Coupon (UPC portion)
e	GS1 DataBar Family
F	Codabar
G	Code 93
H	Code 11
I	Interleaved 2 of 5
L	PDF417, Macro PDF417, Micro PDF417
L2	TLC 39
M	MSI
Q	QR Code, MicroQR
S	Discrete 2 of 5, IATA 2 of 5
U	Maxicode
z	Aztec, Aztec Rune
X	Bookland EAN, ISSN EAN, Trioptic Code 39, Chinese 2 of 5, Matrix 2 of 5, US Postnet, US Planet, UK Postal, Japan Postal, Australia Post, Netherlands KIX Code, USPS 4CB/One Code/Intelligent Mail, UPU FICS Postal

The modifier character is the sum of the applicable option values based on [Table B-3](#).

Table B-3 *Modifier Characters*

Code Type	Option Value	Option
Code 39	0	No check character or Full ASCII processing.
	1	Reader has checked one check character.
	3	Reader has checked and stripped check character.
	4	Reader has performed Full ASCII character conversion.
	5	Reader has performed Full ASCII character conversion and checked one check character.
	7	Reader has performed Full ASCII character conversion and checked and stripped check character.
	Example: A Full ASCII bar code with check character W, A+I+MI+DW , is transmitted as J A7AIMID where 7 = (3+4).	
Trioptic Code 39	0	No option specified at this time. Always transmit 0.
	Example: A Trioptic bar code 412356 is transmitted as J X0412356.	
Code 128	0	Standard data packet, no Function code 1 in first symbol position.
	1	Function code 1 in first symbol character position.
	2	Function code 1 in second symbol character position.
	Example: A Code (EAN) 128 bar code with Function 1 character ^{FNC1} in the first position, AIMID is transmitted as J C1AIMID.	
I 2 of 5	0	No check digit processing.
	1	Reader has validated check digit.
	3	Reader has validated and stripped check digit.
	Example: An I 2 of 5 bar code without check digit, 4123, is transmitted as J I04123.	
Codabar	0	Standard Codabar.
	1	ABC Codabar.
	3	Reader has stripped check digit before transmission.
	Example: A Codabar bar code without check digit, 4123, is transmitted as J F04123	
Code 93	0	No options specified at this time. Always transmit 0.
	Example: A Code 93 bar code 012345678905 is transmitted as J G0012345678905.	
MSI	0	Check digits are sent.
	1	No check digit is sent.
	Example: An MSI bar code 4123, with a single check digit checked, is transmitted as J M14123.	

Table B-3 *Modifier Characters (Continued)*

Code Type	Option Value	Option
D 2 of 5	0	No options specified at this time. Always transmit 0.
		Example: A D 2 of 5 bar code 4123, is transmitted as JS0 4123
UPC/EAN	0	Standard packet in full EAN country code format, which is 13 digits for UPC-A, UPC-E, and EAN-13 (not including supplemental data).
	1	Two-digit supplement data only.
	2	Five-digit supplement data only.
	3	Combined data packet comprising 13 digits from a UPC-A, UPC-E, or EAN-13 symbol and 2 or 5 digits from a supplemental symbol.
	4	EAN-8 data packet.
		Example: A UPC-A bar code 012345678905 is transmitted as JE000 12345678905.
Bookland EAN	0	No options specified at this time. Always transmit 0.
		Example: A Bookland EAN bar code 123456789X is transmitted as JX0 123456789X.
ISSN EAN	0	No options specified at this time. Always transmit 0.
		Example: An ISSN EAN bar code 123456789X is transmitted as JX0 123456789X
Code 11	0	Single check digit
	1	Two check digits
	3	Check characters validated but not transmitted.
		Example: A Code 11 bar code 12345678901, with one check digit enabled and transmit check digit enabled, is transmitted as JH0 12345678901.
GS1 DataBar Family		No option specified at this time. Always transmit 0. GS1 DataBar Omnidirectional and GS1 DataBar Limited transmit with an Application Identifier "01". Note: In GS1-128 emulation mode, GS1 DataBar is transmitted using Code 128 rules (i.e., JC1).
		Example: A GS1 DataBar Omnidirectional bar code 0110012345678902 is transmitted as Je001 10012345678902.

Table B-3 *Modifier Characters (Continued)*

Code Type	Option Value	Option
EAN.UCC Composites (GS1 DataBar, GS1-128, 2D portion of UPC composite)		Native mode transmission. Note: UPC portion of composite is transmitted using UPC rules.
	0	Standard data packet.
	1	Data packet containing the data following an encoded symbol separator character.
	2	Data packet containing the data following an escape mechanism character. The data packet does not support the ECI protocol.
	3	Data packet containing the data following an escape mechanism character. The data packet supports the ECI protocol.
		GS1-128 emulation Note: UPC portion of composite is transmitted using UPC rules.
	1	Data packet is a GS1-128 symbol (i.e., data is preceded with]JC1).
PDF417, Micro PDF417	0	Reader set to conform to protocol defined in 1994 PDF417 symbology specifications. Note: When this option is transmitted, the receiver cannot reliably determine whether ECIs have been invoked or whether data byte 92 _{DEC} has been doubled in transmission.
	1	Reader set to follow the ECI protocol (Extended Channel Interpretation). All data characters 92 _{DEC} are doubled.
	2	Reader set for Basic Channel operation (no escape character transmission protocol). Data characters 92 _{DEC} are not doubled. Note: When decoders are set to this mode, unbuffered Macro symbols and symbols requiring the decoder to convey ECI escape sequences cannot be transmitted.
	3	The bar code contains a GS1-128 symbol, and the first code word is 903-907, 912, 914, 915.
	4	The bar code contains a GS1-128 symbol, and the first code word is in the range 908-909.
	5	The bar code contains a GS1-128 symbol, and the first code word is in the range 910-911.
		Example: A PDF417 bar code ABCD, with no transmission protocol enabled, is transmitted as]L2ABCD.
Data Matrix	0	ECC 000-140, not supported.
	1	ECC 200.
	2	ECC 200, FNC1 in first or fifth position.
	3	ECC 200, FNC1 in second or sixth position.
	4	ECC 200, ECI protocol implemented.
	5	ECC 200, FNC1 in first or fifth position, ECI protocol implemented.
	6	ECC 200, FNC1 in second or sixth position, ECI protocol implemented.

Table B-3 *Modifier Characters (Continued)*

Code Type	Option Value	Option
MaxiCode	0	Symbol in Mode 4 or 5.
	1	Symbol in Mode 2 or 3.
	2	Symbol in Mode 4 or 5, ECI protocol implemented.
	3	Symbol in Mode 2 or 3, ECI protocol implemented in secondary message.
QR Code	0	Model 1 symbol.
	1	Model 2 / MicroQR symbol, ECI protocol not implemented.
	2	Model 2 symbol, ECI protocol implemented.
	3	Model 2 symbol, ECI protocol not implemented, FNC1 implied in first position.
	4	Model 2 symbol, ECI protocol implemented, FNC1 implied in first position.
	5	Model 2 symbol, ECI protocol not implemented, FNC1 implied in second position.
	6	Model 2 symbol, ECI protocol implemented, FNC1 implied in second position.
Aztec	0	Aztec symbol.
	C	Aztec Rune symbol.

APPENDIX C SAMPLE BAR CODES

UPC-A



UPC-E



UPC-E1



EAN-13



EAN-8



Code 39



Trioptic Code 39



Code 93



Code 11



Code 128



Codabar



MSI



Interleaved 2 of 5




PDF417



Data Matrix



Maxicode

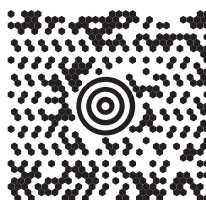

QR Code



US Postnet



 
UK Postal



APPENDIX D NUMERIC BAR CODES

Numeric Bar Codes

For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).



0



1



2

Numeric Bar Codes (continued)

For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).



3



4



5



6



7

Numeric Bar Codes (continued)

For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).



8



9

Cancel

 
In case of an error or to change the selection, scan the bar code below.




Cancel

APPENDIX E ALPHANUMERIC BAR CODES

Alphanumeric Keyboard



Space

 

#



\$



%

Alphanumeric Keyboard (continued)



 
*




+




-




.

 


/

 

!

 Alphanumeric Keyboard (continued)

 “



&



’



(



)

 


:

Alphanumeric Keyboard (continued)




;



<



 
=



>



 ?



@

Alphanumeric Keyboard (continued)



 
[



\




]



^



 
_




~

Alphanumeric Keyboard (continued)

 ✓ **NOTE** Do not confuse the bar codes that follow with those on the numeric keypad.




0

 

1



 2




3



4

 
Alphanumeric Keyboard (continued)



5



 6



7



8



9



End of Message

 


Cancel

Alphanumeric Keyboard (continued)




A



B



 
C



D




 E



F

 
Alphanumeric Keyboard (continued)




G



 H



I

 

J



K



L

Alphanumeric Keyboard (continued)



 
M




N




O



P

 

Q

 

R

 
Alphanumeric Keyboard (continued)



S




T



U



 V



W



X

 
Alphanumeric Keyboard (continued)




Y



Z




a

 


b



 c




d

 Alphanumeric Keyboard (continued)

e



 f



g



h



i

 


j


Alphanumeric Keyboard (continued)




k




l

 

m

 

n

 

o



p

 
Alphanumeric Keyboard (continued)



q




r



s



 t



u

 


v

Alphanumeric Keyboard (continued)




w




x



 
y



z

 

{

 

|

Alphanumeric Keyboard (continued)



}



~

APPENDIX F ASCII CHARACTER SETS

Table F-1 ASCII Value Standard Default Parameters Table

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1000	%U	CTRL 2
1001	\$A	CTRL A
1002	\$B	CTRL B
1003	\$C	CTRL C
1004	\$D	CTRL D
1005	\$E	CTRL E
1006	\$F	CTRL F
1007	\$G	CTRL G
1008	\$H	CTRL H/ BACKSPACE ¹
1009	\$I	CTRL I/ HORIZONTAL TAB ¹
1010	\$J	CTRL J
1011	\$K	CTRL K
1012	\$L	CTRL L
1013	\$M	CTRL M/ ENTER ¹
1014	\$N	CTRL N
1015	\$O	CTRL O

The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table F-1 ASCII Value Standard Default Parameters Table (Continued)

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1016	\$P	CTRL P
1017	\$Q	CTRL Q
1018	\$R	CTRL R
1019	\$S	CTRL S
1020	\$T	CTRL T
1021	\$U	CTRL U
1022	\$V	CTRL V
1023	\$W	CTRL W
1024	\$X	CTRL X
1025	\$Y	CTRL Y
1026	\$Z	CTRL Z
1027	%A	CTRL [
1028	%B	CTRL \
1029	%C	CTRL]
1030	%D	CTRL 6
1031	%E	CTRL -
1032	Space	Space
1033	/A	!
1034	/B	"
1035	/C	#
1036	/D	?
1037	/E	%
1038	/F	&
1039	/G	'
1040	/H	(
1041	/I)
1042	/J	*
1043	/K	+
1044	/L	,

The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table F-1 ASCII Value Standard Default Parameters Table (Continued)

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1045	-	-
1046	.	.
1047	/o	/
1048	0	0
1049	1	1
1050	2	2
1051	3	3
1052	4	4
1053	5	5
1054	6	6
1055	7	7
1056	8	8
1057	9	9
1058	/Z	:
1059	%F	;
1060	%G	<
1061	%H	=
1062	%I	>
1063	%J	?
1064	%V	@
1065	A	A
1066	B	B
1067	C	C
1068	D	D
1069	E	E
1070	F	F
1071	G	G
1072	H	H
1073	I	I

The keystroke in bold is sent only if the “Function Key Mapping” is enabled. Otherwise, the unbolded keystroke is sent.

Table F-1 ASCII Value Standard Default Parameters Table (Continued)

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1074	J	J
1075	K	K
1076	L	L
1077	M	M
1078	N	N
1079	O	O
1080	P	P
1081	Q	Q
1082	R	R
1083	S	S
1084	T	T
1085	U	U
1086	V	V
1087	W	W
1088	X	X
1089	Y	Y
1090	Z	Z
1091	%K	[
1092	%L	\
1093	%M]
1094	%N	^
1095	%O	_
1096	%W	'
1097	+A	a
1098	+B	b
1099	+C	c
1100	+D	d
1101	+E	e
1102	+F	f

The keystroke in bold is sent only if the "Function Key Mapping" is enabled. Otherwise, the unbolded keystroke is sent.

Table F-1 ASCII Value Standard Default Parameters Table (Continued)

ASCII Value	Full ASCII Code 39 Encode Character	Keystroke
1103	+G	g
1104	+H	h
1105	+I	i
1106	+J	j
1107	+K	k
1108	+L	l
1109	+M	m
1110	+N	n
1111	+O	o
1112	+P	p
1113	+Q	q
1114	+R	r
1115	+S	s
1116	+T	t
1117	+U	u
1118	+V	v
1119	+W	w
1120	+X	x
1121	+Y	y
1122	+Z	z
1123	%P	{
1124	%Q	
1125	%R	}
1126	%S	~

The keystroke in bold is sent only if the “Function Key Mapping” is enabled. Otherwise, the unbolded keystroke is sent.

Table F-2 *ALT Key Standard Default Tables*

ALT Keys	Keystroke
2064	ALT 2
2065	ALT A
2066	ALT B
2067	ALT C
2068	ALT D
2069	ALT E
2070	ALT F
2071	ALT G
2072	ALT H
2073	ALT I
2074	ALT J
2075	ALT K
2076	ALT L
2077	ALT M
2078	ALT N
2079	ALT O
2080	ALT P
2081	ALT Q
2082	ALT R
2083	ALT S
2084	ALT T
2085	ALT U
2086	ALT V
2087	ALT W
2088	ALT X
2089	ALT Y
2090	ALT Z

Table F-3 *Misc. Key Standard Default Table*

Misc. Key	Keystroke
3001	PA 1
3002	PA 2
3003	CMD 1
3004	CMD 2
3005	CMD 3
3006	CMD 4
3007	CMD 5
3008	CMD 6
3009	CMD 7
3010	CMD 8
3011	CMD 9
3012	CMD 10
3013	CMD 11
3014	CMD 12
3015	CMD 13
3016	CMD 14

Table F-4 *GUI Shift Keys*

Other Value	Keystroke
3048	GUI 0
3049	GUI 1
3050	GUI 2
3051	GUI 3
3052	GUI 4
3053	GUI 5
3054	GUI 6
3055	GUI 7
3056	GUI 8
3057	GUI 9

The Apple™ iMac keyboard has an apple key on either side of the space bar. Windows-based systems have a GUI key to the left of the left ALT key, and to the right of the right ALT key.

Table F-4 GUI Shift Keys (Continued)

Other Value	Keystroke
3065	GUI A
3066	GUI B
3067	GUI C
3068	GUI D
3069	GUI E
3070	GUI F
3071	GUI G
3072	GUI H
3073	GUI I
3074	GUI J
3075	GUI K
3076	GUI L
3077	GUI M
3078	GUI N
3079	GUI O
3080	GUI P
3081	GUI Q
3082	GUI R
3083	GUI S
3084	GUI T
3085	GUI U
3086	GUI V
3087	GUI W
3088	GUI X
3089	GUI Y
3090	GUI Z

The Apple™ iMac keyboard has an apple key on either side of the space bar. Windows-based systems have a GUI key to the left of the left ALT key, and to the right of the right ALT key.

Table F-5 *PF Key Standard Default Table*

PF Keys	Keystroke
4001	PF 1
4002	PF 2
4003	PF 3
4004	PF 4
4005	PF 5
4006	PF 6
4007	PF 7
4008	PF 8
4009	PF 9
4010	PF 10
4011	PF 11
4012	PF 12
4013	PF 13
4014	PF 14
4015	PF 15
4016	PF 16

Table F-6 *F key Standard Default Table*

F Keys	Keystroke
5001	F 1
5002	F 2
5003	F 3
5004	F 4
5005	F 5
5006	F 6
5007	F 7
5008	F 8
5009	F 9
5010	F 10
5011	F 11

Table F-6 *F key Standard Default Table (Continued)*

F Keys	Keystroke
5012	F 12
5013	F 13
5014	F 14
5015	F 15
5016	F 16
5017	F 17
5018	F 18
5019	F 19
5020	F 20
5021	F 21
5022	F 22
5023	F 23
5024	F 24

Table F-7 *Numeric Key Standard Default Table*

Numeric Keypad	Keystroke
6042	*
6043	+
6044	Undefined
6045	-
6046	.
6047	/
6048	0
6049	1
6050	2
6051	3
6052	4
6053	5
6054	6
6055	7
6056	8

Table F-7 *Numeric Key Standard Default Table (Continued)*

Numeric Keypad	Keystroke
6057	9
6058	Enter
6059	Num Lock

Table F-8 *Extended Keypad Standard Default Table*

Extended Keypad	Keystroke
7001	Break
7002	Delete
7003	Pg Up
7004	End
7005	Pg Dn
7006	Pause
7007	Scroll Lock
7008	Backspace
7009	Tab
7010	Print Screen
7011	Insert
7012	Home
7013	Enter
7014	Escape
7015	Up Arrow
7016	Dn Arrow
7017	Left Arrow
7018	Right Arrow

APPENDIX G SIGNATURE CAPTURE CODE

Introduction

CapCode, a signature capture code, is a special pattern that encloses a signature area on a document and allows a digital scanner to capture a signature.

There are several accepted patterns that allow automatic identification of different signatures on the same form. For example, on the federal tax return 1040 form there are three signature areas, one each for two joint filers, and one for a professional preparer. By using different patterns, a program can correctly identify all three, so they can be captured in any sequence and still be identified correctly.

Code Structure

Signature Capture Area

A CapCode is printed as two identical patterns on either side of a signature capture box, as shown in [Figure G-1](#). Each pattern extends the full height of the signature capture box.

The box is optional, so you can omit it, replace it with a single baseline, or print a baseline with an "X" on top of it towards the left, as is customarily done in the US to indicate a request for signature. However, if an "X" or other markings are added in the signature box area, these are captured with the signature.



Figure G-1 CapCode

CapCode Pattern Structure

A CapCode pattern structure consists of a start pattern followed by a separator space, a signature capture box, a second separator space, and then a stop pattern. Assuming that X is the dimension of the thinnest element, the start and stop patterns each contains 9X total width in 4 bars and 3 spaces. A 7X quiet zone is required to the left and to the right of the CapCode pattern.

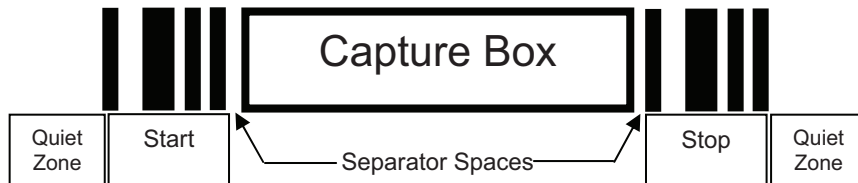


Figure G-2 CapCode Structure

The separator spaces on either side of the signature capture box can be between 1X and 3X wide.

Start / Stop Patterns

[Table G-1](#) lists the accepted start / stop patterns. The bar and space widths are expressed as multiples of X. You must use the same pattern on either side of a signature capture box. The type value is reported with the captured signature to indicate the purpose of the signature captured.

Table G-1 Start / Stop Pattern Definitions

Bar/Space Patterns							Type
B	S	B	S	B	S	B	
1	1	2	2	1	1	1	2
1	2	2	1	1	1	1	5
2	1	1	2	1	1	1	7
2	2	1	1	1	1	1	8
3	1	1	1	1	1	1	9

[Table G-2](#) lists selectable parameters used to generate the image of the captured signature.

Table G-2 *User Defined CapCode Parameters*

Parameter	Defined
Width	Number of pixels
Height	Number of pixels
Format	JPEG, BMP, TIFF
JPEG quality	1 (most compression) to 100 (best quality)
Bits Per Pixel (not applicable to JPEG format)	1 (2 levels)
	4 (16 levels)
	8 (256 levels)

BMP format does not use compression, JPEG and TIFF formats do.

Dimensions

The size of the signature capture box is determined by the height and separation of the start and stop patterns. The line width of the signature capture box is insignificant.

The thinnest element width, referred to here as X, is nominally 10 mils (1 mil = 0.0254 mm). Select this as an exact multiple of the pixel pitch of the printer used. For example, when using a 203 DPI (dots-per-inch) printer and printing 2 dots per module, the resulting X dimension is 9.85 mils.

Data Format

The digital scanner output is formatted according to [Table G-3](#). Symbol digital scanners allow different user options to output or inhibit bar code type. Selecting "Symbol ID" as the bar code type for output identifies the CapCode with letter "i".

Table G-3 *Data Format*

File Format (1 byte)	Type (1 byte)	Image Size (4 bytes, BIG Endian)	Image Data
JPEG - 1 BMP - 3 TIFF - 4	See Table G-1 , last column		(Same bytes as in a data file)

Additional Capabilities

Regardless of how the signature is captured, the output signature image is de-skewed and right-side up.

A digital scanner that captures signatures automatically determines whether it is scanning a signature or a bar code. You can disable the signature capturing capability in a digital scanner.


Signature Boxes

Figure G-3 illustrates the five acceptable signature boxes:


Type 2:



 
Type 5:



Type 7:

 

Type 8:

 

Type 9:



Figure G-3 *Acceptable Signature Boxes*

INDEX

Numerics

123Scan2	13-1
2D bar codes	
aztec	12-76
aztec inverse	12-76
code 128 emulation	12-72
data matrix	12-73
data matrix inverse	12-73
maxicode	12-74
microPDF417	12-71
microQR	12-75
PDF417	12-71
QR code	12-74
QR inverse	12-75

A

ADF	14-1
advanced data formatting	14-1
AIM code identifiers	B-3
aiming options	
snapshot aiming pattern	6-7
snapshot mode timeout	6-7
aiming pattern	2-6, 6-7
orientation	2-6, 2-7
aiming tips	2-6
ASCII character set	8-13, 9-18, 10-18
ASCII values	9-18
standard defaults	F-1
authentication	4-2, 4-28, A-2
auto-reconnect	4-4, 4-15, 4-20, 4-25

B

bar codes	
Android HID feature	4-8

Apple iOS HID feature	4-8
Australia post	12-63
authentication	4-28
auto-reconnect in bluetooth keyboard	
emulation (HID slave) mode	4-17
auto-reconnect interval	4-15
aztec	12-76
aztec inverse	12-76
batch mode	5-13, 5-14
beep after good decode	5-5
beep on insertion	5-9
beeper tone	5-7
beeper volume	5-8, 5-9
bits per pixel	6-16, 6-19
bluetooth friendly name	4-7
bookland EAN	12-9
bookland ISBN	12-21
cancel	D-3
Chinese 2 of 5	12-55
codabar	12-47
codabar CLSI editing	12-49
codabar lengths	12-47
codabar NOTIS editing	12-49
codabar start and stop characters	12-50
code 11	12-38
code 11 lengths	12-38
code 128	12-25
code 128 emulation	12-72
code 128 lengths	12-25
code 39	12-30
code 39 check digit verification	12-34
code 39 full ASCII	12-35
code 39 lengths	12-32
code 39 transmit check digit	12-34
code 93	12-36
code 93 lengths	12-36
composite CC-A/B	12-68

- composite CC-C 12-68
- composite TLC-39 12-69
- connection maintenance interval 4-25
- continuous bar code read 5-22
- convert case 4-14
- convert GS1 databar to UPC/EAN 12-67
- convert UPC-E to UPC-A 12-20
- convert UPC-E1 to UPC-A 12-20
- crop to address 6-9
- data matrix 12-73
- data matrix inverse 12-73
- decode aiming pattern 5-26
- decode mirror images 5-25
- decode session timeout 5-23
- default table 6-2
- direct part marking 5-18, 5-19
- discoverable mode 4-7
- discrete 2 of 5 12-45
- discrete 2 of 5 lengths 12-45
- DPM 5-18, 5-19
- dump scanner parameters 5-47
- EAN zero extend 12-21
- EAN-13/JAN-13 12-9
- EAN-8/JAN-8 12-8
- encryption 4-30
- flush macro buffer/abort macro PDF entry 12-81
- FN1 substitution values 5-44
- focus mode 5-30
- fuzzy 1D processing 5-24
- GS1 databar 12-65
- GS1 databar expanded 12-67
- GS1 databar limited 12-65
- GS1 databar-14 12-65
- GS1-128 12-27
- HID CAPS lock override 4-11
- HID country keyboard types 4-9
- HID emulate keypad 4-12
- HID function key mapping 4-13
- HID host 4-8
- HID ignore unknown characters 4-12
- HID keyboard FN1 substitution 4-13
- HID keyboard keystroke delay 4-11
- I 2 of 5 check digit verification 12-43
- I 2 of 5 convert to EAN-13 12-44
- I 2 of 5 transmit check digit 12-43
- IBM 468X/469X 11-4
 - convert unknown to code 39 11-4
 - default parameters 11-3
 - ignore bar code configuration 11-5
 - ignore beep 11-5
 - port address 11-4
- illumination 5-27, 5-28, 6-5
- image brightness (target white) 6-11
- image cropping 6-8
- image enhancement 6-13
- image file format 6-14, 6-18
- image resolution 6-10
- image rotation 6-15
- intercharacter gap size 12-80
- interleaved 2 of 5 12-41
 - convert to EAN-13 12-44
- inverse 1D 12-59
- ISBT 128 12-27
- ISBT concatenation 12-28, 12-29
- ISBT concatenation redundancy 12-29
- ISSN EAN 12-24
- Japan postal 12-62
- JPEG image options 6-11
- JPEG quality 6-12
- JPEG target file size 6-12
- keyboard wedge 8-4
 - alternate numeric
 - keypad emulation 8-8
 - caps lock on 8-9
 - caps lock override 8-9
 - convert wedge data 8-10
 - country keyboard types 8-5
 - default table 8-3
 - FN1 substitution 8-11
 - function key mapping 8-10
 - host types 8-4
 - ignore unknown characters 8-7
 - intra-keystroke delay 8-8
 - keystroke delay 8-7
 - send make and break 8-11
- Korean 3 of 5 12-58
- lock override 4-21
- low exposure priority for
 - snapshot mode 6-6
- low gain priority for snapshot mode 6-6
- matrix 2 of 5 12-55
- matrix 2 of 5 check digit 12-57
- matrix 2 of 5 lengths 12-56
- maxicode 12-74
- microPDF417 12-71
- microQR 12-75
- mobile phone/display mode 5-20
- MSI 12-51
- MSI check digit algorithm 12-54
- MSI check digits 12-53
- MSI lengths 12-51
- MSI transmit check digit 12-53
- multicode concatenation symbology 5-38
- multicode mode 5-29, 5-31, 5-32
- multicode mode concatenation 5-37
- multicode troubleshooting 5-39
- Netherlands KIX code 12-63
- pager motor 5-10

- pager motor duration 5-10
- pairing modes 4-21
- parameter broadcast 4-20
- parameter scanning 5-5
- PDF prioritization 5-21
- PDF prioritization timeout 5-21
- PDF417 12-71
- PIN code 4-29
- postal 12-60
- prefix/suffix values 5-42
- QR code 12-74
- QR inverse 12-75
- radio communication 4-4, 4-5
 - host types 4-4, 4-5
 - pairing 4-20
- radio output power 4-20
- reconnect attempt beep 4-15
- reconnect attempt interval 4-16
- redundancy level 12-77
- RS-232 9-6
 - baud rate 9-7
 - beep on BEL 9-15
 - beep on bel 9-15
 - check receive errors 9-8
 - data bits 9-9
 - default table 9-3
 - hardware handshaking 9-10
 - host serial response time-out 9-14
 - host types 9-6
 - ignore unknown characters 9-18
 - intercharacter delay 9-16
 - Nixdorf mode 9-17
 - parity 9-8
 - RTS line state 9-15
 - software handshaking 9-12
 - stop bits 9-9
- sample C-1
- scan data options 5-42
- scanner to cradle support 4-19
- secure simple pairing IO capability 4-31
- security level 12-79
- set defaults 5-4
- signature capture 6-17
- signature capture height 6-20
- signature capture JPEG quality 6-20
- signature capture width 6-20
- simulated caps lock 4-14
- snapshot aiming pattern 6-7
- snapshot mode timeout 6-7
- supplementals 12-10
- suppress power up beeps 5-6
- symbolologies
 - default table 12-2
 - GS1 DataBar limited 12-66
- time delay to reduced power mode 5-15
- timeout between decodes,
 - same symbol 5-23
- transmit code ID character 5-41
- transmit matrix 2 of 5 check digit 12-57
- transmit no read message 5-45
- transmit UK postal check digit 12-62
- transmit US postal check digit 12-61
- trigger mode 5-12
- trigger modes 5-17
- UCC coupon extended code 12-22
- UID 5-48
- UK postal 12-61
- unique bar code reporting 5-22
- unpair 4-22
- unsolicited heartbeat interval 5-46
- UPC composite mode 12-69
- UPC/EAN/JAN
 - supplemental AIM ID format 12-15
 - supplemental redundancy 12-14
- UPC-A 12-7
- UPC-A preamble 12-17
- UPC-A/E/E1 check digit 12-16, 12-17
- UPC-E 12-7
- UPC-E preamble 12-18
- UPC-E1 12-8
- UPU FICS postal 12-64
- US planet 12-60
- US postnet 12-60
- USB 10-5
 - caps lock override 10-10
 - convert case 10-14
 - country keyboard types 10-7
 - default table 10-4
 - device type 10-5, 10-6
 - emulate keypad 10-11
 - function key mapping 10-13
 - keyboard FN 1 substitution 10-12
 - keystroke delay 10-9
 - optional parameters 10-17
 - polling interval 10-15, 10-16
 - quick emulation 10-12
 - simulated caps lock 10-13
 - SNAPI handshaking 10-9
 - static CDC 10-14
 - unknown characters 10-10
- USPS 4CB/one code/intelligent mail 12-64
- variable PIN code 4-29
- batch mode 5-13
 - bar codes 5-14
 - stored data 5-13
- battery
 - charging 1-8
 - charging problems 1-8

- inserting 1-7
- removing 1-7
- beeper definitions 2-1
 - pairing 4-3
 - wireless 4-3
- bluetooth 1-2, 1-10
 - friendly name 4-7
 - HID profile 4-6
 - keyboard emulation 4-4, 4-8
 - master/slave setup 4-6
 - pairing 4-6
 - security 4-28
 - serial port profile 4-6

C

- cables
 - installing 1-5
- character set 9-18, 10-18, F-1
- charging 1-8
 - LEDs 1-8
 - problems 1-8
 - via USB 1-6
- Chinese 2 of 5 12-55
- cleaning 3-1
- codabar bar codes 12-47
 - CLSI editing 12-49
 - lengths 12-47
 - NOTIS editing 12-49
 - start and stop characters 12-50
- code 11 bar codes 12-38
 - lengths 12-38
- code 128 bar codes
 - code 128 12-25
 - emulation 12-72
 - GS1-128 12-27
 - ISBT 128 12-27
 - ISBT concatenation 12-28, 12-29
 - ISBT concatenation redundancy 12-29
 - lengths 12-25
- code 39 bar codes
 - check digit verification 12-34
 - code 39 12-30
 - full ASCII 12-35
 - lengths 12-32
 - transmit check digit 12-34
- code 93 bar codes
 - code 93 12-36
 - lengths 12-36
- code ID character 5-41
- code identifiers
 - AIM code identifiers B-3
 - symbol code identifiers B-1
- composite bar codes

- composite CC-A/B 12-68
- composite CC-C 12-68
- composite TLC-39 12-69
 - UPC composite mode 12-69
- configurations xv
- configuring scanner 1-10
- connecting
 - bluetooth 4-6
 - IBM host 11-2
 - keyboard wedge 8-2
 - lost connection 1-10
 - pairing 4-20
 - RS-232 9-2
 - USB 10-2
- conventions
 - notational xvi
- cradle 1-2
 - connecting 1-5
 - diagram 1-4
 - ethernet communicaitons 1-10
 - FLB3508 1-2, 1-6
 - FLB3578 1-2, 1-6, 1-9
 - inserting scanner 1-8
 - mounting 1-6
 - pinouts 3-9
 - STB3508 1-2, 1-5
 - STB3574 1-2, 1-5, 1-10
 - STB3578 1-2, 1-3, 1-5, 1-9
 - supply power 1-6
- cropping 6-8, 6-9

D

- data matrix bar codes 12-73
- databar bar codes 12-65
 - convert GS1 databar to UPC/EAN 12-67
 - GS1 databar expanded 12-67
- decode zone 2-8
- default parameters
 - IBM 468X/469X 11-3
 - imaging preferences 6-2
 - keyboard wedge 8-3
 - radio communication 4-2
 - RS-232 9-3
 - setting 5-4
 - standard default table A-1, F-1
 - symbologies 12-2
 - USB 10-4
- direct part marking 2-6
 - bar codes 5-18, 5-19
 - scanning 2-6
- discrete 2 of 5 bar codes 12-45
 - lengths 12-45
- DPM 2-6

- bar codes 5-18, 5-19
 - scanning 2-6
- E**
- encryption 4-3, 4-30, A-2
 - error indications
 - miscellaneous scanner options 4-1
 - exposure options
 - gain / exposure priority for snapshot mode 6-6
 - illumination 5-27, 5-28, 6-5
- F**
- FLB3508 cradle 1-2, 1-6
 - FLB3578 cradle 1-2, 1-6, 1-9
- G**
- gain / exposure priority for snapshot mode 6-6
 - GS1 databar bar codes 12-65
 - convert GS1 databar to UPC/EAN 12-67
 - GS1 databar expanded 12-67
- H**
- HID profile 4-6
 - HID slave 4-4
 - host types
 - IBM 468X/469X 11-4
 - keyboard wedge 8-4
 - RS-232 9-6
 - USB 10-5
- I**
- IBM 468X/469X
 - connection 11-2
 - default parameters 11-3
 - parameters 11-4
 - illumination 5-27, 5-28, 6-5
 - image brightness (target white) 6-11
 - image cropping 6-8, 6-9
 - image enhancement 6-13
 - image options
 - bits per pixel 6-16
 - cropping 6-8, 6-9
 - file formats 6-14, 6-18
 - image brightness (target white) 6-11
 - image enhancement 6-13
 - image resolution 6-10
 - image rotation 6-15
 - JPEG image options 6-11
 - JPEG quality 6-12
 - JPEG target file size 6-12
 - image resolution 6-10
 - imaging preferences parameters 6-2
 - inserting battery 1-7
 - interfaces supported 1-2
 - interleaved 2 of 5 bar codes 12-41
 - check digit verification 12-43
 - convert to EAN-13 12-44
 - lengths 12-41
 - transmit check digit 12-43
 - inverse 1D 12-59
- J**
- JPEG image options 6-11
 - quality 6-12
 - target file size 6-12
- K**
- keyboard maps 8-12
 - keyboard wedge
 - connection 8-2
 - default parameters 8-3
 - parameters 8-4
 - Korean 3 of 5 bar codes 12-58
- L**
- LED
 - charging 1-8
 - definitions 2-4
 - lock override 4-21
 - locked pairing mode 4-21, 4-25
 - low power mode 4-15
- M**
- macro PDF 12-81
 - flush buffer/abort PDF entry 12-81
 - maintenance 3-1
 - matrix 2 of 5 bar codes 12-55
 - check digit 12-57
 - lengths 12-56
 - transmit check digit 12-57
 - maxicode bar codes 12-74
 - microPDF417 bar codes 12-71
 - Motorola Solutions support xviii
 - mounting
 - cradle 1-6
 - MSI bar codes 12-51
 - check digit algorithm 12-54
 - check digits 12-53
 - lengths 12-51

transmit check digit 12-53
 multipoint-to-point communication 4-19

N

notational conventionsxvi

O

out of range indicator 4-18

P

pairing 1-9
 address 4-15
 bar code 4-3
 bar code format 4-23
 beeper definitions 4-3
 connection maintenance interval 4-25
 cradle host 4-4
 lock override 4-21
 master/slave setup 4-6
 methods 4-22
 modes 4-2, 4-20, A-2
 multipoint-to-point 4-19
 on contacts 4-2, A-2
 pin codes 4-29
 point-to-point 4-19
 radio communication 1-10
 SPP 4-4
 unpair 4-22
 PDF417 bar codes 12-71
 PDF prioritization 5-21
 PIN code 4-29
 static 4-29
 variable 4-29
 pinouts 3-8
 point-to-point communication 4-19
 postal codes 12-60
 Australia post 12-63
 Japan postal 12-62
 Netherlands KIX code 12-63
 transmit UK postal check digit 12-62
 transmit US postal check digit 12-61
 UK postal 12-61
 UPU FICS postal 12-64
 US planet 12-60
 US postnet 12-60
 USPS 4CB/one code/intelligent mail 12-64
 power 1-6
 via USB 1-6

Q

QR code bar codes 12-74

R

radio communication
 bar codes 4-4, 4-5
 bluetooth 1-2
 bluetooth technology profile support 1-10
 defaults 4-2
 multipoint-to-point 4-19
 pairing 1-10
 point-to-point 4-19
 reconnect attempt 4-16
 reconnect attempt beep 4-15
 range indicator 4-18
 reconnect attempt 4-16
 beep 4-15
 removing battery 1-7
 RS-232
 connection 9-2
 default parameters 9-3
 host types 9-6
 parameters 9-4

S

sample bar codes C-1
 scanner to cradle support 4-19
 scanning 2-5
 aiming 2-5
 errors 5-2, 6-2, 12-2
 radio communications
 sequence example 4-1
 sequence example 5-2, 6-2, 12-1
 secure simple pairing IO capability 4-31
 serial port profile 4-6
 master 4-4, 4-15, 4-20
 slave 4-4
 service information xviii
 setting defaults 5-4
 setup
 connecting a USB interface 10-2
 connecting an RS-232 interface 9-2
 connecting iOS or Android to scanner 4-32
 connecting keyboard wedge interface 8-2
 connecting to an IBM 468X/469X host 11-2
 cradle 1-2
 inserting scanner in cradle 1-8
 installing the cable 1-5
 lost host connection 1-10
 mounting cradle 1-6
 radio communication 4-4

- scanner 1-2
 - supplying power 1-6
 - unpacking 1-2
 - signal descriptions 3-8
 - signature capture 6-17
 - bits per pixel 6-19
 - file format selector 6-18
 - height 6-20
 - JPEG quality 6-20
 - width 6-20
 - snapshot mode timeout 6-7
 - specifications 3-5
 - SPP 4-6
 - master 4-4, 4-15, 4-20
 - slave 4-4
 - standard default parameters A-1, F-1
 - STB3508 cradle 1-2, 1-5
 - STB3574 cradle 1-2, 1-5, 1-10
 - STB3578 cradle 1-2, 1-3, 1-5, 1-9
 - stored data
 - batch mode 5-13
 - support xviii
 - symbol code identifiers B-1
 - symbology default parameters 12-2
- T**
- technical specifications 3-5
 - trigger mode 5-12
 - troubleshooting 3-2
- U**
- unlocked pairing mode 4-21
 - unpacking 1-2
 - unpairing
 - bar codes 4-22
 - UPC/EAN bar codes
 - bookland EAN 12-9
 - bookland ISBN 12-21
 - check digit 12-16, 12-17
 - convert UPC-E to UPC-A 12-20
 - convert UPC-E1 to UPC-A 12-20
 - EAN zero extend 12-21
 - EAN-13/JAN-13 12-9
 - EAN-8/JAN-8 12-8
 - ISSN EAN 12-24
 - supplementals 12-10
 - UCC coupon extended code 12-22
 - UPC-A 12-7
 - UPC-A preamble 12-17
 - UPC-E 12-7
 - UPC-E preamble 12-18
 - UPC-E1 12-8
 - USB
 - connection 10-2
 - default parameters 10-4
 - parameters 10-5

Tell Us What You Think...

We'd like to know what you think about this Manual. Please take a moment to fill out this questionnaire and fax this form to: (631) 627-7184, or mail to:

Zebra Technologies Corporation
One Zebra Plaza MS: B10
Holtsville, New York 11742
U.S.A.
Attention: Data Capture Solutions
Technical Publications Manager



Important If you need product support, please call the appropriate customer support number for your area. Unfortunately, we cannot provide customer support at the fax number above.

Manual Title: _____
(please include revision level)

How familiar were you with this product before using this manual?

- Very familiar Slightly familiar Not at all familiar

Did this manual meet your needs? If not, please explain.

What topics need to be added to the index, if applicable?

What topics do you feel need to be better discussed? Please be specific.

What can we do to further improve our manuals?

Thank you for your input—We value your comments.



Zebra Technologies Corporation, Inc.
3 Overlook Point
Lincolnshire, IL 60069, U.S.A.
<http://www.zebra.com>

Zebra and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

© 2017 Symbol Technologies LLC, a subsidiary of Zebra Technologies Corporation. All rights reserved.